

Ultimate Dual 6.5 in. 2-Way In-Wall LCR Speaker, White Textured, Single

The Crestron® [ULTIMATE IWLCR62-W-T-EACH](#) made by Origin Acoustics® delivers the pinnacle of performance for demanding residential installations. Select materials, top shelf components and a high-end appearance underscore the design behind each speaker. The result is a speaker suitable for installation in luxury residential applications, restaurants, retail spaces, universities, and office buildings.



In the Box

1 ULTIMATE IWLCR62-W-T-EACH

Additional Items

- 1 Grille
- 1 Guitar pick (To rotate the Spring Lock™ mounting clamps)
- 1 Cutout Template




Installation

Prepare the Mounting Hole

Before finalizing the speaker location, check to make sure there are no fixtures, pipes, air ducts, or other possible obstructions. If applicable, use a stud finder to locate studs.

To identify obstructions, do the following:


- Use a drywall saw to cut a small hole at a 45° angle. An angled cut simplifies repair since the removed piece can be reinserted to help plug the hole.

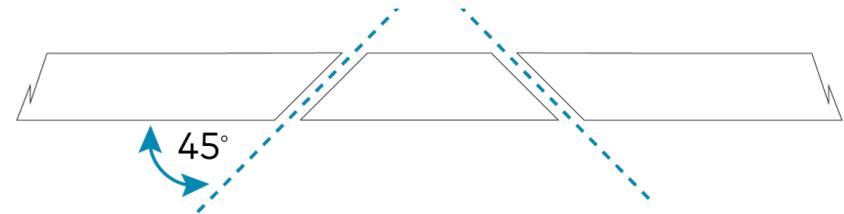

- Bend a piece of stiff cable or wire into an L shape, with one end long enough to explore an area equal to the size of the speaker with the toggle clamps extended. Insert the cable into the hole, make sure it rotates freely in a complete circle, and that there is sufficient depth.

If there are no obstructions, use the supplied template to trace an outline of the mounting hole on the wall. Cut the final mounting hole at a 90° angle to the wall.

Ultimate Dual 6.5 in. 2-Way In-Wall LCR Speaker, White Textured, Single

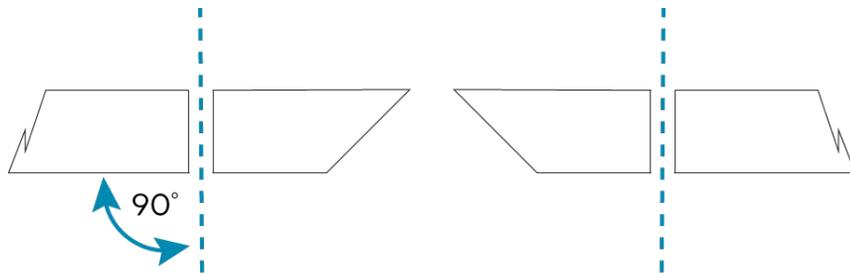

Paint the Speaker Grille

Speaker grille painting should be done prior to mounting.

1. Carefully remove the thin cloth on the inside of the grille, and set it aside for reinstallation.
2. Lightly spray paint the front of the grille from a distance. Be careful not to plug any of the holes.
3. Once the paint is dry, put the cloth back on the inside of the grille.

Install the Speaker Cable

Run the speaker cable (not included) from the audio source to the speaker location, observing all appropriate local codes. Strip the ends of the speaker cable approximately 0.25 in. to 0.50 in. (~6 mm to ~12 mm) and twist the strands.

Connect the Speaker Cable

Connect the speaker cable to the spring terminals by pressing the top of the terminals down and inserting the exposed strands into the hole. Make sure that the positive lead is attached to the red connection, and the negative lead is attached to the black connection.


Mount/Remove the Speaker

On the front panel of the speaker, make sure all the Spring Lock notches are parallel to the long side of the speaker.

1. Fit the speaker into the hole, and using the included guitar pick, turn the Spring Lock releases 90° in the same direction as the arrows.
2. Turn the each Spring Lock release until you hear its Spring Lock clamp snap down onto the wall.

NOTE: Do not overtighten the Spring Lock releases.

Turn the Spring Lock releases 90 degrees in the direction of the arrows

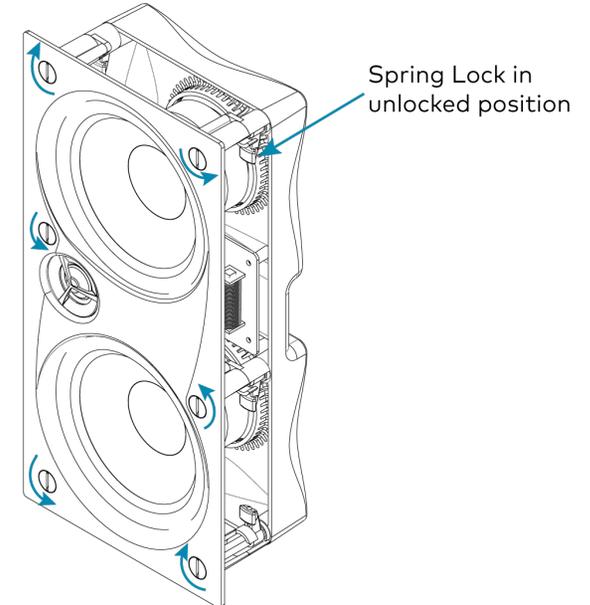

3. To remove the speaker, turn the Spring Lock releases 90° in the opposite direction of the arrows indicated. The Spring Locks will return to their unlocked position.

Ultimate Dual 6.5 in. 2-Way In-Wall LCR Speaker, White Textured, Single



Visit the Product Page

Scan the QR code to visit the product page.

ULTIMATE IWLCR62-W-T-EACH



<https://www.crestron.com/model/6511857>

Additional Information

Original Instructions

The U.S. English version of this document is the original instructions. All other languages are a translation of the original instructions.

Crestron product development software is licensed to Crestron dealers and Crestron Service Providers (CSPs) under a limited nonexclusive, nontransferable Software Development Tools License Agreement. Crestron product operating system software is licensed to Crestron dealers, CSPs, and end-users under a separate End-User License Agreement. Both of these Agreements can be found on the Crestron website at www.crestron.com/legal/software_license_agreement.

The product warranty can be found at www.crestron.com/warranty.

The specific patents that cover Crestron products are listed at www.crestron.com/legal/patents.

Certain Crestron products contain open source software. For specific information, visit www.crestron.com/opensource.

Crestron and the Crestron logo are either trademarks or registered trademarks of Crestron Electronics, Inc. in the United States and/or other countries. Origin Acoustics and Spring Lock are either trademarks or registered trademarks of Origin Acoustics, Inc. in the United States and/or other countries. Other trademarks, registered trademarks, and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Crestron disclaims any proprietary interest in the marks and names of others. Crestron is not responsible for errors in typography or photography.

©2024 Crestron Electronics, Inc.

Doc. 8978B

04/29/24