

CBD-FP-ASCENT

Ascent® Metal Faceplates for Cameo® Keypads, Standard Mount Installation Guide



Description

The Crestron® CBD-FP-ASCENT is a solid metal bezel that magnetically attaches to a separate backplate. The backplate installs in place of the plastic bezel that comes with the Cameo keypad. The CBD-FP-ASCENT models are designed for use with Cameo standard mount keypads.

For Cameo flush mount keypads, refer to the CBF-FP-ASCENT (Doc. 7146) at www.crestron.com/manuals.

NOTE: This product is compatible only with the US Cameo standard mount keypad and Cameo express standard mount keypad (model C2N-CBD-P and C2N-CBD-E respectively).

NOTE: This product is not for use with any Cameo wireless keypad, any international Cameo models, or any first-generation Cameo keypads.

NOTE: Crestron suggests using textured black buttons with all Ascent finishes; however, any color button(s) may be used.

Additional Resources

Visit the product page on the Crestron website (www.crestron.com) for additional information and the latest firmware updates. Use a QR reader application on your mobile device to scan the QR image.



Installation

 
Use the following procedure to install the faceplate on a single Cameo standard mount keypad. Refer to the illustration below.

1. Carefully position the rear mounting plate over the button caps on the rear housing assembly.

NOTE: A single button cannot be installed in the lowest position of the keypad.

2. Install and tighten the two provided #6-32 x 3/16" screws, as shown in the illustration below.
3. Place the faceplate on the rear mounting plate. The faceplate snaps into position.
4. Press each button and release to ensure that the button caps move freely.

Attaching the Faceplate

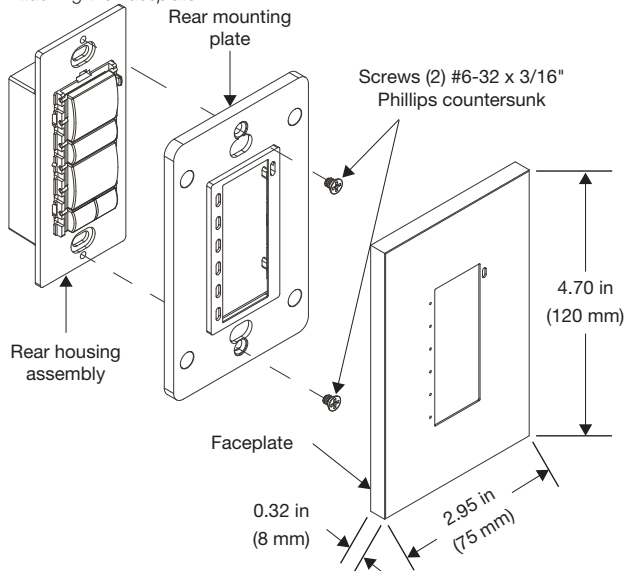


Removal

Use the following procedure to remove the faceplate from a 1-gang keypad. Refer to the illustration below.

1. Remove the faceplate from the keypad by grasping the edges of the faceplate and pulling away from the wall.

NOTE: A pry slot is also provided at the bottom of the faceplate for easy removal. Insert a small flat head screwdriver into the pry slot and rotate the screwdriver to separate the faceplate from the mounting plate, and then remove the faceplate by hand.

 Removing the Faceplate

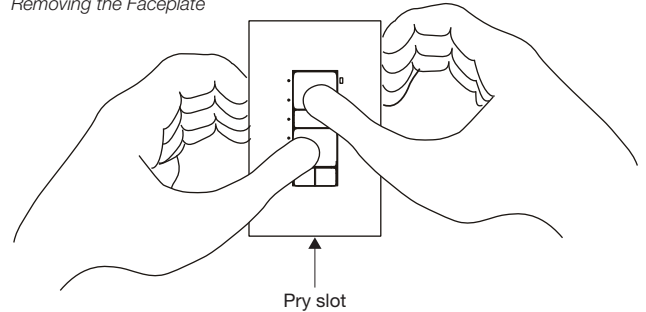

2. Unfasten the two #6-32 x 3/16" screws from the rear mounting plate.
3. Remove the rear mounting plate from the rear housing assembly.

Recommended Cleaning

Clean the faceplate according to the directions below.

NOTE: Do not use canister wipes, as they may scratch the faceplate.

Anodized Finish Care

For best cleaning results, use a clean, lint-free microfiber cloth with any commercially available nonabrasive dish soap. Dampen the cloth in a soap and water solution and wipe the plate.

Polished or Satin Finish Care

For best cleaning results, use a clean lint-free microfiber cloth with any commercially available automotive quick wax or cleaner spray. Spray the cloth and lightly buff the plate.

The product warranty can be found at www.crestron.com/warranty.

The specific patents that cover Crestron products are listed at patents.crestron.com.

Certain Crestron products contain open source software. For specific information, please visit www.crestron.com/opensource.

Crestron, the Crestron logo, Ascent, and Cameo are either trademarks or registered trademarks of Crestron Electronics, Inc. in the United States and/or other countries. Other trademarks, registered trademarks, and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Crestron disclaims any proprietary interest in the marks and names of others. Crestron is not responsible for errors in typography or photography.

This document was written by the Technical Publications department at Crestron.

©2016 Crestron Electronics, Inc.