

 
## Functional Summary

The Crestron® 1-Feed, 8-Dimmer Terminal Block and Module (CLT-1DIM8 and CLX-1DIM8, respectively), are considered a single entity and must be used together. They ship separately to permit termination of the field wiring to the CLT-1DIM8 prior to installation of the CLX-1DIM8, as described in this guide. They can be mounted in any Crestron Automation Enclosure (CAEN-Series Enclosures). The terminal block is designed to terminate the circuit feed (LINE and NEUTRAL) and distribute the controlled circuits (LOAD) to the fixtures. The module connects to the terminal block and performs dimming control of eight incandescent, magnetic low voltage, neon, cold cathode, or dimmable 2-wire fluorescent lighting loads. The maximum load is 16 amps for any controlled circuit, limited to 16 amps total per module. The unit requires 120VAC 60 Hz, 1 phase input voltage. An oversize heat sink dissipates heat efficiently. There are LEDs on the module to indicate communication to a Cresnet® network, input power to the module, and output power to the load.

**NOTE:** When connecting to an Arc Fault Breaker, the load should not exceed 1000 watts total.

## Industry Compliance

This product is Listed to applicable UL Standards and requirements by Underwriters Laboratories Inc.



## Installation

Terminal block and module must be mounted into a Crestron Automation Enclosure by a licensed electrician, in accordance with all national and local codes.


**CAUTION:** This equipment is for indoor use only and needs to be air-cooled. Mount in a well-ventilated area. The ambient temperature must be 32°F to 104°F (0°C to 40°C). The relative humidity must be 0% to 90% (non-condensing).

Terminal blocks are installed along the left side of single-wide enclosures and along the outside edges (left and right sides) of double-wide enclosures. Modules are installed along the right side of single-wide enclosures and side-by-side in the center of double-wide enclosures. When installing modules and terminal blocks in a double-wide enclosure, be sure to invert units on the right side so that they can be properly wired. Refer to the illustrations


shown below when considering the location of terminal blocks and modules within an enclosure.

**NOTE:** Modules and terminal blocks must be installed into the lowest available spaces and continue toward the top of the enclosure.

*Terminal Block & Module Locations (Single-wide Enclosure)*

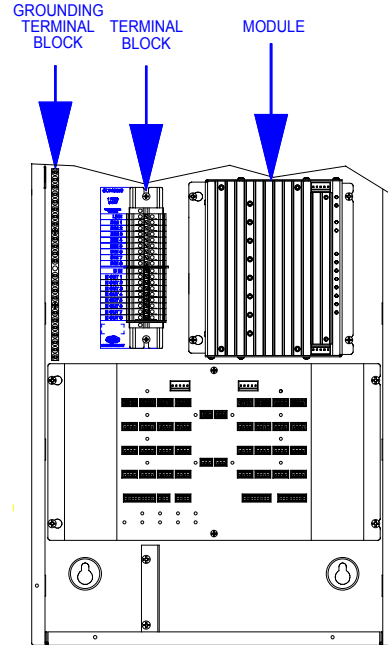

*Terminal Block & Module Locations (Double-wide Enclosure)*

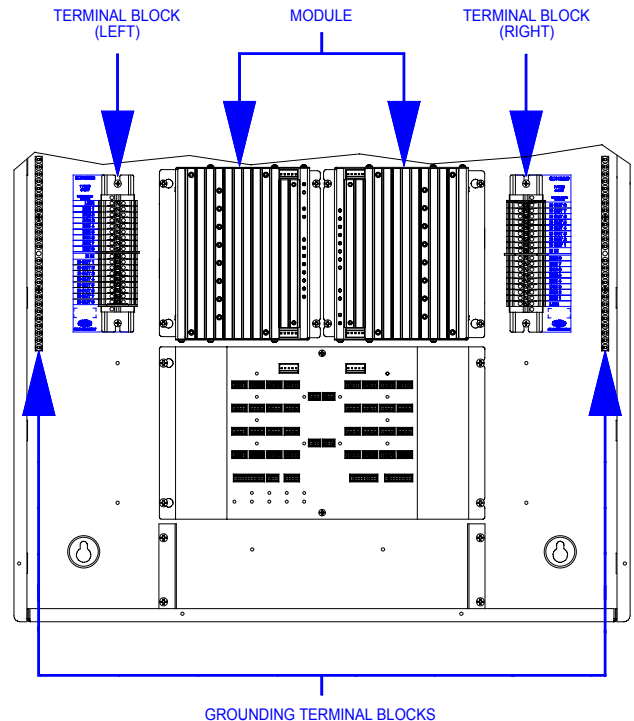

**NOTE:** Unless otherwise indicated, the lighting system specified in this guide is modular, requiring assembly in the field by a licensed electrician, in accordance with all national and local codes.

If you require an assembled UL Listed panel, Crestron offers this service through its UL Listed panel shop. This includes complete in factory system configuration and assembly by Crestron for an additional fee.

## Terminal Block Installation and Field Wiring

**NOTE:** Both left-side and right-side adhesive wiring labels are provided. The left-side labels are used in both single and double-wide enclosures. The right-side labels are only used in double-wide enclosures.

1. Remove the backing from the left or right adhesive wiring label.
2. Apply the adhesive label by aligning the holes in the label with the holes on the Crestron Automation Enclosure where the terminal block is to be mounted. The wiring label lies beneath the terminal block as shown in the two wiring diagrams on this page.
3. Use the two supplied self-tapping pan Phillips screws (8B x ¼ length) to secure the terminal block to the Crestron Automation Enclosure.

**CAUTION:** A bypass jumper is provided to allow testing and to protect the module during installation. When properly secured by nine screws, the jumper on the black and red section of the terminal block shorts the **LINE** in to **DIM** out so that the circuit is energized. Do not remove the bypass jumper until all feed and load wiring has been completed, the circuit has been tested for electrical faults, and the module has been installed. Refer to “Module Installation” on next page.


Furthermore, the jumper on the white section of the terminal block ties the neutral in to the neutral outs. This jumper should never be removed.

**NOTE:** Use copper conductors only – rated 75°C.


4. With the circuit breaker turned off, connect the circuit feed (LINE and NEUTRAL) and controlled circuit (LOAD) wires to the terminal block per the markings provided on the wiring label (as shown in the diagrams on this page). Terminal blocks accept one 14 - 10 AWG wire. Wires should be stripped to ½ inch. Tighten terminal blocks to 9 in-lbs.

5. Grounding terminal blocks are available in the cabinet for termination of ground wires. Tighten to 35 in-lbs. (14 – 10 AWG), 40 in-lbs. (8 AWG), or 45 in-lbs. (6 – 4 AWG).
6. Test the circuit for electrical faults by turning on the circuit breaker, checking that the breaker does not trip, and that power is delivered to the proper loads.

*Wiring Diagram of the Terminal Block to the Feed and Load(s) (Single-wide and Left Side Double-wide Enclosures)*

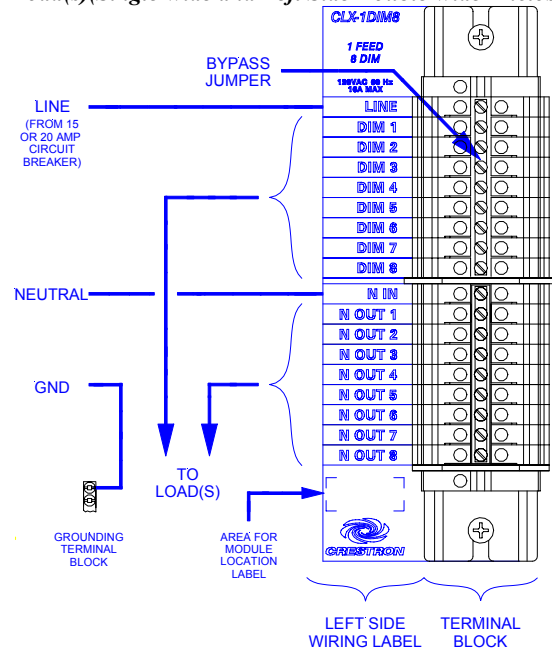

*Wiring Diagram of the Terminal Block to the Feed and Load(s) (Right Side Double-wide Enclosures)*

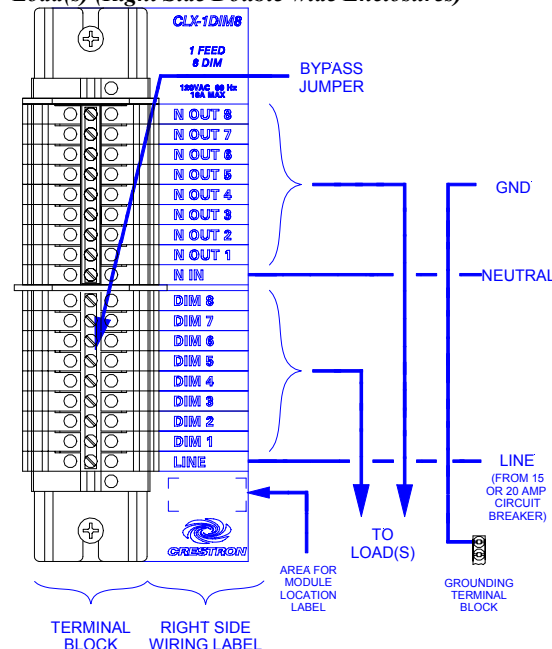

## Module Installation


**CAUTION:** Module contains electrostatic sensitive devices (ESDs); unit must be handled from metal chassis – do not touch PC board or components.

**NOTE:** Modules are to be installed after enclosure has been completely wired. Refer to the terminal block installation procedure on page 2 for details.

1. Use the four supplied self-tapping pan Phillips screws (8B x ¼ length) to secure the module to the enclosure.
2. As shown in the wiring diagrams (next column), connect the wires from the module to the terminal block. Each wire exits the module directly in line with, and is the same color as, the terminal to which it should be connected. Wires are pre-stripped to ½ inch. Tighten to 9 in-lbs.
3. If the module is being installed above another module within the enclosure, attach the supplied module interconnect cable between the two modules. The illustration below depicts the area within a double-wide enclosure where the corners of four modules meet.

**NOTE:** One wire on the module interconnect cable may be a different color from the rest. The color has no bearing on its orientation during installation.

### Use Module Interconnect Cable to Wire Module to Module

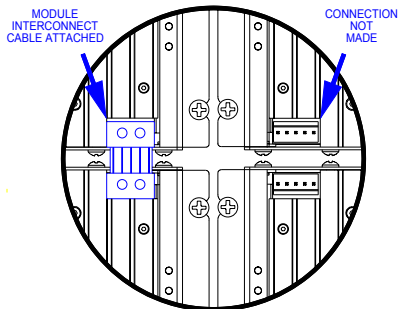


4. Turn on the circuit breaker and verify that the green **PWR** LED on the module lights, the breaker does not trip, and power is delivered to the loads.
5. Turn off the circuit breaker and remove the nine-position bypass jumper on the black and red section of the terminal block. The bypass jumper on the white section of the terminal block remains installed. Refer to the figures in the next column for a close-up of the jumpers.


**NOTE:** Before the nine-position bypass jumper, shown in the illustration, is removed, the Crestron

Professional Automation Computer (PAC2), which provides control to the system, should be properly connected and contain a valid program to provide control of the module.

### Wiring Diagram of the Terminal Block to the Module (Single-wide and Left Side Double-wide Enclosures)

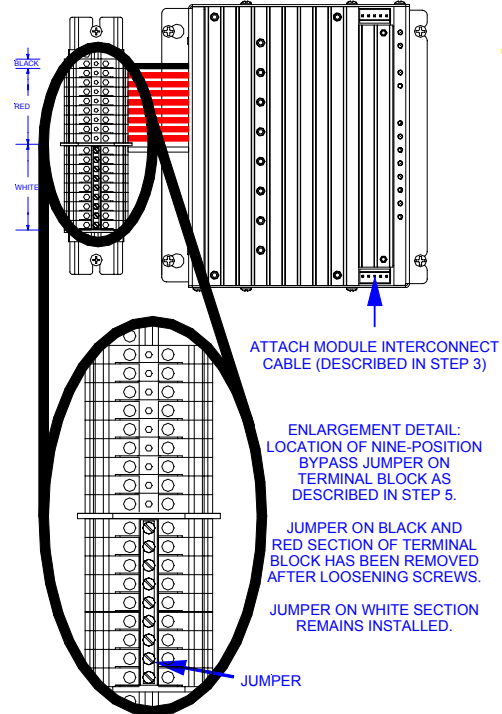

### Wiring Diagram of the Terminal Block to the Module (Right Side Double-wide Enclosures)

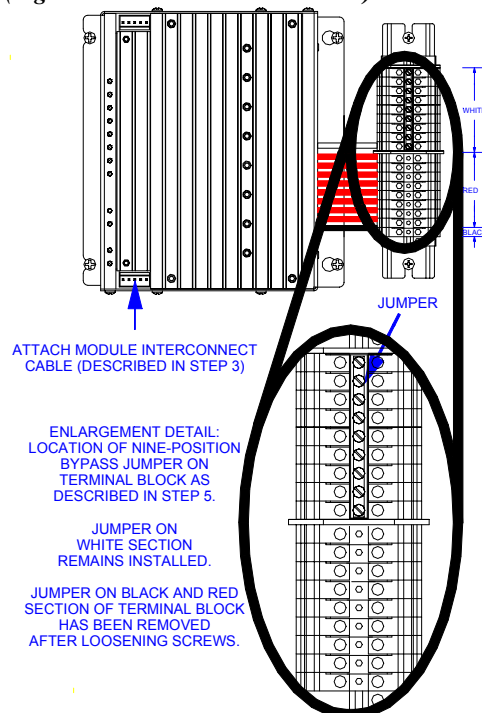

6. Turn on the circuit breaker.

---

**NOTE:** Power must be supplied to LINE for the module to communicate with the control system or for any of the circuits to operate.

---

7. If the program is not running yet, loads can be tested by using Local Mode.

Use Local Mode to verify that each load is connected to the proper output on the modules.

1. Press the **SETUP** button momentarily (less than three seconds) to enter Local Mode. The **SETUP** LED and output LED 1 illuminate and power is applied to the load connected to the **DIM1** output.
2. Press the **SETUP** button again to turn off output 1 and turn on output 2.
3. Press the **SETUP** button again for each output.
4. After turning on the last output, press the **SETUP** button again to turn on all outputs.
5. Press the **SETUP** button once more to turn off all outputs and LEDs and exit Local Mode.

---

## Further Inquiries

If you cannot locate specific information or have questions after reviewing this guide, please take advantage of Crestron's award winning customer service team by calling the Crestron corporate headquarters at 1-888-CRESTRON [1-888-273-7876]. For assistance in your local time zone, refer to the Crestron website ([www.crestron.com](http://www.crestron.com)) for a listing of Crestron worldwide offices.

You can also log onto the online help section of the Crestron website to ask questions about Crestron products. First-time users will need to establish a user account to fully benefit from all available features.

---

## Return and Warranty Policies

### Merchandise Returns / Repair Service

1. No merchandise may be returned for credit, exchange or service without prior authorization from CRESTRON. To obtain warranty service for CRESTRON products, contact an authorized CRESTRON dealer. Only authorized CRESTRON dealers may contact the factory and request an RMA (Return Merchandise Authorization) number. Enclose a note specifying the nature of the problem, name and phone number of contact person, RMA number and return address.
2. Products may be returned for credit, exchange or service with a CRESTRON Return Merchandise Authorization (RMA) number. Authorized returns must be shipped freight prepaid to CRESTRON, 6 Volvo Drive, Rockleigh, N.J. or its authorized subsidiaries, with RMA number clearly marked on the outside of all cartons. Shipments arriving freight collect or without an RMA number shall be subject to refusal. CRESTRON reserves the right in its sole and absolute discretion to charge a 15% restocking fee plus shipping costs on any products returned with an RMA.
3. Return freight charges following repair of items under warranty shall be paid by CRESTRON, shipping by standard ground carrier. In the event repairs are found to be non-warranty, return freight costs shall be paid by the purchaser.

### CRESTRON Limited Warranty

CRESTRON ELECTRONICS, Inc. warrants its products to be free from manufacturing defects in materials and workmanship under normal use for a period of three (3) years from the date of purchase from CRESTRON, with the following exceptions: disk drives and any other moving or rotating mechanical parts, pan/tilt heads and power supplies are covered for a period of one (1) year; touchscreen display and overlay components are covered for 90 days; batteries and incandescent lamps are not covered.

This warranty extends to products purchased directly from CRESTRON or an authorized CRESTRON dealer. Purchasers should inquire of the dealer regarding the nature and extent of the dealer's warranty, if any.

CRESTRON shall not be liable to honor the terms of this warranty if the product has been used in any application other than that for which it was intended or if it has been subjected to misuse, accidental damage, modification or improper installation procedures. Furthermore, this warranty does not cover any product that has had the serial number altered, defaced or removed.

This warranty shall be the sole and exclusive remedy to the original purchaser. In no event shall CRESTRON be liable for incidental or consequential damages of any kind (property or economic damages inclusive) arising from the sale or use of this equipment. CRESTRON is not liable for any claim made by a third party or made by the purchaser for a third party.

CRESTRON shall, at its option, repair or replace any product found defective, without charge for parts or labor. Repaired or replaced equipment and parts supplied under this warranty shall be covered only by the unexpired portion of the warranty.

Except as expressly set forth in this warranty, CRESTRON makes no other warranties, expressed or implied, nor authorizes any other party to offer any warranty, including any implied warranties of merchantability or fitness for a particular purpose. Any implied warranties that may be imposed by law are limited to the terms of this limited warranty. This warranty statement supersedes all previous warranties.

#### Trademark Information

*All brand names, product names, and trademarks are the sole property of their respective owners. Windows is a registered trademark of Microsoft Corporation. Windows95/98/Me/XP and WindowsNT/2000 are trademarks of Microsoft Corporation.*