



# **Crestron Fusion<sup>®</sup> 10 On-Premises Software**

## Enterprise Management Platform

Getting Started  
Crestron Electronics, Inc.

Crestron product development software is licensed to Crestron dealers and Crestron Service Providers (CSPs) under a limited non-exclusive, non-transferable Software Development Tools License Agreement. Crestron product operating system software is licensed to Crestron dealers, CSPs, and end-users under a separate End-User License Agreement. Both of these Agreements can be found on the Crestron website at [www.crestron.com/legal/software\\_license\\_agreement](http://www.crestron.com/legal/software_license_agreement).

The product warranty can be found at [www.crestron.com/warranty](http://www.crestron.com/warranty).

The specific patents that cover Crestron products are listed at [patents.crestron.com](http://patents.crestron.com).

Certain Crestron products contain open source software. For specific information, please visit [www.crestron.com/opensource](http://www.crestron.com/opensource).

Crestron, the Crestron logo, 3-Series, AirMedia, Crestron Fusion, Crestron RL, Crestron RoomView, Crestron Toolbox, D3 Pro, Fusion EM, and SystemBuilder are either trademarks or registered trademarks of Crestron Electronics, Inc. in the United States and/or other countries. Other trademarks, registered trademarks, and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Crestron disclaims any proprietary interest in the marks and names of others. Crestron is not responsible for errors in typography or photography.

This document was written by the Technical Publications department at Crestron.  
©2016 Crestron Electronics, Inc.

# Contents

<b>Introduction</b>	<b>1</b>
<b>Hardware and Firmware Compatibility</b>	<b>1</b>
<b>Connectivity Requirements</b>	<b>2</b>
<b>Add a Device Using Traditional (Outbound) Communications</b>	<b>3</b>
Add a Room Using Processor Discovery (Manual Entry).....	3
Add a Room Using Symbol Discover .....	7
Add a Scheduling Panel Asset .....	9
<b>Add a Device Using Inbound Communications</b>	<b>11</b>
Add a Room by Configuring a Processor .....	11
Add a Scheduling Panel Asset by Configuring a Processor .....	12
<b>For More Information</b>	<b>13</b>
<b>Further Inquiries</b>	<b>13</b>



# Crestron Fusion 10 On-Premises Software: Enterprise Management Platform

---

## Introduction

This document describes how to add devices to the Crestron Fusion Cloud server specifying the traditional outbound connection (initiated by the server) versus the new inbound connection (enabled by the latest device firmware). The following procedures assume that the Crestron Fusion Cloud software has been properly installed and configured.

---

## Hardware and Firmware Compatibility

The table below shows the current devices and firmware versions that are compatible with inbound communications for Crestron Fusion Cloud (installed on-premises).

### *Hardware and Firmware Compatibility Chart*

Compatible Cloud-Enabled Device	Minimum Firmware Version
3-Series® processor	Version 1.012.0017
TSW-732 scheduling panel	Version 2.01.08
TSS-752 scheduling panel	Version 2.01.08
AirMedia® presentation gateway device*†	Version 1.2.1
Crestron RL® collaboration system device†	Version 15.14.08

\* AirMedia is not recommended for use with Crestron Fusion Cloud service, as there is no SSL encryption available with the device's communication.

† To configure the Crestron RL and AirMedia devices for Crestron Fusion Cloud, refer to the product documentation.

---

**NOTE:** All 2-Series, 3-Series, and scheduling panel firmware are compatible with traditional outbound connection.

---

For more information on supported devices and minimum firmware, refer to the Crestron® True Blue Online Help ([Answer ID 5618](#)).

---

## Connectivity Requirements

Devices communicating with Crestron Fusion Cloud require direct connectivity from the device to the server via the following ports:

- HTTPS Port 443: Stateless Control Connection to Crestron Fusion Cloud SSL encrypted (inbound only)
- CIP Port 41794: Stateful CIP Protocol Connection unencrypted (outbound only)
- Secure CIP Port 41796: Stateful CIP Protocol Connection SSL encrypted

Ethernet connectivity must be established from the device directly with the Crestron Fusion Cloud server for the above ports. If crossing VLANs or routed networks, direct connectivity is especially important. The traffic needs to be free and unencumbered by other devices such as proxy servers, LAN/WAN optimizers, firewalls, etc.

In the process of communicating inbound to the server, the Control Connection is initiated by the device and used only during the following transactions:

- Registering the device with the server
- Transferring the RVI file (control processors) for auto-discovery
- Reregistering the device with the server in case of a loss of connection

The CIP Protocol Connection is established with the device as a permanent TCP connection, and does the following:

- Exchanges Attributes (Joins) and other stateful information about the device
- Exchanges the XML schedule (scheduling panels)
- Provides heartbeats to keep the connection alive at all times

---

**NOTE:** The Crestron AirMedia device uses only Port 41794 for the CIP Protocol Connection, which is not SSL encrypted.

---

## Add a Device Using Traditional (Outbound) Communications

This section includes instructions on how to add a room using manual entry or Symbol Discover, as well as how to add a scheduling panel asset. Traditional outbound communication is supported by all firmware versions.

### Add a Room Using Processor Discovery (Manual Entry)

**NOTE:** This method of processor discovery is required when a 2-Series processor is used.

To add a room by initiating discovery of processors using traditional outbound communication for Crestron Fusion Cloud, do the following:


1. Log into Crestron Fusion Cloud.
2. From the Crestron Fusion Cloud header tab, click **Open**.

*Crestron Fusion Cloud Header Tab*



3. From the pull-down tab, click **Setup**.

*Pull-Down Tab*

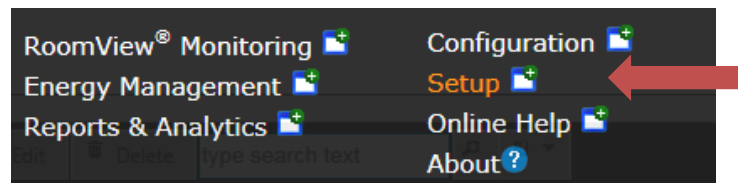

4. Click the + symbol next to **Root** node to expand the tree. Click the **Rooms** node to select the node.

*Root Node*



5. Click **Add**. From the drop-down list, click **Add Room**. The **Add Room** to 'Rooms' window opens with the **Room Details** tab selected.

*Add Drop-Down List*



### Room Details Tab

The screenshot shows a dialog box titled "Add Room to 'Rooms'". It has a tabbed interface with the following tabs: Room Details (selected), Scheduling Details, Address, Custom Properties, Processors, Assets, and People. The Room Details tab contains the following fields:

- Alias: [text input] with a "Lookup Room Name" button to its right.
- Name: [text input] with a red asterisk to its right.
- Description: [text area]
- Server Group: [dropdown menu] with "Default Group" selected and a red asterisk to its right.
- Location: [text input]
- Time Zone: [dropdown menu] with "(UTC-05:00) Eastern Time (US & Canada)" selected.
- eControl URL: [text input] with "http://" pre-filled.
- WebCam URL: [text input] with "http://" pre-filled.
- Inherit Geographic Coordinates  
Please enter latitude, longitude values in degrees/minutes/seconds with plus/minus format ( 41° 0'

At the bottom left, there is a legend: "\* denotes a required field". At the bottom center, there are two buttons: "Save & Close" and "Close".

6. Enter information into the required fields as indicated by the red asterisks. Enter optional information as desired.
7. Click the **Scheduling Details** tab.

### Scheduling Details Tab

The screenshot shows the same dialog box, but now the "Scheduling Details" tab is selected. The "Room Details" tab is now disabled. The "Scheduling Details" tab contains the following field:

- Server Access: [dropdown menu] with "RoomView Calendar" selected.

At the bottom left, there is a legend: "\* denotes a required field". At the bottom center, there are two buttons: "Save & Close" and "Close".

8. In the **Server Access** field, select **RoomView Calendar** from the drop-down list.

**NOTE:** The user can change to another scheduling calendar at a later time.

9. Click the **Processors** tab and then click **Add**. The **Add Processor to 'Room'** dialog box opens.



## Processors Tab

The screenshot shows a software interface with a top navigation bar containing tabs: Room Details, Scheduling Details, Address, Custom Properties, Processors (highlighted), Assets, and People. Below the navigation bar, a message reads: "Click on Add Processor to add a processor with the room. The symbols on the processor will be associated with the room." Below this message are three buttons: "+ Add" (highlighted with a red box), "Edit", and "Delete". A table below the buttons has columns: Processor Name \*, Host Name, Location, Port, Secure Port, and Discover Symbols. The table is currently empty. At the bottom, there is a legend: "\* denotes a required field", and two buttons: "Save & Close" and "Close".

## Add Processor to 'Room' Dialog Box

The screenshot shows a dialog box titled "Add Processor to Room". It contains several input fields and a dropdown menu, each with a red asterisk indicating it is a required field. The fields are: Name, Location, IP Address/Hostname, MAC Address, Connection Direction (set to "None"), Port (set to "41784"), Secure Port (set to "41796"), Username, and Password. Below the input fields, there is a section for "Discover Symbols" with a checked "Discover Symbols" checkbox and an unchecked "Use SSL" checkbox. At the bottom of the dialog box are two buttons: "Save & Close" and "Close".

10. Enter information into the required fields as indicated by the red asterisks. Enter optional information as desired.

11. Click the **Discover Symbols** check box.

If the **Discover Symbols** check box is selected in the **Add Processor to 'Room'** dialog box and the control program symbol being used is version 7.2 or higher, the Symbol Discover feature automatically imports the symbol information into the Crestron Fusion Cloud database.

**NOTE:** In the Crestron SystemBuilder™ and D3 Pro® platforms, the Symbol Discover feature is not supported on symbols below version 7.2.

12. Click **Save & Close** to return to the **Processors** tab.


---

**NOTE:** Steps 13 through 18 are not necessary if the **Discover Symbols** check box is selected in the **Add Processor to 'Room'** dialog box.

---


- Click the **+** symbol next to the processor name to add, edit, or delete a symbol.

*Add, Edit, or Delete Symbol Section*

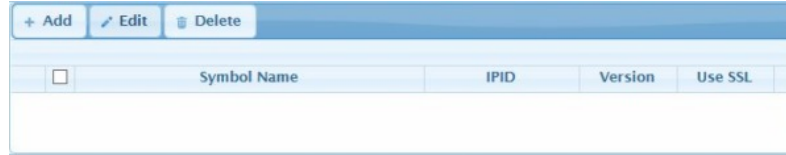

- Click **Add**. The **Add Symbol to 'New Processor'** window opens with the **Symbol Details** tab selected.

*Symbol Details Tab*

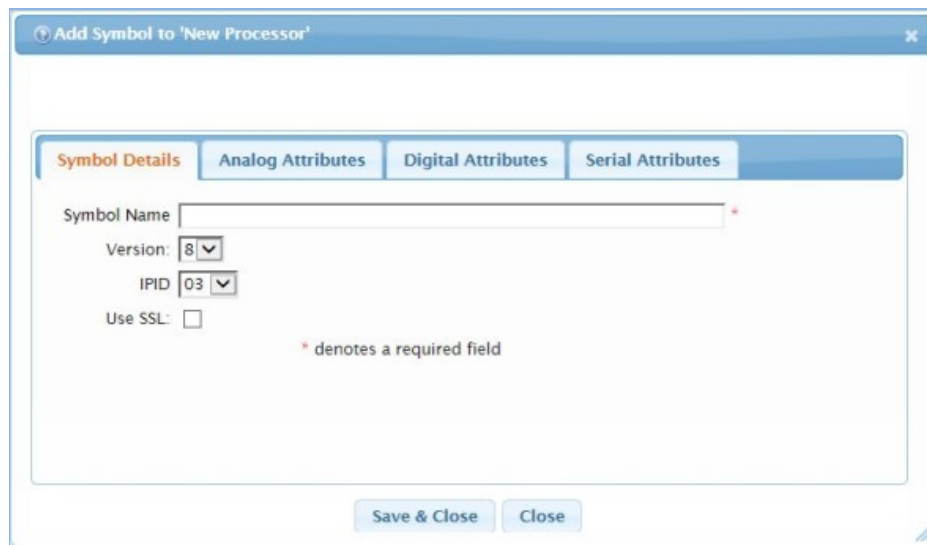

- In the **Symbol Name** field, enter a name.
- Set the **Version** and the **IPID** to match the Crestron Fusion Cloud symbol in the program.

---

**NOTE:** The version 8 symbol is the same as the Crestron Fusion Cloud Room symbol in Crestron SIMPL. If using SystemBuilder or D3 Pro, select the version 6 symbol.

---

- Click **Save & Close** to save the symbol.
- Click **Save & Close** again to save the room.

---

**NOTE:** To associate the room with a node other than the selected Rooms node, click and drag the new room to that node. The room is now associated with the new node.

---

## Add a Room Using Symbol Discover

The Symbol Discover feature automatically adds one or more rooms or nodes from one or more processors using traditional outbound communications from Crestron Fusion Cloud. A node is added for every node symbol found in a program, and a room is added for every room symbol found in a program.

---

**NOTE:** For building management installations, use Fusion EM<sup>®</sup> software for this procedure.

---

To add a room with Symbol Discover using traditional outbound communication for Crestron Fusion Cloud, do the following:


1. Select the node where the discovered rooms and nodes are to be added.
2. Click **Symbol Discover** on the tool bar. The **Symbol Discover** dialog box opens.

### *Symbol Discover Dialog Box*

The dialog box is titled "Symbol Discover" and contains three radio buttons for selection: "Single IP Address", "Hostname", and "IP Address Range". The "IP Address Range" option is selected. Below the radio buttons, there are two rows of input fields. The first row is labeled "Starting" and contains four input boxes with the values 172, 16, 20, and 21. The second row is labeled "Ending" and contains four input boxes with the values 172, 16, 20, and 25. At the bottom of the dialog, there are two buttons: "OK" and "Close".

3. Click the applicable radio button to specify the discovery method. Enter the required information. The example above shows a discovery based on a range of IP addresses.
4. Click **OK** to run the discovery. The **Confirm Auto-discover** message box opens.

### Confirm Auto-discover Message Box

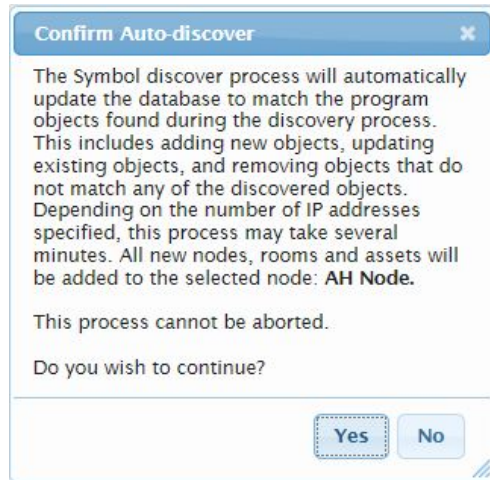

5. Read the information carefully before continuing. Click **Yes** to start the Symbol Discover process.

Crestron Fusion Cloud starts searching for symbols within the specified discovery method. The status is displayed.

### Results Window: Status Pending

Symbol discover is in progress for 5 connections.  
Currently processing connection: 172.30.16.22 (2/5)

Connection	Result
172.30.16.21	Pending
172.30.16.22	Pending
172.30.16.23	Pending
172.30.16.24	Pending
172.30.16.25	Pending

When the process is complete, the results are displayed.

### Results Window: Process Complete

The Symbol Discover process is complete!

Connection	Result
172.30.16.21	Success
172.30.16.22	Success
172.30.16.23	Success
172.30.16.24	Success
172.30.16.25	Success

6. Click **Close**. All discovered nodes and rooms appear in the node selected in step 1.

## Add a Scheduling Panel Asset

To add a scheduling panel asset using traditional outbound communications for Crestron Fusion Cloud, do the following:


1. Click the **+** symbol next to **Root** node to expand the tree.
2. Click the **+** symbol next to **Rooms** node to expand the tree. From the list, select the room that was added in the previous section.
3. Click **Add**. From the drop-down list, click **Add Asset**.

### Add Drop-Down List



4. The **Add Asset to 'Room Name'** window opens with the **Asset Details** tab selected.

### Add Asset to 'Room Name' Window

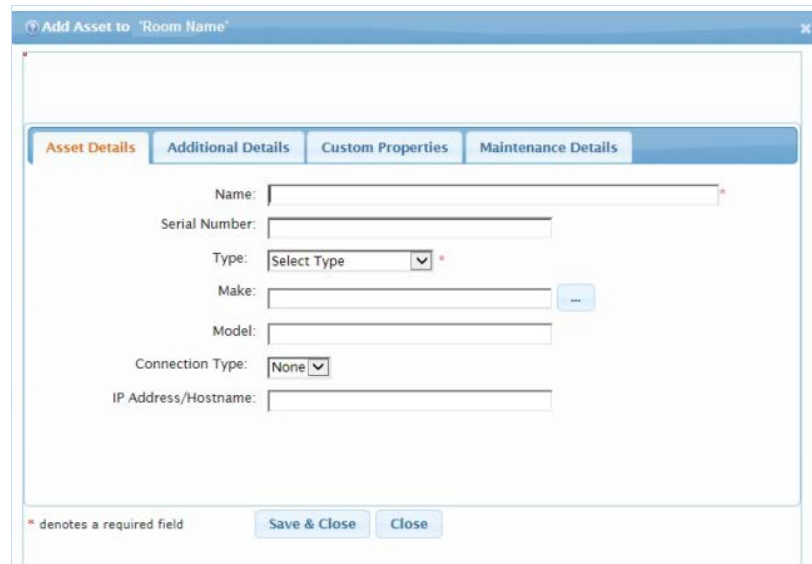A screenshot of a window titled 'Add Asset to 'Room Name''. The window has four tabs: 'Asset Details' (selected), 'Additional Details', 'Custom Properties', and 'Maintenance Details'. The 'Asset Details' tab contains several input fields: 'Name' (with a red asterisk), 'Serial Number', 'Type' (a dropdown menu with 'Select Type' selected), 'Make' (with a browse button (...)), 'Model', 'Connection Type' (a dropdown menu with 'None' selected), and 'IP Address/Hostname'. A legend at the bottom left indicates that a red asterisk denotes a required field. At the bottom right, there are 'Save & Close' and 'Close' buttons.

5. In the **Name** field, enter a name. When entering a name, use the asset name and room name.
6. Click the drop-down arrow next to **Type** and select **Touchpanel**.
7. Click the **browse** button (...) to the right of the **Make** field. The **Pick make and model** dialog box opens. Select the latest version of the driver that matches the device and then click **OK**.
8. Click the drop-down arrow next to **Connection Type** and select **Network**.
9. In the **IP Address/Hostname** field, enter an IP Address and Hostname.
10. Click the **Additional Details** tab. Enter the required information as indicated by the red asterisks. Enter optional information as desired.

### Additional Details Tab

Asset Details Additional Details Custom Properties Maintenance Details

Economic Lifespan: Do not depreciate ▼

Date of Purchase: 7/25/2014 \*

Warranty Expiration Date: 7/25/2014 \*

Asset Tag: \_\_\_\_\_

MAC Address: \_\_\_\_\_

\* denotes a required field

Save & Close Close

11. Click the **Maintenance Details** tab. Enter the required information as indicated by the red asterisks. Enter optional information as desired.

### Maintenance Details Tab

Asset Details Additional Details Custom Properties Maintenance Details

Service Contract: None ▼

Service Interval: 1 ▼ Days ▼

Service Contact Information: \_\_\_\_\_

Last Service: 7/25/2014 \*

\* denotes a required field

Save & Close Close

12. Click **Save & Close** to save the asset.

---

**NOTE:** This procedure does not work for programmed assets.

---

---

## Add a Device Using Inbound Communications

This section includes instructions on how to add a room and a scheduling panel asset. When inbound communication is used, Crestron Fusion Cloud does all the work by connecting to the processor and auto-discovering rooms.

---

**NOTE:** If using Room templates, do not include inbound network-connected assets, scheduling panels, and AirMedia® devices.

---

### Add a Room by Configuring a Processor

To add a room by configuring a processor, do the following:

1. Open the Crestron Toolbox™ software and connect to the control system.
2. Enter a hostname, “HOSTNAME uniqueHostname.” When entering a hostname, set a *uniqueHostname* for the device that describes its name and room; for example, PRO3Room123.
3. Enter the “CLOUDENABLE ON” command on the Crestron Toolbox console. The processor automatically reboots.
4. Enter a URL for the Crestron Fusion Cloud server, “CLOUDURL https://serverHostname/Fusion/DeviceManager/api/DeviceManager.” The *serverHostname* is the hostname of the Crestron Fusion Cloud server.

---

**NOTE:** DNS resolution must be configured for the device’s Ethernet interface, and the device must be able to make an Internet connection via the port.

---

5. After the device reboots, it automatically connects to the Crestron Fusion Cloud server.
6. Enter the “CLOUDSTATUS” command to verify the device is registered with the Crestron Fusion Cloud server.
7. Enter the “FITCSTATUS” command to verify the device is connected to the server and online.
8. Confirm that one or more auto-discovered Room Name(s) configured for the processor program(s) appears in the Root Node. If not, click another Node and then go back to the Root Node to refresh the list.
9. Drag the Room to the appropriate Node in the tree to activate communications with the processor.

If the room was already created before the processor was discovered, the auto-discovered Symbols (from the room in the Root Node) need to be moved into the existing room as follows:

- Open the Node tree so the target room (created previously) is displayed.
- Click the auto-discovered Room to display its Symbol(s) to the target, and drag each symbol to the appropriate existing target room.
- Delete the room from the Room Node, when one or more symbols remain on the auto-discovered room.

## Add a Scheduling Panel Asset by Configuring a Processor

To add a scheduling panel asset by configuring a processor, do the following:

1. Open the Crestron Toolbox software and connect to the control system.
2. Enter a hostname, "HOSTNAME *uniqueHostname*." When entering a hostname, set a *uniqueHostname* for the device that describes its name and room, for example, TSS752Room123. After the device reboots, the device should connect to the Crestron Fusion Cloud server.
3. Enter a URL for the Crestron Fusion Cloud server, "CLOUDURL <https://serverHostname/Fusion/DeviceManager/api/DeviceManager>." The *serverHostname* is the hostname of the Crestron Fusion Cloud server.
4. Enter the "CLOUDENABLE ON" command. The device must be rebooted. After the device reboots it will connect to the Crestron Fusion Cloud server. The device displays "Retrieving Room Details."

---

**NOTE:** DNS resolution must be configured for the device's Ethernet interface, and the device must be able to make an Internet connection via the port.

---

5. Open the Crestron Fusion Cloud Setup Web client.
6. Confirm that the Scheduling Panel is listed in the Root Node under its *uniqueHostname*. If not, click another Node, and then click the Root Node to refresh the list.
7. Drag the device to the appropriate room to activate communications with the device.

---

**NOTE:** For the scheduling panel to operate properly, the room must be configured with a scheduling provider.

---

8. Select the Asset, and click **Edit**.
9. Confirm that the driver type, make, and model are the appropriate selections for the Asset and the Out of the Box Functionality (OOTBF) version. Make changes, if necessary.
10. Click **Save & Close** to save changes. Click **Close** if no changes were made.



---

## For More Information

For more information on these and other procedures in Crestron Fusion Cloud, consult the embedded help. Follow the steps below to access the online help.


1. From the Crestron Fusion header tab, click **Open**.

*Crestron Fusion Header Tab*



2. From the pull-down tab, click **Online Help** to open the Crestron Fusion Cloud online help.

*Pull-Down Tab*

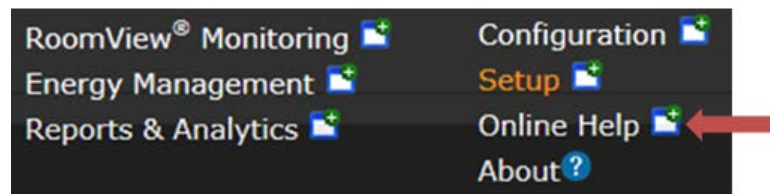

---

## Further Inquiries

To locate specific information or resolve questions after reviewing this guide, contact Crestron's True Blue Online Help at [www.crestron.com/onlinehelp](http://www.crestron.com/onlinehelp). First-time users need to establish a user account to benefit from all features.

For information on Crestron Fusion Cloud, contact the Crestron Fusion Support Group (FSG) at 855-754-5962 or e-mail [fsg@crestron.com](mailto:fsg@crestron.com).

---

**Crestron Electronics, Inc.**  
15 Volvo Drive Rockleigh, NJ 07647  
Tel: 888.CRESTRON  
Fax: 201.767.7576  
[www.crestron.com](http://www.crestron.com)



**Getting Started Guide – DOC. 7685C  
(2041503)**

**10.16**

Specifications subject to  
change without notice.