

HR-310-BTN

Engravable Buttons for HR-310 Installation Guide



Description

The Crestron® HR-310-BTN BLANK and the HR-310-BTN ENGRAVED are sets of blank and engravable buttons, respectively, that are designed to replace the default button set installed in an HR-310 or HR-310-I handheld remote (not included). Each button set contains nine configurable hard buttons. A custom-engraved button frame that secures the custom button set to the remote is also included with each engraving order.

Customized hard buttons for the HR-310-BTN ENGRAVED can be created and ordered using Crestron Engraver software. For more information, refer to the Crestron Engraver help file that is packaged with the software.

Additional Resources

Visit the product page on the Crestron website (www.crestron.com) for additional information and the latest firmware updates. An instructional video showing how to install the HR-310-BTN buttons into an HR-310 or HR-310-I remote can also be viewed. Use a QR reader application on your mobile device to scan the QR images, or click the QR images to load the web pages.



Product Page



Instructional Video

Installation


Use the following procedure to install the HR-310-BTN in an HR-310 or HR-310-I remote.

NOTE: To view an instructional video showing these steps, visit <https://vimeo.com/250110905>, or use a QR reader application on your mobile device to scan the "Instructional Video" QR image located in "Additional Resources."

1. Align the two pegs on top of the included button removal tool with the two small holes on the rear of the remote (behind the button cover).

Aligning the Button Removal Tool with the Remote

Align top pegs on
button removal tool
with these holes

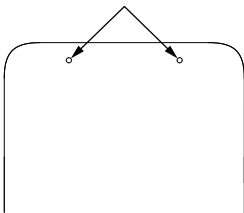



HR-310/HR-310-I
(top rear view)

2. Place the button removal tool on a flat, level surface. Then, use two fingers to firmly press down on the left and right buttons in the middle row of removable buttons on the remote until the frame pops up. Refer to the illustration on the following page.

NOTE: The button cover can be removed only using the button removal tool.

Removing the Button Cover

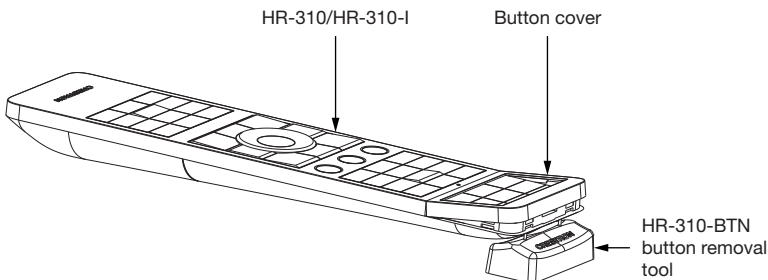


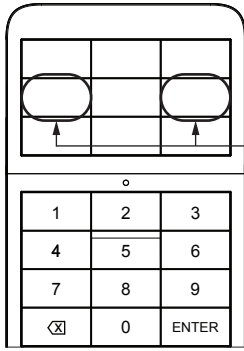

Press the left and right buttons in the middle row firmly until the cover pops up


3. Remove the button removal tool from the rear of the remote.
4. Remove the default button set from the button compartment by pulling it up and out of the compartment.
5. Position the HR-310-BTN replacement button set so that the tabs on top and bottom of the button set align with the slots on the top and bottom of the button compartment, and then place the button set into the compartment, bottom side first. Refer to the following illustration.

Installing the Replacement Button Set in the Remote

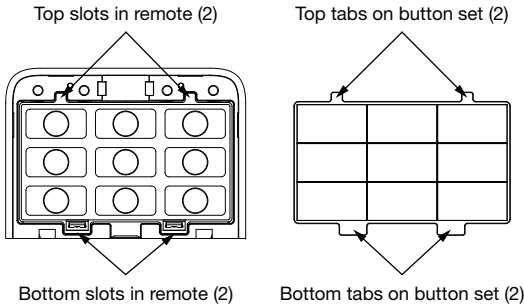

6. Attach the custom-engraved button cover so that the tab on the bottom of the cover enters the slot on the bottom of the button compartment. Then, gently press the top of the cover down into the remote until the cover is secured.

Attaching the Engraved Button Cover to the Remote

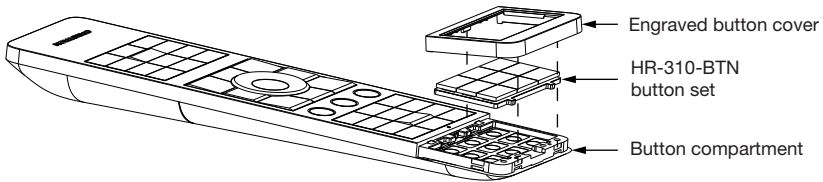

As of the date of manufacture, the product has been tested and found to comply with specifications for CE marking.



Product warranty can be found at www.crestron.com/warranty.

The specific patents that cover Crestron products are listed at www.crestron.com/legal/patents.

Certain Crestron products contain open source software. For www.crestron.com/opensource.

Crestron and the Crestron logo are either trademarks or registered trademarks of Crestron Electronics, Inc. in the United States and/or other countries.

Other trademarks, registered trademarks, and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Crestron disclaims any proprietary interest in the marks and names of others. Crestron is not responsible for errors in typography or photography.

This document was written by the Technical Publications department at Crestron.

©2018 Crestron Electronics, Inc.

Crestron Electronics, Inc.
 15 Volvo Drive
 Rockleigh, NJ 07647
 Tel: 888.CRESTRON
 Fax: 201.767.7576
www.crestron.com

Installation Guide
DOC. 8224D
(2049461)
01.18
 Specifications subject to
 change without notice.