


NOTE: ACTUAL SPACING MAY VARY DEPENDING ON  
SELECTED PLEATING SYSTEM AND ACTUAL DRAPERY FABRICS

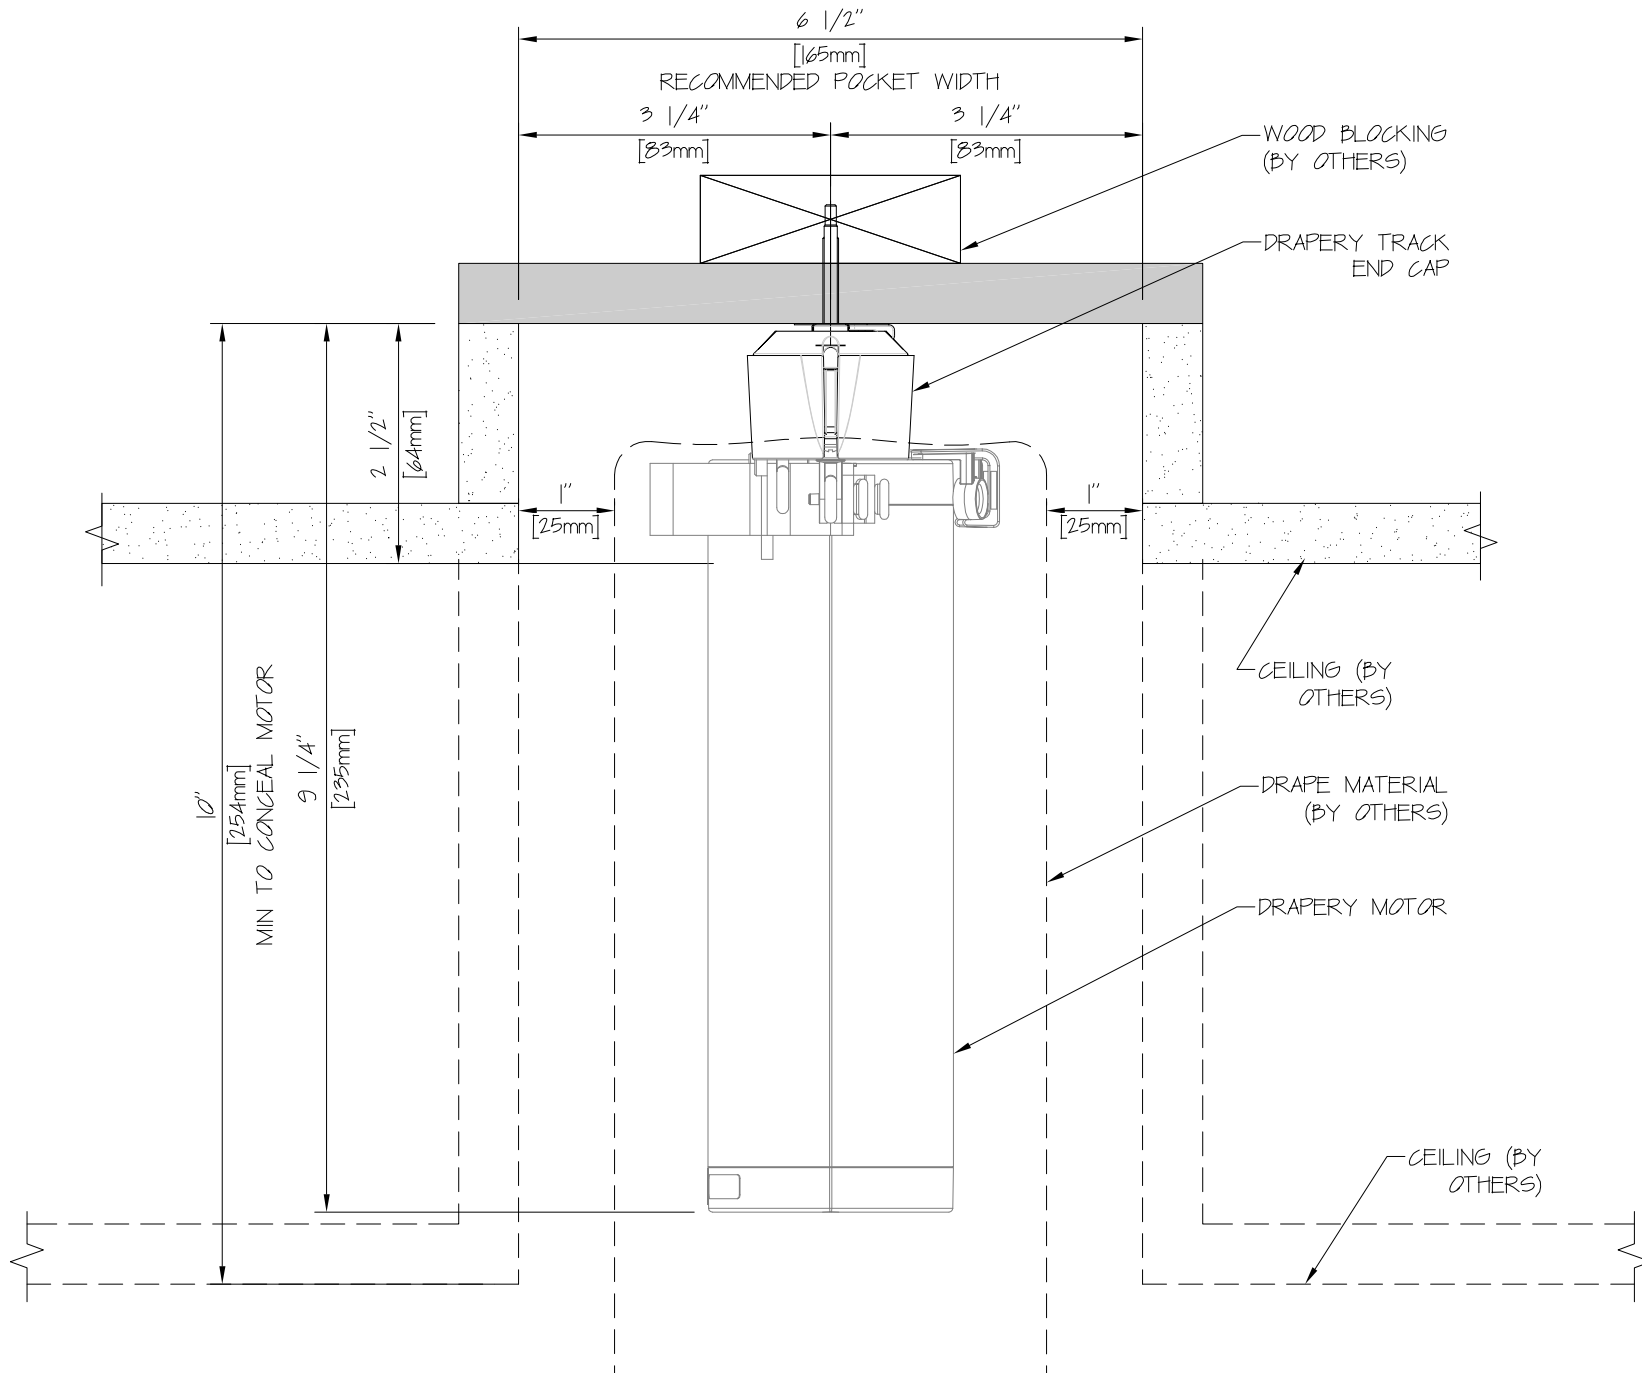

DRAPERY TRACK SYSTEMS  
POCKET MOUNT INSTALLATION



15 Volvo Drive  
Rockleigh NJ 07647  
Tel: 888-273-7876  
www.crestron.com

DWG. #	DT5-001
SCALE:	6" = 1'-0"
DATE:	11.29.17
REV.:	