Cresnet Network to Mini Network Interconnect Drawing

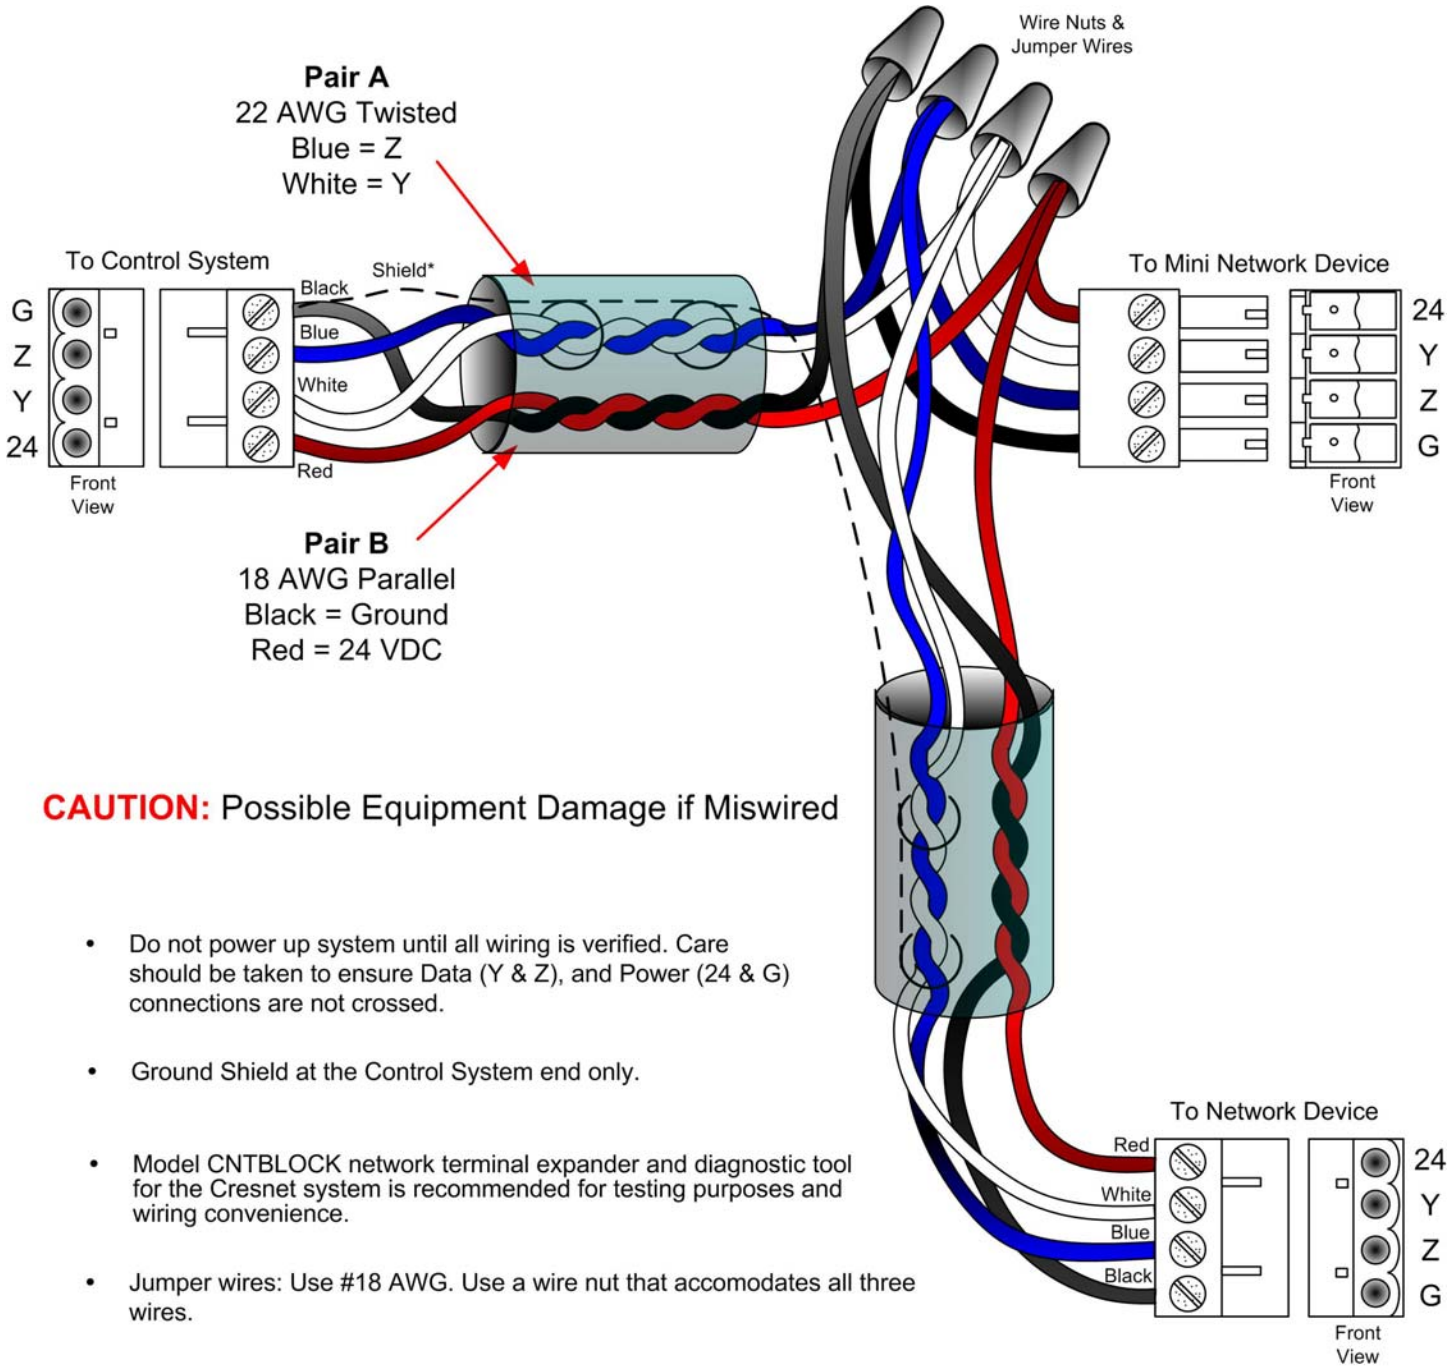

CAUTION: Possible Equipment Damage if Miswired

- Do not power up system until all wiring is verified. Care should be taken to ensure Data (Y & Z), and Power (24 & G) connections are not crossed.
- Ground Shield at the Control System end only.
- Model CNTBLOCK network terminal expander and diagnostic tool for the Cresnet system is recommended for testing purposes and wiring convenience.
- Jumper wires: Use #18 AWG. Use a wire nut that accomodates all three wires.