

View this document in HTML crestron.com/docs/8214



User Guide

XiO Cloud[®]

Provisioning and Management Service

Crestron Electronics, Inc.

Have feedback on this document? Contact docfeedback@crestron.com.

The original language version of this document is U.S. English. All other languages are a translation of the original document.

Crestron product development software is licensed to Crestron dealers and Crestron Service Providers (CSPs) under a limited nonexclusive, nontransferable Software Development Tools License Agreement. Crestron product operating system software is licensed to Crestron dealers, CSPs, and end-users under a separate End-User License Agreement. Both of these Agreements can be found on the Crestron website at www.crestron.com/legal/software_license_agreement.

The product warranty can be found at www.crestron.com/warranty.

The specific patents that cover Crestron products are listed online at www.crestron.com/legal/patents.

Certain Crestron products contain open source software. For specific information, please visit www.crestron.com/opensource.

Crestron, the Crestron logo, 3-Series, 4-Series, AirMedia, Avia, Crestron Connected, Crestron Fusion, Crestron Mercury, Crestron Toolbox, DigitalMedia, DM, DM 8G+, DM NAX, DM NVX, DMPS Lite, FlipTop, infiNET EX, XiO Cloud, and Zūm are either trademarks or registered trademarks of Crestron Electronics, Inc. in the United States and/or other countries. Acer is either a trademark or registered trademark of Acer, Inc. in the United States and/or other countries. Dante is either a trademark or registered trademark of Audinate Pty Ltd. in the United States and/or other countries. Barco is either a trademark or a registered trademark of Barco, Inc. in the United States and/or other countries. BenQ is either a trademark or a registered trademark of BenQ America Corp. in the United States and/or other countries. Bluetooth is either a trademark or registered trademark of Bluetooth SIG, Inc. in the United States and/or other countries. Blu-ray is either a trademark or a registered trademark of Blu-ray Disc Association (BDA) in the United States and/or other countries. Christie is either a trademark or registered trademark of Christie Digital Systems USA, Inc. in the United States and/or other countries. Elo is either a trademark or a registered trademark of Elo Touch Solutions, Inc. in the United States and/or other countries. Epson is either a trademark or a registered trademark of Epson America, Inc. in the United States and/or other countries. Jabra and PanaCast are trademarks of GN Audio A/S in the United States and/or other countries. GUDE is either a trademark or a registered trademark of GUDE Systems GmbH in the United States and/or other countries. HDMI is either a trademark or a registered trademarks of HDMI Licensing LLC in the United States and/or other countries. InFocus is either a trademark or a registered trademark of InFocus Corporation in the United States and/or other countries. Legrand is either a trademark or a registered trademark of Legrand North America, LLC in the United States and/or other countries. Lenovo and ThinkSmart are either trademarks or registered trademarks of Lenovo in the United States and/or other countries. LG is either a trademark or a registered trademark of LG Electronics in the United States and/or other countries. Active Directory, Azure, Excel, Microsoft, Microsoft Teams, and Skype are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries. Okta is either a trademark or a registered trademark of Okta, Inc. in the United States and/or other countries. Optoma is either a trademark or a registered trademark of Optoma Technology, Inc. in the United States and/or other countries. JavaScript is either a trademark or a registered trademark of Oracle Corporation in the United States and/or other countries. Philips is either a trademark or a registered trademark of Philips North America LLC in the United States and/or other countries. Polycom is either a trademark or a registered trademark of Plantronics, Inc. in the United States and/or other countries. Raritan is either a trademark or a registered trademark of Raritan, Inc. in the United States and/or other countries. Samsung is either a trademark or a registered trademark of Samsung Electronics Co., Ltd in the United States and/or other countries. ServiceNow is either a trademark or a registered trademark of ServiceNow, Inc. in the United States and/or other countries. NEC and Sharp are either trademarks or registered trademarks of Sharp NEC Display Solutions of America, Inc. in the United States and/or other countries. Absen is either a trademark or a registered trademark of Shenzhen Absen Optoelectronic Co., Ltd. in the United States and/or other countries. SMART Board is either a trademark or a registered trademark of Smart Technologies ULC in the United States and/or other countries.Sony is either a trademark or a registered trademark of Sony Group Corporation in the United States and/or other countries. USB-C and USB Type-C are either trademarks or registered trademarks of USB Implementers Forum, Inc. in the United States and/or other countries. DisplayPort is either a trademark or registered trademark of Video Electronics Standards Association in the United States and/or other countries. ViewSonic is either a trademark or a registered trademark of ViewSonic Corporation in the United States and/or other countries. Vivitek is either a trademark or a registered trademark of Vivitek Corporation in the United States and/or other countries. Wi-Fi is either a trademark or a registered trademark of Wi-Fi Alliance in the United States and/or other countries. Zoom Rooms is either a trademark or a registered trademark of Zoom Video Communications, Inc. in the United States and/or other countries. Other trademarks, registered trademarks, and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Crestron disclaims any proprietary interest in the marks and names of others. Crestron is not responsible for errors in typography or photography.

©2024 Crestron Electronics, Inc.

Contents

Introduction	1
What's New?	
How to Order Select Room Licenses Purchasing Instructions New XiO Cloud Accounts Existing XiO Cloud Accounts	
Log in to the Service	7
Navigate the Service	
Build the Environment Create the Building Address Book Manage Buildings Manage Space Properties Create the Group Tree Manage Groups Manage Rooms Manage Desks Claim Devices Add Devices to Rooms or Desks Cut and Paste Download Inventory View Grouped Devices, Rooms, and Desks	12 14 17 18 19 23 32 44 49 52 53
XiO Cloud Program Connector Room Program Room Control System Check Status Indicators Room Health Room Occupancy Maintenance Mode Custom Alerts	58 59 60 61 62 62 62
Licensed Features Apply Multiple Licenses Update Multiple Licenses Filter and Manage Licenses	

Manage Devices	
Rename a Device	
View Device Status	
View Status for a Single Device	71
View Status for a Group of Devices	
Configure Device Settings	
Configure Settings for a Single Device	
Configure Settings for a Group of Devices	
Prevent Unnecessary Restarts	
Manage Licenses	
Manage Licenses for a Single Device	
Manage Licenses for a Group or Room	
Scheduled Actions	
Create a Scheduled Action	
Delete a Scheduled Action	
Dashboard	
Activity Log	
Device Metadata	
Update Firmware	
Restart Devices	
Refresh Devices	
Manago Llooro	100
Manage Users	
Add a New User	
Edit User Information	
Manage User Access	
Delete a User	
Download User Activity Audit Log	
Single Sign-On	
Account Dashboard	
Device Status	
Occupied Rooms	
Active Alerts - last 48 hours	
Firmware Releases	
Room Utilization	
Room Usage Over Time	
Uptime By Device	
Device Offline Incidents	
Room Services Expiration	
Historical Reports (Early Access)	
What's New Message	
Progress Tracker	

Alerts	
Configure Contact Information	
Configure Alert Levels	
Manage Alerts	
Add a New Alert	
Delete an Alert	
View Alerts	
File Library	
Manage Files	
Add a Program or Project	
Edit a Program or Project	
EDIDs	
Add a Custom EDID File	
Delete a Custom EDID File	
Manage Images	
Add an Image File	
Delete an Image File	
Load a Program to a Control System	
Upload a New Program	
Manage Programs	
Edit a Program	
Delete a Program	
Load a Program to Device	
Manage a Loaded Program	
Edit a Loaded Program	
Start/Stop a Loaded Program	
Unregister a Loaded Program	
Remote Control	
Enable Remote Control	
Request Remote Control Access	
Initiate a Request	
Accept or Decline the Request	
End a Remote Control Session	
View a User Interface	
Control a User Interface	
Privacy Considerations	
Enable API Access	
Manage Support Providers	
Add a Support Provider	
Manage Support Providers	

FAQs	
Troubleshooting	
Works with XiO Cloud	
Audio	
Amplifiers	
Digital Signal Processors	
Multiroom Audio Accessories	
Conferencing	
AirMedia Wireless Presentation and Conferencing	
Crestron Flex Solutions	
Crestron Flex Hubs and Pods	
Connectivity	
USB Switchers	
Control	
3-Series Control Systems	
4-Series Control Systems	
Crestron Virtual Control Server-Based Control Systems	
Media Presentation Controllers	
Smart Display Controllers	
Lighting and Environmental	
Lighting Control Systems	
Power	
Power Conditioners	
Scheduling	
Room Scheduling Touch Screens	
Desk Scheduling Devices	
Sensors	
Occupancy Sensors	
Third-Party Devices	
Crestron Connected Devices	
Crestron Driver Devices	
Third-Party Device Monitoring Gateway Software	
Touch Screens	
Tabletop Touch Screens	
Touch Screen Control Systems	
Wall Mount Touch Screens	
Wireless Touch Screens	
Video	
AirMedia Wireless Presentation and Conferencing	
Digital Graphics Engines	
DigitalMedia Solutions	
HDMI Solutions	
Smart Display Controllers	

Appendix A: Configure ServiceNow for XiO Cloud Alerts	
Client Prerequisites	
Turn on ServiceNow Within XiO Cloud	
Create XiO Incident Script	
When to Run Tab	
Actions Tab	
Close Incident XiO Script	
When to Run Tab	
Actions Tab	
Close ServiceNow Incidents in XiO Cloud	
Add a Subscription Key to ServiceNow	
Inbound Actions Setup	
REST Message Setup	
Business Rule Setup	
Test the Connection	
Processing Script	
Business Rule Script	
Additional Resources	217
Appendix B: User Access Matrix	
Appendix C: XiO Cloud Program Connector Sources	

Introduction

The XiO Cloud® provisioning and management service allows all supported Crestron® devices and certain supported third-party devices across an enterprise to be managed and configured from one central, secure location in the cloud. The XiO Cloud service may be used to view the status of a device, to configure various device and network settings, to manage licenses, and to update device firmware.

The XiO Cloud service is an IoT (Internet of Things) based platform that provides the following benefits for an enterprise:

Quick Deployment

- Configure new or replacement devices before installation
- Retrieve device settings automatically
- Drag-and-drop naming, configuration, and organization

Remote Management

- Change settings for multiple devices across the enterprise simultaneously
- Update firmware for all devices across the enterprise simultaneously
- View cloud audit logs to identify and resolve issues quickly

Instant Monitoring

- View live status of all connected devices from anywhere at any time
- Monitor device changes in real time
- No extra configuration tools are required for monitoring

Confident Evolution

- Interactive dashboards provide real-world usage data
- No programming is required for data gathering
- Optimize workplace technology experiences

For more details and additional resources, refer to <u>https://www.crestron.com/xiocloud</u>.

NOTE: This document is current as of the XiO Cloud version 1.64 release.

What's New?

Updates to the XiO Cloud service and documentation are described below from newest to oldest (as of XiO Cloud release 1.63).

December 20, 2024

- XiO Cloud v1.64 Released
 - XiO Cloud v1.64 has been released publicly. Refer to the release notes posting on the Crestron website for detailed information about this release.
- Documentation Updates
 - Updated Manage Devices on page 68 and XiO Cloud Program Connector on page 57 with information about the maintenance mode schedule room action.
 - Updated Log in to the Service on page 7, Manage Users on page 100, and Alerts on page 127 to reflect latest UI changes.

December 6, 2024

• XiO Cloud v1.63 Int 1 Released

- XiO Cloud v1.63 Int 1 has been released publicly. Refer to the release notes posting on the Crestron website for detailed information about this release.
- Documentation Updates
 - Updated Log in to the Service on page 7 to reflect new login workflow.
 - Added notes to Account Dashboard on page 107 and Historical Reports (Early Access) on page 120 that certain data is shown only up until the end of the previous day.

November 15, 2024

- XiO Cloud v1.63 Released
 - XiO Cloud v1.63 has been released publicly. Refer to the release notes posting on the Crestron website for detailed information about this release.
- Documentation Updates
 - Added information about room scheduled actions to XiO Cloud Program Connector on page 57 and Manage Devices on page 68.
 - Added support for the DM-NVX-384(C) to Works with XiO Cloud on page 176.

How to Order

The following sections describe how to order the XiO Cloud service from Crestron.

Select Room Licenses

The XiO Cloud service environment consists of groups, rooms, and devices. Rooms provide an organizational hierarchy for devices according to geographic location, department, or any other structure that is appropriate for the organization. Devices must be associated with licensed rooms before device status can be viewed or device settings can be configured.

Room-based licenses provide various features that are billed monthly or invoiced in full. Each room in XiO Cloud requires purchase of one Endpoint Management (SW-XIOC-EM) license. Additional licenses can then be purchased for the room or account depending on the desired functionality. Different rooms can have different license combinations.

The following features are provided in each room-based license:

NOTE: As of XiO Cloud release 1.36, managing device licenses (such as VC-4 server licenses) within XiO Cloud no longer requires purchase of any XiO Cloud room-based licenses. For more information, refer to Manage Licenses on page 80.

- Endpoint Management (SW-XIOC-EM): Provides the functionality required to deploy and manage devices, including configuring device settings and viewing device status, firmware upgrades, custom code deployment, and actions such as firmware updates. Required for all rooms in an XiO Cloud installation.
- **Support (SW-XIOC-S)**: Provides tools for managing support for rooms, including remote viewing and control for touch screens, email and SMS alerts, and certain dashboards.
- **REST API (SW-XIOC-API)**: Provides access to a REST API used to pull device status into other services. The API license must be purchased for all rooms in an account to use this functionality.
- Workplace Analytics (SW-XIOC-WA): Provides access to dashboards that show how a room or space is used within an organization. This feature is currently provided as a complimentary beta with each Endpoint Management license.

Refer to the XiO Cloud <u>feature comparison table</u> for a comparison matrix showing the features provided by each license type. This table can also be accessed via the XiO Cloud product pages at www.crestron.com.

The following table provides an overview of the room license types and features. For more information on each license type, including pricing, visit its product page by selecting the appropriate link in the table.

License/Service	Model/SKU #	Key Features
<u>SW-XIOC-EM</u> (Endpoint Management)	3001922	Provision devices off site, manage devices remotely

License/Service	Model/SKU #	Key Features
<u>SW-XIOC-S</u> (Support)	3001923	Support device remotely, receive alerts, view incident dashboards
SW-XIOC-API (REST API Access)	3001925	Integrate with preferred Business Intelligence (BI) or management tools
SW-XIOC-WA (Workplace Analytics)	N/A	Receive actionable usage data
, -		Beta version included with purchase of SW-XIOC-EM license

Purchasing Instructions

Authorized Resellers (dealers) can purchase new XiO Cloud accounts or renew existing accounts for end users or partners (customers) directly through Crestron. Purchasing instructions differ depending on whether the XiO Cloud accounts are new or existing.

NOTE: Crestron does not automatically activate renewals for XiO Cloud accounts. The customer must submit an updated <u>XiO Cloud registration form</u> to activate and renew their licenses. For more information, refer to Existing XiO Cloud Accounts on page 5.

New XiO Cloud Accounts

To purchase new XiO Cloud accounts for a customer:

- The dealer submits a purchase order (PO) for XiO Cloud to <u>orders@crestron.com</u> (US), <u>ceurorders@crestron.com</u> (EU), or <u>anzorders@crestron.com</u> (ANZ). Include the following information in the PO to avoid ordering delays:
 - Specify that the order is for a new account
 - Customer and project name (for reference)
 - Quantity of rooms
 - Term of service (monthly or yearly)
 - Desired billing structure (monthly or single payment)
- 2. The dealer receives an order confirmation along with a link to the XiO Cloud registration form.
- 3. The dealer forwards the order confirmation to the customer, including the request to complete the XiO Cloud registration form.
- 4. The customer submits the XiO Cloud registration form directly to Crestron.
- 5. The customer receives the new account information via email, including account credentials and a temporary password. Invoicing is sent the same day.

Refer to the following process diagram for an overview on how to order new XiO Cloud accounts.



Existing XiO Cloud Accounts

To renew existing XiO Cloud accounts or to add additional licenses for a customer:

- The dealer submits a purchase order (PO) for XiO Cloud to <u>orders@crestron.com</u> (US), <u>ceurorders@crestron.com</u> (EU), or <u>anzorders@crestron.com</u> (ANZ). Include the following information in the PO to avoid ordering delays:
 - Specify whether the order is to renew an account or add licenses
 - Customer and project name (for reference)
 - XiO Cloud account name and identification number
 - Quantity of rooms
 - Term of service (monthly or yearly)
 - Desired billing structure (monthly or single payment)
- 2. When the customer is ready to activate the additional licenses, they must request the renewal and activation using the XiO Cloud registration form.
- 3. The customer submits the XiO Cloud registration form directly to Crestron, which initiates the renewal process.
- 4. The customer receives their updated account information via email, including the updated list of room accounts and expiration dates. Invoicing is sent the same day.

Refer to the following process diagram for an overview on how to renew existing XiO Cloud accounts or add new licenses.



Log in to the Service

A registered XiO Cloud account is required to use the XiO Cloud service. To register for an account, visit www.crestron.com/Support/Tools/Licensing-Registration/XiO-Account-Registration.

The first individual at an organization to register for the service will receive an email from Crestron that provides a username and a temporary password. These credentials are used for the initial login.

NOTE: Users registered with a single sign-on (SSO) identity provider will receive their login credentials from their provider instead. For more information on configuring SSO with XiO Cloud, refer to Single Sign-On on page 106.

Additional users are added from within the XiO Cloud service. For information about managing, adding, and deleting users, refer to Manage Users on page 100.

To log in to the XiO Cloud service:

Navigate to <u>https://portal.crestron.io</u>. The XiO Cloud landing page is displayed.
 XiO Cloud Landing Page

@ CRESTRON ,		ପ
	Welcome to Crestron XiO Cloud	
	Already have an account?	
	<u>Cloudware License Agreement & Privacy Statement</u>	
164.144		

2. Select **Sign In**. A page for entering login credentials is displayed.

Login Credentials Page

@CRI	ESTRON®
	Welcome to Crestron XiO Cloud
	Enter your XiO Cloud username / email address
	Enter your XiO Cloud username / email address
	Continue
	© 2024 Crestron Electronics, Inc All rights reserved Service Status

3. Enter your user name or email address (provided in the welcome email) in the text field, and then select **Continue**.

You are redirected to your identity provider to enter your login credentials. Crestron accounts will be directed to a Microsoft[®] Azure[®] service page for entering login credentials. Crestron uses Microsoft Azure services to manage login credentials for the highest level of enterprise security.

After logging into a Crestron account for the first time, you are asked to change your password and to provide an email address and mobile number. The email address and phone number are used for account recovery if your username or password is forgotten.

Upon successful login, you are redirected to the XiO Cloud service with the **Dashboard** page open by default.


XiO Cloud Service Dashboard Page

Hello Adm	,		My Account Account: Account Account #: 583
Vveicome r	pack to Crestron XiO		Account #: 583
XIO Cloud Service Health			9 Panels Selected 🗸 🗸
Device Status	— 2 [#] C	📽 Occupied Rooms — 🖉 🖸	^(C) Room Services Expiration
_		4 Occupied	13424 Available Licenses 44 Expired Licenses
35 Online 5745 Offline		7 Unoccupied	Manage Licenses Days Remaining
463 Cloud Connector Offline	Online	107 Offline Occupied	< 30 < 60 < 90 < 180 Include Expired
6243 Total Devices		56 N/A	Endpoint Management 0
		174 Total Rooms with Devices	Support Services 215
			Workplace Analytics 262
	.::		
Active Alerts - past 4			
		Cirmurara Palaasas	Att Boom Utilization
Active Alerts - past 4	Bhours — 🖉 🖸	• Filliwale Releases	Room Utilization
Active Aler ts - past 4	B hours — 🖉 C	Model Version Updated	Image:
 Active Alerts - past 4 Critical 0 	Bhours – e ^x C		Past 3 Months (11/22/2023 - 02/22/2024)
-		Model Version Updated TS-770-GV 2.004.1054 Feb 22, 2024	Past 3 Months (11/22/2023 - 02/22/2024) Most Utilized Least Utilized
• Critical 0	• Error 2	Model Version Updated T5-770-GV 2.004.1054 Feb 22,2024 TSS-770 2.004.1059.001 Feb 21,2024	Past 3 Months (11/22/2023 - 02/22/2024) Most Utilized 3.61% SanjeevG-1 0.59% RoomB 0.07% RoomC
-		Model Version Updated T5-770-GV 2.004.1054 Feb.22,2024 T55-770 2.004.1059.001 Feb.21,2024 TSS-1070 2.004.1059.001 Feb.21,2024	Past 3 Months (11/22/2023 - 02/22/2024) Most Utilized Least Utilized 3.61% SanjeevG-1 0.05% RoomA
• Critical 0	Error 2Notice 5	Model Version Updated T5-770 2.004.1054 Feb 22.2024 T5s-770 2.004.1059.001 Feb 21.2024 T5s-1070 2.004.1059.001 Feb 21.2024 T5v-770 2.004.1059.001 Feb 21.2024 T5v-770 2.004.1059.001 Feb 21.2024 T5-770 2.004.1059.001 Feb 21.2024 T5-770 2.004.1059.001 Feb 21.2024 T5-1070 2.004.1059.001 Feb 21.2024	Past 3 Months (11/22/2023 - 02/22/2024) Most Utilized 3.61% SanjeevG-1 0.59% RoomB 0.10% PCD_Video_PT_U
• Critical 0	• Error 2	Model Version Updated T5-770-GV 2.004.1054 Feb.22,2024 TSS-770 2.004.1059.001 Feb.21,2024 TSS-1070 2.004.1059.001 Feb.21,2024 TSW-770 2.004.1059.001 Feb.21,2024 TSV-770 2.004.1059.001 Feb.21,2024 TS-770 2.004.1059.001 Feb.21,2024	Past 3 Months (11/22/2023 - 02/22/2024) Most Utilized 3.61% SanjeevG-1 0.59% RoomB 0.10% PCD_Video_PT_U
• Critical 0	• Error 2 II Notice 5 .::	Model Version Updated T5-770 2.004.1054 Feb 22.2024 T5s-770 2.004.1059.001 Feb 21.2024 T5s-1070 2.004.1059.001 Feb 21.2024 T5v-770 2.004.1059.001 Feb 21.2024 T5v-770 2.004.1059.001 Feb 21.2024 T5-770 2.004.1059.001 Feb 21.2024 T5-770 2.004.1059.001 Feb 21.2024 T5-1070 2.004.1059.001 Feb 21.2024	Past 3 Months (11/22/2023 - 02/22/2024) Most Utilized 3.61% SanjeevG-1 0.59% RoomB 0.10% PCD_Video_PT_U
Critical 0 Warning 0 Second Usage Over T Past 3 Months (11/26/2023-02/22	● Error 2 ■ Notice 5 : ime Ø ♂ −	Model Version Updated T5-770-GV 2.004.1054 Feb 22, 2024 T55-770 2.004.1059.001 Feb 21, 2024 T55-770 2.004.1059.001 Feb 21, 2024 T55-770 2.004.1059.001 Feb 21, 2024 T5W-770 2.004.1059.001 Feb 21, 2024 T5-770 2.004.1059.001 Feb 21, 2024 T5-770 2.004.1059.001 Feb 21, 2024 T5-1070 2.004.1059.001 Feb 21, 2024	Past 3 Months (11/22/2023 - 02/22/2024) Most Utilized 3.61% SanjeevG-1 0.59% RoomB 0.10% PCD_Video_PT_U
 Critical 0 Warning 0 Room Usage Over T 	● Error 2 ■ Notice 5 : ime Ø ♂ −	Model Version Updated T5-770 GV 2.004.1054 Feb 22.2024 T55-770 2.004.1059.001 Feb 21.2024 T55-770 2.004.1059.001 Feb 21.2024 T50-770 2.004.1059.001 Feb 21.2024 T50-770 2.004.1059.001 Feb 21.2024 T5-770 2.004.1059.001 Feb 21.2024 T5-1070 2.004.1059.001 Feb 21.2024 T5-1070 2.004.1059.001 Feb 21.2024	Past 3 Months (11/22/2023 - 02/22/2024) Most Utilized 3.61% SanjeevG-1 0.59% RoomB 0.10% PCD_Video_PT_U
Critical 0 Warning 0 Second Usage Over T Past 3 Months (11/26/2023-02/22	● Error 2 ■ Notice 5 : ime Ø ♂ −	Model Version Updated T5-770-GV 2.004 1054 Feb 22, 2024 T55-770 2.004 1059 001 Feb 21, 2024 T55-1070 2.004 1059 001 Feb 21, 2024 TSS-1070 2.004 1059 001 Feb 21, 2024 TS-770 2.004 1059 001 Feb 21, 2024 T5-1070 2.004 1059 001 Feb 21, 2024 T5-1070 2.004 1059 001 Feb 21, 2024 TS-1070 2.004 1059 001 Feb 21, 2024 TS-30 2.002/22/2023-02/22/2024)	Past 3 Months (11/22/2023 - 02/22/2024) Most Utilized 3.61% SanjeevG-1 0.59% RoomB 0.10% PCD_Video_PT_U
Critical 0 Warning 0 Second State S	● Error 2 ■ Notice 5 : ime Ø ♂ −	Model Version Updated T5-770-GV 2.004 1054 Feb 22.2024 T55-770 2.004 1059.001 Feb 21.2024 T55-770 2.004 1059.001 Feb 21.2024 TS5-1070 2.004 1059.001 Feb 21.2024 TS-770 2.004 1059.001 Feb 21.2024 T5-1070 2.004 1059.001 Feb 21.2024 T5-1070 2.004 1059.001 Feb 21.2024 TS-1070 2.004 1059.001 Feb 21.2024 TS-3 Months (11/22/2/2023 - 02/22/2024) : Average Uptime 62.74% Uptime Incidents	Past 3 Months (11/22/2023 - 02/22/2024) Most Utilized 3.61% SanjeevG-1 0.59% RoomB 0.10% PCD_Video_PT_U
Critical 0 Varning 0 Same Cover T Past 3 Months (11/26/2023 - 02/22 100 75 50	● Error 2 ■ Notice 5 : ime Ø ♂ −	Model Version Updated T5-770-GV 2.004 1054 Feb 22, 2024 T55-770 2.004 1059 001 Feb 21, 2024 T55-1070 2.004 1059 001 Feb 21, 2024 TSS-1070 2.004 1059 001 Feb 21, 2024 TS-770 2.004 1059 001 Feb 21, 2024 T5-1070 2.004 1059 001 Feb 21, 2024 T5-1070 2.004 1059 001 Feb 21, 2024 TS-1070 2.004 1059 001 Feb 21, 2024 TS-30 2.004 1059 001	Past 3 Months (11/22/2023 - 02/22/2024) Most Utilized Least Utilized 0.5% RoomB 0.10% PCD_Video_PT_U
Critical 0 Varning 0 Same and the second seco	Error 2 Notice 5 .:: ime	Model Version Updated T5-770-GV 2.004 1054 Feb 22.2024 T55-770 2.004 1059.001 Feb 21.2024 T55-770 2.004 1059.001 Feb 21.2024 T55-1070 2.004 1059.001 Feb 21.2024 T5-770 2.004 1059.001 Feb 21.2024 T5-1070 2.004 1059.001 Feb 21.2024 T5-1070 2.004 1059.001 Feb 21.2024 T5-1070 2.004 1059.001 Feb 21.2024 T5-3 Months (11/22/2/2023 - 02/22/2024) : Average Uptime 62.74% Uptime Incidents	Past 3 Months (11/22/2023 - 02/22/2024) Most Utilized 3.61% SanjeevG-1 0.59% RoomB 0.10% PCD_Video_PT_U

Navigate the Service

The XiO Cloud service provides the following informational controls on the top right of the page.


Informational Controls

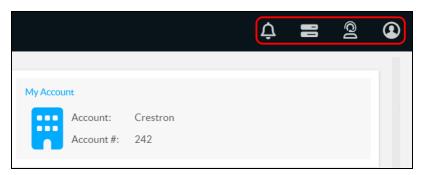

- Select the alerts button 🛕 to display recent What's New messages for the XiO Cloud account. For more information, refer to What's New Message on page 125.
- Select the progress tracker button
 to display progress status for tasks initiated within the XiO Cloud service. For more information, refer to Progress Tracker on page 126.
- Select the support button 2 to display options for contacting Crestron True Blue support via email, chat, or phone.
- Select the profile button 💽 to display general information for the active XiO Cloud account. A **Sign out** button is also provided that is used to sign out of the service.

The XiO Cloud service also provides a navigation menu on the left of the page. The navigation menu is used to access the primary functions of the service.

Navigation Menu

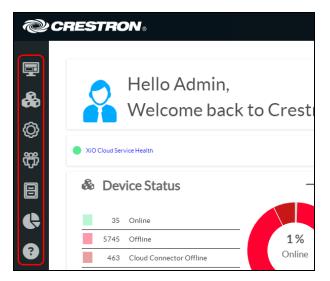

The following navigation controls are provided:

- Select the **Home** button 🔄 to access the account dashboard page. The home page is displayed by default after logging into the service.
- Select the Groups button log to access the group tree, which contains all groups, rooms, and devices in the account.
- Select the **Settings** button 🛞 to access account settings and to manage alerts.
- Select the **Users** button \mathfrak{G} to view and manage account users.
- Select the **File Upload** button 🗉 to view and manage uploaded files.
- Select the **Historical Reports** button C to generate reports for various data sets within the account (in early access period).
- Select the **Help** button ? to view documentation for getting started with the XiO Cloud service.

Certain navigation controls show an expanded menu when selected. For example, selecting the **Groups** button 🚳 shows the group tree in the expanded menu.

- Expanded menus can be collapsed by selecting the collapse button 🚾 in the header bar.
- When the menu is collapsed, select the expand button 🖬 to display the menu again.

Build the Environment

The XiO Cloud service provides an environment that represents the organizational structure of an enterprise.


The XiO Cloud service environment consists of groups, rooms, desks, and devices. XiO Cloud administrators are able to create virtual buildings with multiple floors that represent their organization's workspaces. Once a building has been created, rooms or desks that contain devices can be added using the group tree. Devices may be associated with rooms or desks once they are claimed by the service. Once devices are associated with rooms or desks, actions may be performed simultaneously for all grouped devices.

Use the following procedures to build the XiO Cloud service environment.

Create the Building Address Book

The building address book represents all workspaces with rooms or desks across an organization.

The **SETTINGS** menu for managing the building address book is located in the settings panel, which may be accessed by clicking the **Settings** button 🖗 in the navigation menu.

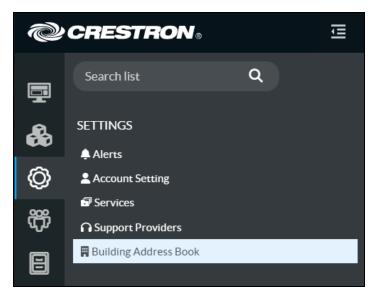

Select **Building Address Book** in the **SETTINGS** menu. A **Building Address Book** page is displayed to the right of the **SETTINGS** menu.

Building List Spa	ace Properties						
	0					_	- Add Building
	Q						- Add Bullding
Building Name $\uparrow \downarrow$	Address ↑↓	Country ↑↓	State ↑↓	City ↑↓	Nickname $\uparrow\downarrow$	Time Zone $\qquad \text{if}$	
Crestron Building	Ecospace, 6B	India	Karnataka	Bangalore Urban	СВ	-	Ť
22 Link Drive	22 link drive	United States	New Jersey	Rockleigh	22link	-	i
Colosseum	1 Piazza del Colosseo	Italy	Rome	Roma	Roman Colosseum		
Primary Office	1 Corporate Drive	United States	New Jersey	Newark	Office1	(UTC-05) America/New_Yor k	Ŧ

The building address book allows for new buildings to be created and existing buildings to be edited or deleted. In addition, the desk and space types that are available for reservation within the organization can be selected or customized.

Manage Buildings

Select the **Building List** tab in the **Building Address Book** page to show all buildings that have been created for the XiO Cloud account.

Filter Q + Add Build							- Add Building
Building Name ↑↓	Address ↑↓	Country _{↑↓}	State ↑↓	City ↑↓	Nickname ↑↓	Time Zone $\uparrow \downarrow$	
Crestron Building	Ecospace, 6B	India	Karnataka	Bangalore Urban	СВ	-	Ŧ
22 Link Drive	22 link drive	United States	New Jersey	Rockleigh	22link		Ŧ
Colosseum	1 Piazza del Colosseo	Italy	Rome	Roma	Roman Colosseum		Ŧ
Primary Office	1 Corporate Drive	United States	New Jersey	Newark	Office1	(UTC-05) America/New_Yor k	¥

Buildings are listed in a table that provides the following information:

- **Building Name**: The user-defined building name. Selecting this name allows the building to be edited.
- Address: The physical address of the building.
- **Country**: The country where the building is located.
- **State**: The state or province where the building is located.
- City: The city where the building is located.
- **Nickname**: An alternate or shorthand name for the building.
- **Time Zone**: The time zone of the building.

NOTE: Support for time zones was added in XiO Cloud version 1.62. Any buildings created before this release will have their time zones assigned automatically based on the configured building address. If the building address cannot be verified, then the default "(UTC +00) UTC" time zone will be assigned to the building instead. Time zones can be changed at any time by editing the building.

By default, buildings are sorted in alphabetical order. Use the controls provided in each column header to sort buildings in ascending or descending order based on the column data. Use the search field to locate a specific building that matches the search criterion. The table also provides navigational controls that can be used to move between pages and set the number of table rows per page.

Create a New Building

To create a new building in the building address book:

1. Select the **Building List** tab in the **Building Address Book** page.

	Q						Add Building
Building Name ↑↓	Address ↑↓	Country _{↑↓}	State ↑↓	City ↑↓	Nickname _{↑↓}	Time Zone $\uparrow \downarrow$	
Crestron Building	Ecospace, 6B	India	Karnataka	Bangalore Urban	СВ		Î
22 Link Drive	22 link drive	United States	New Jersey	Rockleigh	22link		Î
Colosseum	1 Piazza del Colosseo	Italy	Rome	Roma	Roman Colosseum		Ŧ
Primary Office	1 Corporate Drive	United States	New Jersey	Newark	Office1	(UTC-05) America/New_Yor k	¥

2. Select + Add Building. The Add Building dialog box is displayed.

+ Add Building		×
Building Setup		
Building Name *		
Building NickName		
Address *		
Country *	Select a Country	
State / Province *		
City *	~	
Postal Code *		
Total Number of Floor(s)	1	
Selected Floor(s) *	1 ~	
Time Zone *	Select a Time Zone	
		Add Building

- 3. Enter the following information for the building:
 - **Building Name**: *Required.* Enter the building name. This name will be displayed for the building throughout the XiO Cloud service.
 - Building NickName: Enter an alternate or shorthand name for the building.
 - Address: *Required.* Enter the physical street address for the building.

- **Country**: *Required.* Use the drop-down menu to select the country where the building is located.
- **State / Province**: *Required.* If applicable, select the state or province where the building is located. The available selections are populated based on the value selected for **Country**.
- **City**: *Required.* Enter the city where the building is located.
- **Postal Code**: *Required*. Enter the postal code associated with the building address.
- **Total Number of Floor(s)**: Enter the total number of floors of the building that contains the organization, including floors that do not belong to the organization.
- Selected Floor(s): *Required.* Use the drop-down menu to select the specific floors of the building that belong to the organization. A filled check box next to the floor number indicates that is has been selected. The available selections are populated based on the number entered for Total Number of Floor(s).

For example, if your organization is located on the eighth, ninth, and tenth floors of a building with 20 floors, select **8**, **9**, and **10** from the drop-down menu.

NOTE: Six floor levels with negative values are also provided in the **Selected Floor (s)**drop-down menu to support underground or basement floors.

- **Time Zone**: *Required.* Use the drop-down menu to select the time zone of the building.
- 4. Once all required fields have been populated, select **Add Building**. The building is added to the table in the **Building Address Book** page.

Edit a Building

To edit an existing building, select the building name within its table row in the **Building Address Book** page. The **Edit Building** dialog box is displayed.

+ Edit Building		x
Building Setup		
Building Name *	Primary Office	
Building NickName Address *	Office1 1 Corporate Drive	
Country * State / Province *	United States	
City * Postal Code *	Newark ~	
Total Number of Floor(s) Selected Floor(s) *	5	
Time Zone *	1, 2, 3, 4, 5 (UTC-05) America/New_York	
		Update Building

Once all changes have been made, select Update Building to return to the Building Address Book page.

Delete a Building

To delete an existing building, select the trash can icon within the building's table row in the **Building Address Book** page. A confirmation prompt is displayed asking whether the building should be deleted.



Select **Yes** to delete the building or **No** to cancel the deletion.

NOTE: A building cannot be deleted if any rooms or desks are associated with it. If you attempt to delete a building with associated rooms or desks, a message window is displayed stating that all rooms and desks must be deleted or moved from the building before it can be deleted. For more information, refer to Delete a Desk on page 41.

Manage Space Properties

Select the **Space Properties** tab in the **Building Address Book** page to configure the desk and space types that can be reserved within the organization.

Building Lis	t Space Properties
Desk Type	Space Type
Show	Desk Type
	Sit/Stand
\checkmark	Large Desk
	Standard
	Single Privacy Booth
\checkmark	Double Privacy Booth
	Small Common Area
	Huddle Box
	Private Office
	Bench Seat
\checkmark	Touch Down Seat

Select **Desk Type** or **Space Type** to configure desk or space types, respectively.

Building List	Space Properties
Desk Type	Space Туре
Show	Space Туре
\checkmark	Meeting Room
	UC Room
\checkmark	Huddle Space
\checkmark	Boardroom
\checkmark	Executive Conference Room
\checkmark	Large Conference Room
\checkmark	Small Conference Room
\checkmark	Auditorium
	Training Room
\checkmark	Classroom

Ten default desk types and space types are provided. Fill the **Show** check box next to a desk or space type to make it available for selection when adding or editing a desk or room.

Additionally, all default desk or space types can be customized using the **Desk Type** or **Space Type** text fields.


Create the Group Tree

The group tree is in the environment panel, which may be accessed by selecting the **Groups** button 🗞 in the navigation menu.

The group tree is the primary organizational structure of the XiO Cloud environment. Top-level groups, rooms, and desks appear in the group tree once they are added to the environment. One or more subgroups, rooms, and desks may also be added under each group.

The group tree is located under the **ENVIRONMENT** menu on the left side of the configuration pages. Groups, subgroups, rooms, and desks are ordered alphabetically. A search field is provided at the top of the **ENVIRONMENT** menu that can be used to find items within the environment group tree. Hover the cursor over the right edge of the group tree to display a vertical blue bar that can be used to adjust the tree width.

Environment Menu

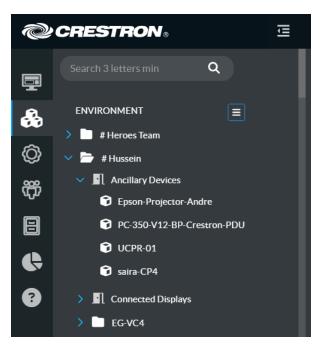


Manage Groups

Groups are added within the group tree. Groups provide a means for organizing rooms, desks, and subgroups into logical categories (typically representing the structure of an enterprise or building). Actions can be performed for multiple devices at once at the group level.


Add a Top-Level Group

To add a top-level group:

Select the ENVIRONMENT menu button to display a drop-down menu.
 Environment - Drop-Down Menu

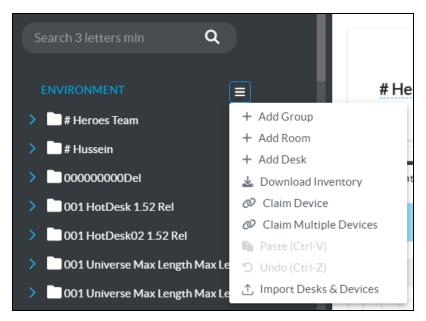

Select Add Group. A new group is added to the group tree.
 Environment - New Group

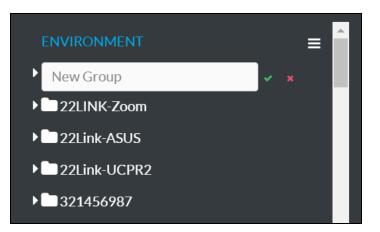

3. Enter a descriptive group name in the **New Group** text field. A group name must be at least three characters long.

NOTE: Each group name must be unique. If a duplicate group name is entered, a notification is displayed stating that the group name already exists.

4. Select the green check icon 🗹 or select **Enter** to save the group. Select the red **x** icon 🗮 to discard the group.

The group is reordered alphabetically in the top level of the group tree after it is added.

Select the group from the group tree to view and configure group settings. For more information, refer to Configure Settings for a Group of Devices on page 76.


Add a Subgroup

One or more subgroups may be added under the top-level group. A group hierarchy may contain up to eight levels.


To add a subgroup:

- 1. Position the cursor over the group name in the **ENVIRONMENT** menu to reveal its context menu.
- 2. Select the context menu button 🚍 for the group to display a drop-down menu.

Group - Drop-Down Menu

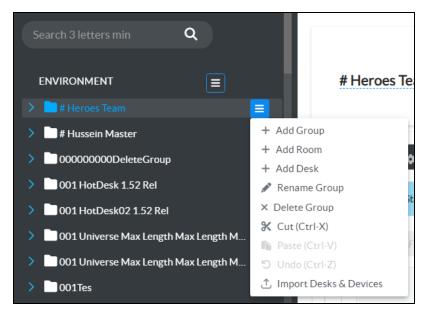

Select Add Group. A new subgroup is added under the selected group.
 Group - New Group

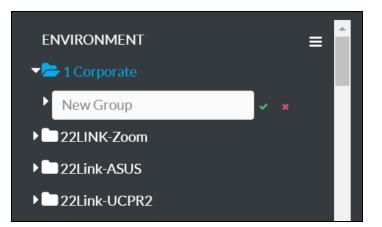

4. Enter a descriptive subgroup name in the **New Group** text field. A subgroup name must be at least three characters long.

5. Select the green check icon 🗹 or select **Enter** to save the subgroup. Select the red **x** icon 🗮 to discard the subgroup.

The subgroup is reordered alphabetically within its parent group after it is added.


Select the subgroup from the group tree to view and configure subgroup settings. For more information, refer to Configure Settings for a Group of Devices on page 76.

Rename a Group

Each group in the XiO Cloud service has a unique name, which allows the group to be identified and organized within the service. A group may be renamed as needed.


To change the group name in the group tree:

- 1. Position the cursor over the group name in the **ENVIRONMENT** menu to reveal its context menu.
- 2. Select the context menu button 🚍 for the group to display a drop-down menu.
 - Group Drop-Down Menu

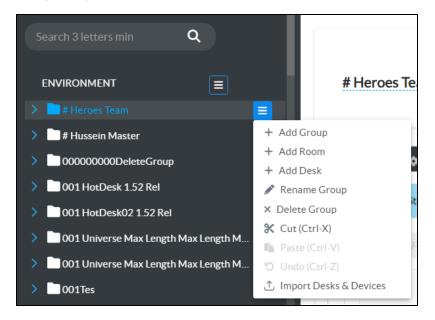

3. Select **Rename Group**. The group name becomes an editable text box.

Group - Edit Group Name

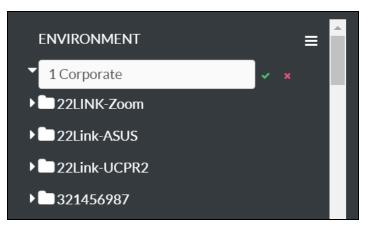

- 4. Enter a new group name in the text box. A group name must be at least three characters long.
- 5. Select the green check icon 🗹 or select **Enter** to save the group name. Select the red **x** icon 🗶 to discard the changes.


Delete a Group

Groups may be deleted from the XiO Cloud service environment as needed. A group that contains a subgroup may not be deleted until all subgroups are removed.

To delete a group from the group tree:

- 1. Position the cursor over the group name in the **ENVIRONMENT** menu to reveal its context menu.
- 2. Select the context menu button 🗮 for the group to display a drop-down menu.

Group - Drop-Down Menu

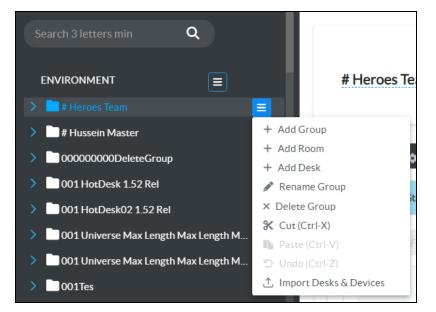

- 3. Select **Delete Group**. A confirmation dialog box is displayed.
- 4. Select **Yes** to delete the group or select **No** to cancel the deletion.

Manage Rooms

Rooms can be added within groups or at the top level of the group tree. Rooms are designed to represent physical rooms within an enterprise that contain all cloud-enabled devices. Devices can be added to rooms after they claimed into the XiO Cloud service. Rooms can also be tied to custom programming for monitoring, reporting, and control.

NOTE: As of XiO Cloud version 1.55, new rooms are added using the building address book function. An import tool is provided for existing deployments that associates all existing rooms with a building address book. For more information, refer to Associate Rooms with a Building on page 30.

Add a New Room

To add a new room:

Select the ENVIRONMENT menu button to display a drop-down menu.
 Environment - Drop-Down Menu

Search 3 letters min Q	
ENVIRONMENT	≡ #He
> # Heroes Team	+ Add Group
> # Hussein	+ Add Room
	+ Add Desk
> 00000000Del	🛓 Download Inventory 🛛 🖁
> 001 HotDesk 1.52 Rel	🖉 Claim Device
> 001 HotDesk02 1.52 Rel	🖉 Claim Multiple Devices
	Paste (Ctrl-V)
> 001 Universe Max Length Max Le	🕤 Undo (Ctrl-Z)
> 001 Universe Max Length Max Le	

2. Select Add Room. The Add Room dialog box is displayed.

+ Add Room			×	<
Building*	Select a Building (or Add New)	~	+	
Floor *	Select a Floor			
Room Name *				
Room Type	MeetingRoom			
	I		ave	

- 3. Enter the following information for the desk:
 - **Building**: *Required.* Use the drop-down menu to select a building that will be associated with the room from the building address book.

If the desired building is not shown, select **+ Add Building** to display the **Add Building** dialog box. For more information on adding a building, refer to Create a New Building on page 15.

- **Floor**: *Required*. Select the building floor where the room is located. The available selections are populated based on the floors configured for the building.
- **Room Name**: *Required.* Enter the room name. This name will be displayed for the room throughout the XiO Cloud service.
- 4. Select **Save**. The room is added to the group tree and is reordered alphabetically within its parent group after it is added.

Select the room from the group tree to view and configure group settings. For more information, refer to Configure Settings for a Group of Devices on page 76.

Edit a Room


Once a room has been added to the group tree, select it in the tree to open the room details page.

Room Details Space Type Meeting Room			ling Name Building 1				Time Zone (UTC-05)	America/New_Yor	k	
Status	Equipme	nt List G	iroup View	Alerts (2)						
	Q Dev	ice Model: All	~				± Đ	kport to CSV	lumns Sele	cted 🗸
Name	ţ↑	Device Model	¢↓	Firmware-Version	¢↓	Serial	¢↓	MAC Address	î↓	Online St
VC4_1		VC-4		4.0004.00057				00.01.29.98.05.76		
VC4-10		VC-4		4.0004.00057				$\{0,1,1,2,2,3,3,3,4,2,1,3,3,1,3,3,1,3,3,3,3,3,3,3,3,3,3,3,3$		

The following information is displayed for the room:

- The user-defined room name and the building address.
- Indicators that show the room health, whether the room is occupied (if it contains occupancysensing equipment), and whether the room is currently in maintenance mode.
- A **Room Details** section that displays the space type, building name, floor, and time zone.
- A Status tab that displays various room status controls and indicators if the XiO Cloud program connector has been configured. For more information, refer to XiO Cloud Program Connector on page 57.
- An **Equipment List** tab that displays the status of associated devices.
- A **Group View** tab that displays options for managing all devices in the room. For more information, refer to Configure Settings for a Group of Devices on page 76.
- An **Alerts** tab that displays any recent alerts that have been raised for the room. For more information, refer to Alerts on page 127.

An **Action** menu is also provided in the top right of the page that provides a **Edit Details** selection for editing the room details.

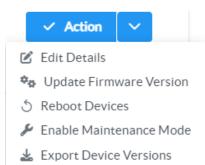

Select **Edit Details** to display editable fields for room settings.

	Room Name				Health	Occupied	Maintenance		✓ Save Details ✓
Space Details									
Space Type		Building Name			Floor				
Select a Room Type	~	6 Volvo		~	1 ~				
Global Filter Q D	evice Model:	~					🛓 Export to	o CSV	12 Columns Selected
Name 1.	Device Model	†↓	Firmware-Version	ţţ	Serial	ţţ	MAC Address	ţ↑	Online Status
Loading data									
				1	» 25 V				

The following settings can be edited:

- **Room Name**: Enter the room name. This name will be displayed for the desk throughout the XiO Cloud service.
- **Space Type**: Use the drop-down menu to select the space type. The available selections are populated based on the space types configured for the building address book. For more information, refer to Manage Space Properties on page 17.
- **Building Name**: Use the drop-down menu to select a building that will be associated with the room from the building address book.
- **Floor**: Select the building floor where the room is located. The available selections are populated based on the floors configured for the building.

Select **Save Details** to save any changes. A toast notification is shown indicating that the changes have been saved.

Rename a Room


Each room in room-based XiO Cloud accounts has a unique name, which allows the room to be identified and organized within the service. A room may be renamed as needed.

To change the room name in the group tree:

- 1. Position the cursor over the group name in the **ENVIRONMENT** menu to reveal its context menu.
- 2. Select the context menu button 🚍 for the group to display a drop-down menu.

3. Select **Rename Room**. The room name becomes an editable text box.

Room - Edit Room Name

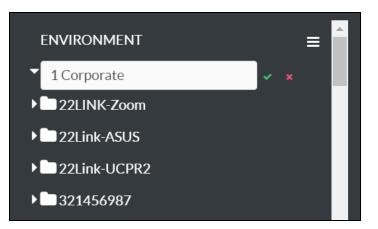

- 4. Enter a new room name in the text box. A room name must be at least three characters long.
- 5. Select the green check icon 🗹 or select **Enter** to save the room name. Select the red **x** icon 🗮 to discard the changes.

Delete a Room

Rooms may be deleted from an XiO Cloud account environment as needed. A room that contains a device may not be deleted until all child devices removed.

To delete a room from the group tree:

- 1. Position the cursor over the group name in the **ENVIRONMENT** menu to reveal its context menu.
- 2. Select the context menu button 🔁 for the group to display a drop-down menu.
- 3. Select **Delete Room**. A confirmation dialog box is displayed.
- 4. Select **Yes** to delete the group or select **No** to cancel the deletion.

View Device Settings

Once devices have been associated with the room, navigate to the **Equipment List** section of the room status page to view the following device settings.

Status	Equipmen	t List	Group View	Alerts							
	Q Devic	e Model: All	~						± Đ	aport to CSV 12 Columns Sele	ected 🗸
Name	î↓	Device Model	ţ↑	Firmware-Version	ţ↑	Serial ↑↓	MAC Address	ţ↑	Online Status	↑↓ Pending Settings Delivery	†↓ IP,
VC4		VC-4		5.0000.5998.22384		000c290342c9000c290342	00.0c.29.03.00.0c		~	No	1
						« < 1 > »	25 🗸				

- **Device Name**: The device name in XiO Cloud.
- Device Model: The device model.
- Firmware Version: The firmware version running on the device.
- **Serial**: The device serial number.

- **MAC Address**: The MAC address of the device network adapter used to connect to the XiO Cloud service.
- Online Status: Indicates whether the device is reporting online ♥ or offline ⑧ within XiO Cloud. Crestron XiO Cloud Gateway connected devices that are reporting offline show a cloud connector offline icon ♠.
- **Pending Settings Delivery**: Indicates whether device settings changed in XiO Cloud are pending delivery to the device.
- IP Address: The current device IP address.
- Hostname: The device host name.
- **Application Mode**: If applicable, indicates the application mode that is running on the device.
- **DHCP Enabled**: Indicates whether DHCP is turned on or off for the device.
- **Room Status**: If applicable, indicates status of the room for devices with room scheduling capabilities.
- **Calendar Connection**: If applicable, indicates status of the calendar connection for devices with room scheduling capabilities.

An **Actions** column is also provided that allows the device to be configured or deleted. For more information on configuring a device, refer to Manage Devices on page 68.

The data that is displayed in the device table can be customized by filtering the table columns. By default, 12 columns are displayed that contain the data described in the list above.

To select or deselect table columns for the device status table, expand the drop-down menu at the top right of the table. Then, select or deselect an item in the menu to display or hide that column from the table, respectively. Use the check box at the top of the menu to select or deselect all columns.

NOTE: The device status table will reset to its default settings after logging out of the XiO Cloud service.


The device status table can be downloaded as a CSV file by selecting the **Export to CSV** button at the top right of the table. The CSV file will include all table columns that have been selected as described above.

Associate Rooms with a Building

As of XiO Cloud version 1.55, new rooms are added using the building address book function. An import tool is provided for existing deployments that associates all existing rooms with a building address book.

To associate rooms with a building using the import tool:

1. Select the **Settings** button 🔯 in the navigation menu.

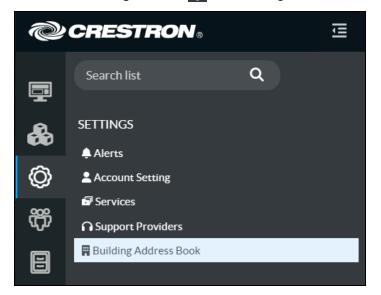

2. Select **Building Address Book**. A **Building Address Book** page is displayed to the right of the **SETTINGS** menu.

Building List Spa	ace Properties						
	Q						- Add Building
Building Name $\uparrow\downarrow$	Address ↑↓	Country ↑↓	State ↑↓	City ↑↓	Nickname $\uparrow \downarrow$	Time Zone $\uparrow \downarrow$	
Crestron Building	Ecospace, 6B	India	Karnataka	Bangalore Urban	СВ		n
22 Link Drive	22 link drive	United States	New Jersey	Rockleigh	22link		n 💼
Colosseum	1 Piazza del Colosseo	Italy	Rome	Roma	Roman Colosseum		N 🕯
	1 Corporate Drive	United States	New Jersey	Newark	Office1	(UTC-05) America/New_Yor	N 🗑

3. Select the door icon \mathbf{I} in the table row of the desired building address book. An **Associate Rooms** dialog box is displayed.

NOTE: The door icon appears only if there are rooms in a deployment that are not associated with in address book. Once all rooms have been associated, this selection is no longer available.

ssociate Room - Com	
Total Unassociated Rooms 298	Total Floors 1
Filter Q Select All	Filter Q
Jnassociated Rooms	Com Floors
> 06-Volvo (1 Room)	S Undo
> 1Suresh_XIO_TSW70 (2 Rooms)	
AdvancedZoomControl (5 Rooms)	
> AIOSB Performance (2 Rooms)	
> Akshay (2 Rooms)	
> AM-QE Lab (1 Room)	
AM200/300 Performance Lab (7 Rooms)	
AM3K - Flex QE Lab (7 Rooms)	
ASUS_Zoom (1 Room)	
Asus/Skull Temp	

- 4. Drag rooms from the **Unassociated Rooms** column into the appropriate floor of the building within the **[Building] Floors** column. The **Unassociated Rooms** column matches the structure of the XiO Cloud group tree for the account.
 - Enter text into the filter text boxes to filter room, group, and floor data based on the entered text.
 - Select **Select All** to select all rooms within the **Unassociated Rooms** column.
 - Select **Undo** to undo the last performed action.
 - Select **Revert** to revert all rooms back to the **Unassociated Rooms** column.

otal Unassociated Rooms 296	Total Floors 1
Filter Q Select All	Filter Q
Inassociated Rooms	Com Floors
✓ ■ 06-Volvo (1 Room)	5 Undo
• Windows-Engines	Soundbars
 ISuresh_XIO_TSW70 (2 Rooms) 	 X70s
• TSW-70	
• ttest	
 AdvancedZoomControl (5 Rooms) 	
AdvancedZoomControl	
• Harshit	
· Calvin	
• Mayank	

5. Once all rooms have been associated, select **Associate Rooms**. All rooms are associated with the selected floors of the building address book.

Manage Desks

For accounts that use desk scheduling, desks can be added to groups and subgroups within the group tree. After a desk has been added, it can be associated with a building from the building address book and then assigned a unique desk scheduling device and scheduling calendar address.

Import Desks and Devices

Desks and their associated desk scheduling devices can be mass provisioned into the XiO Cloud service via a CSV file. Once the CSV file is imported successfully, all new desks and devices will be added to the appropriate buildings and floors within the XiO Cloud environment tree.

To import desks and devices into the XiO Cloud service:

1. Create a new CSV file with the following header columns in the first row. The name of each header column must match the following items exactly.

NOTE: A sample CSV file with prepopulated header columns can also be downloaded from the **Import Desks & Devices** dialog box that is described later in this procedure.

- Building Name
- Floor
- Desk Name
- Desk Type
- Calendar Email

- Serial
- MAC Address
- 2. For each desk and associated device, enter the following data in the appropriate columns of a new table row. Each desk must have its own table row.
 - **Building Name**: The building that will be associated with the desk. The building must have already been created in the building address book prior to importing the CSV file.
 - **Floor**: The building floor where the desk is located. The floor must match one of the floors configured for the building.
 - **Desk Name**: The desk name that will be displayed for the desk throughout the XiO Cloud service and in the Desk Scheduling UI on the touch screen.
 - **Desk Type**: The desk type. The desk type must match one of the desk types configured for the building address book. For more information, refer to Manage Space Properties on page 17.
 - **Calendar Email**: The unique scheduling calendar address that will be paired with the desk to control reservations.
 - Serial: The serial number of the associated touch screen.
 - MAC Address: The MAC address of the associated touch screen.


NOTE: The **Serial** and **MAC Address** fields are not required to create a desk from the CSV file. Desk scheduling devices can be associated manually with a desk at a later time.

Refer to the following mock CSV file as an example.

Building Name	Floor	Desk Name	Desk Type	Calendar Email	Serial	MAC Address
Corporate HQ	9	D901	Standard	901@company.onmicrosoft.com	1234567890	00.11.22.33.44
Corporate HQ	9	D902	Standard	902@company.onmicrosoft.com	2345678901	11.22.33.44.55
Corporate HQ	10	D1001	Large	1001@company.onmicrosoft.com	3456789012	22.33.44.55.66
Corporate HQ	10	D1002	Large	1002@company.onmicrosoft.com	4567890123	33.44.55.66.77

3. Save the CSV file to an accessible location on the local computer.

4. Select the context menu button 🗮 for the **ENVIRONMENT** menu to display a drop-down menu.

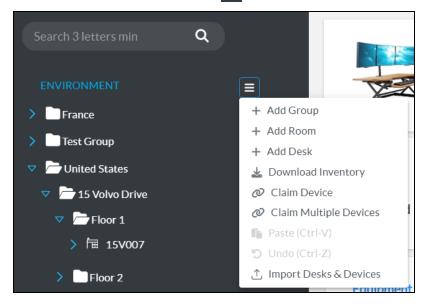

5. Select Import Desks & Devices. The Import Desks & Devices dialog box is displayed.

NOTE: The **Import Desks & Devices** selection is also available in the context menu for groups and subgroups. Making this selection at the group level will limit the import to that group.

×
address
Close

6. Select **Choose**, and then select the CSV file created earlier in this procedure. The CSV file is shown in the dialog box if it is valid.

Import Desks & D	esk Devices		×
	e desks, upload a .CSV file with I pairs are optional, and can be ir	Desk ID, Building Name, Email & De nported later.	sk Type. (Sample) MAC address
+ Choose	🕞 Open		
	Sample.csv	132 B	×
			Close

7. Select **Open**. The **Import Validation** dialog box is displayed.

Filter							Total Des		s Found 0		
Building Name TJ	Floor	T↓	Desk Name	T↓	Desk Type	Ţ↓	Calendar Email 🛛	Serial	Ţ↓	MAC Address	Ţ↓
15 Volvo Drive		1	Test01		Standard		test@test.onmicros				

The **Import Validation** dialog box shows the total number of desks that will be imported and reports any errors that are found within the CSV file data. Each row of the CSV file is shown and can be modified within the dialog box. The following controls are provided:

- Use the **Filter** function to filter the CSV file table based on the entered information.
- Use the sorting controls in the table headers to sort the data in that column.
- Select **Export.csv** to export the provided CSV file to the local computer.
- Fill the **Show Errors Only** check box to show only the table rows that contain errors. Any data with errors is shown with red text. Hover over an error to view a pop-up description explaining the error.
- Select within any table cell to edit the data within that cell.
- 8. Select **Import** once all errors have been corrected. The CSV file upload progress begins.

To check the status of the CSV file upload, select the progress tracker button \blacksquare at the top right of the page. A **Progress Tracker** dialog box is shown that shows the progress of the import task.

NOTE: Large CSV files may take a considerable amount of time to upload. The status of the upload is always available within the **Progress Tracker** dialog box. For more information, refer to Progress Tracker on page 126.


Progress Tracker									
Filter Q									
Task Name	¢↓	Started At	ţ↓	Status	î↓	Description	¢↓	Initiated By $\uparrow\downarrow$	Actions
Desk Import		11/09/2023 12:53 PM		 11/09/2023 12:53 PM 		Sample.csv		lan@CCCDirectory.mail.onmicro	× 🛓

Once the CSV file has been uploaded successfully, a toast notification is shown indicating this. The group tree is updated to show the new desks and child devices.

Add a New Desk

To add a new desk to a group manually:

- 1. Position the cursor over the group name in the **ENVIRONMENT** menu to reveal its context menu.
- 2. Select the context menu button 🚍 for the group to display a drop-down menu.

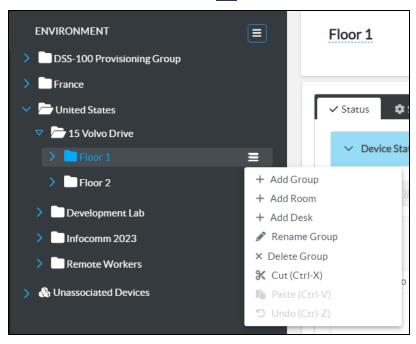

3. Select Add Desk. The Add Desk dialog box is displayed.


Add Desk		×
Building*	Select a Building (or Add New)	
Floor*	+ Add Building Select a Floor ~	
Desk Name *		
Desk Type Calendar Email *	Select a Desk Type	
		B Save

- 4. Enter the following information for the desk:
 - **Building**: *Required.* Use the drop-down menu to select a building that will be associated with the desk from the building address book.

If the desired building is not shown, select **+ Add Building** to display the **Add Building** dialog box. For more information on adding a building, refer to Create a New Building on page 15.

- **Floor**: *Required.* Select the building floor where the desk is located. The available selections are populated based on the floors configured for the building.
- **Desk Name**: *Required.* Enter the desk name. This name will be displayed for the desk throughout the XiO Cloud service and in the Desk Scheduling UI on the touch screen.
- **Desk Type**: Use the drop-down menu to select the desk type. The available selections are populated based on the desk types configured for the building address book. For more information, refer to Manage Space Properties on page 17.
- **Calendar Email**: *Required.* Enter a unique scheduling calendar address that will be paired with the desk to control reservations.

5. Select **Save**. The desk is added to the group and is reordered alphabetically within its parent group after it is added.

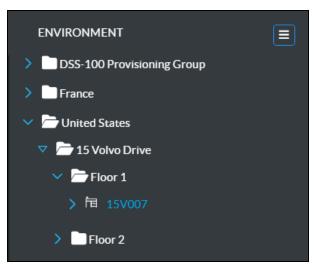

Edit a Desk

Once a desk has been added to the XiO Cloud environment tree, select it in the tree to open the desk details page.


	vbbc Crestro		ace, 6B Bangalore	Urban				Action
Details Desk Type Bench Seat	Calendar bdfb@g	Email gmail.com		ling Name stron Building	Floor 3	Time Zone (UTC+00) UTC		
Equipment List								
Cloud Status 🚯	Calendar 📵	Device Name	Device Model	MAC Address	Serial #	IP Address	Hostname	Actions
				assigned devices				

The following information is displayed for the desk:

- The user-defined desk name and the building address.
- A **Details** section that displays the desk type, scheduling calendar email address, building name, floor, and time zone.

• An **Equipment List** section that displays the status of the associated desk scheduling device (once added) and provides controls for adding a device.

An **Action** menu is also provided in the top right of the page that provides a **Edit Desk Details** selection for editing the desk.



Select **Edit Desk Details** to display editable fields for desk settings.

	Desk Nan 15V007	ne					√ Sa	ave Changes 🛛 🗸
Details								
Desk Type Standard	×	Calendar Emai	7.onmicrosoft.com	15 Volvo		~	Floor 1	~
Equipment List								
Cloud Status 📵	Calendar 🚯	Device Name	Device Model	MAC Address	Serial #	IP Address	Hostname	Actions
				assigned devices				

The following settings can be edited:


- **Desk Name**: Enter the desk name. This name will be displayed for the desk throughout the XiO Cloud service and in the Desk Scheduling UI on a TSS-470E touch screen.
- **Desk Type**: Use the drop-down menu to select the desk type. The available selections are populated based on the desk types configured for the building address book. For more information, refer to Manage Space Properties on page 17.
- **Calendar Email**: Enter the unique scheduling calendar address that will be paired with the desk to control reservations.
- **Building Name**: Use the drop-down menu to select a building that will be associated with the desk from the building address book.
- **Floor**: Select the building floor where the desk is located. The available selections are populated based on the floors configured for the building.

Select **Save Changes** to save any changes. A toast notification is shown indicating that the changes have been saved.


Rename a Desk

To rename an existing desk from the XiO Cloud environment tree:

- 1. Position the cursor over the desk name in the **ENVIRONMENT** menu to reveal its context menu.
- 2. Select the context menu button 🚍 for the desk to display a drop-down menu.

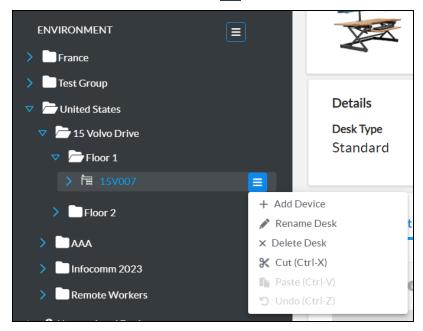

3. Select **Rename Desk**. The room name becomes an editable text box.

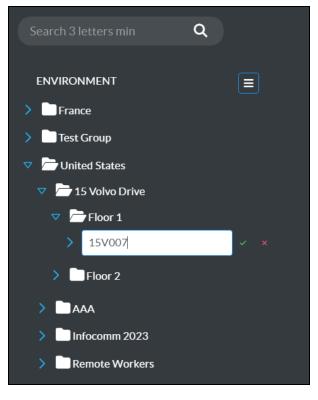


4. Enter a new desk name in the text box. A room name must be at least three characters long.

5. Select the green check icon 🗹 or press **Enter** to save the room name. Select the red **x** icon **x** to discard the changes.

Delete a Desk

To delete an existing desk:

- 1. Position the cursor over the desk name in the **ENVIRONMENT** menu to reveal its context menu.
- 2. Select the context menu button 🚍 for the desk to display a drop-down menu.

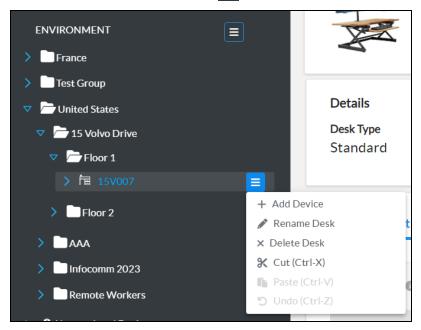

3. Select **Delete Desk**. A confirmation prompt is displayed asking whether the desk should be deleted.

Delete Desk	×
Are you sure you want to delete 15V007? Devices associated with the desk will be returned to Unassociated Devices.	
	× Delete Desk

4. Select **Delete Desk** to delete the desk or close the message window to cancel the deletion.

NOTE: If a desk scheduling device is associated with the desk, the device will become unassociated with the desk and return to the **Unassociated Devices** node within the XiO Cloud environment tree.

Associate a Desk Scheduling Device with a Desk

Each desk within the XiO Cloud environment tree must be associated with a unique desk scheduling device. Once a device is associated with the desk, status and settings for the device and scheduling calendar connection can be viewed.

NOTE: The following procedure assumes that the desk scheduling device has been claimed to the XiO Cloud service and is not associated with another desk. For more information on how to claim a device, refer to Claim Devices on page 44.

To associated a desk scheduling device with a desk:

1. Select the desk within the XiO Cloud environment tree to display its status page.

	vbbc Crestro		ace, 6B Bangalore	Urban				✓ Action ✓
Details Desk Type Bench Seat	Calendar bdfb@g	Email mail.com		ling Name stron Building	Floor 3	Time Zone (UTC+00) UTC		
Equipment List								
Cloud Status 🚯	Calendar 🚯	Device Name	Device Model	MAC Address	Serial #	IP Address	Hostname	Actions
				assigned devices				

2. Select **Click here to add new devices** in the **Equipment List** section. The **Add Device** dialog box is displayed.

NOTE: Alternately, the **Add Device** selection in the desk's environment tree context menu can be used to open the **Add Device** dialog box.

Add Device			×
Add Device From	Unassociated Devices		
Select Device *	Select a Device *No Devices in Unassociated Devices	~	
		+ Add Device	

- 3. From the **Unassociated Devices** tab, use the **Select Device** drop-down menu to select an unassociated desk scheduling device within the XiO Cloud account.
- 4. Select **Add Device** once the unassociated desk scheduling device has been selected. The device is added to the **Equipment List** section of the desk status page.

NOTE: It may take up to 15 minutes for the device to establish a connection with the XiO Cloud service.

quipment List								
Cloud Status 🚯	Calendar 🚯	Device Name	Device Model	MAC Address	Serial #	IP Address	Hostname	Actions
~	~	TSS-470E- C4426818C442	TSS-470E	c4.42.68.18.c4.42	2249CRX02249	192.168.1.92	TSS-470E- C4426818C442	¢ 🗑

View Device Settings

Once the desk scheduling device has been associated with the desk, navigate to the **Equipment List** section of the desk status page to view the following device settings.

Cloud Status 🕚	Calendar 🚯	Device Name	Device Model	MAC Address	Serial #	IP Address	Hostname	Actions
~	~	TSS-470E- C4426818C442	TSS-470E	c4.42.68.18.c4.42	2249CRX02249	192.168.1.92	TSS-470E- C4426818C442	¢ 🗑

Cloud Status: Indicates whether the device is reporting online or offline within XiO Cloud.
 A device is considered offline after it fails to respond to multiple call attempts issued five minutes after the device first reports as disconnected.

- **Calendar**: Reports the current status of the scheduling calendar connection:
 - ° Shows a green check icon ✔ if the scheduling calendar connection is active.
 - Shows a red x icon 💢 if the scheduling calendar connection is inactive.
 - Shows a question mark icon ⑦ if the scheduling calendar connection status is unknown (reported only if the device is showing as offline).
- Device Name: The device name in XiO Cloud.
- Device Model: The device model.
- **MAC Address**: The MAC address of the device network adapter used to connect to the XiO Cloud service.
- Serial #: The device serial number.
- IP Address: The current device IP address.
- Hostname: The device host name.

An **Actions** column is also provided that allows the device to be configured or deleted. For more information on configuring a device, refer to Manage Devices on page 68.

Claim Devices

Devices must be claimed by the XiO Cloud service before they may be managed by the service. Devices may be claimed individually or as a group.

NOTE: Supported third-party devices that do not use the Crestron Connected® connection protocol must be claimed using a Crestron control system or the Crestron XiO Cloud™ Gateway software. For more information, refer to the XiO Cloud® Service Third-Party Device Monitoring Configuration Guide.

Claim a Single Device

To claim a single device:


1. Record the MAC address and serial number of the device. The MAC address and serial number are labeled on the shipping box or on a sticker attached to the device.

NOTES:

- If the device has multiple MAC addresses, use the MAC address that is providing the primary connection back to the network. For most devices, the Ethernet MAC address should be used. However, if your device is connecting to the network over a different protocol (such as Wi-Fi[®] communications), use the MAC address for that protocol instead.
- If claiming a Crestron software product (such as Crestron Virtual Control server software), the serial number and MAC address are generated by the software and can be located using its web configuration interface. For Crestron software products that are preinstalled on a computer or other device (such as the VC-4-PC-3), do not use the serial number and MAC address labeled on the device.

2. In the XiO Cloud service, select the **ENVIRONMENT** menu button to display a drop-down menu.

Environment - Drop-Down Menu

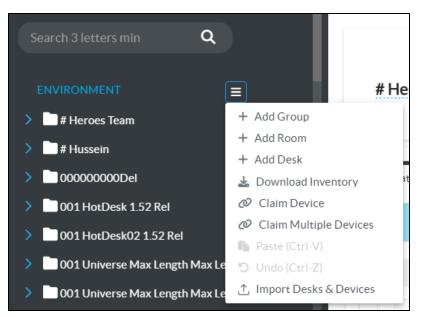

3. Select **Claim Device**. The **Claim Device** dialog box is displayed. **Claim Device Dialog Box**

Claim Device	×
Enter a device's MAC ad for this account. Claime "Unassociated Devices"	
MAC Address	00.10.7f.5d.ff.9a
Serial Number	X 0126424
	Cancel Claim

- 4. Enter the MAC address and serial number recorded in step 1 in the **MAC Address** and **Serial Number** fields, respectively.
- 5. Select **Claim**. A success message is displayed if the claim is successful.

NOTE: If an error message is displayed stating that the device does not exist, connect the device to a network that has access to the internet, wait 15 minutes, and then try again.

6. Select **X** to close the dialog box. The host name of the claimed device is displayed in the device tree under the group **Unassociated Devices**.

Unassociated Devices

✓ ♣ Unassociated Devices	
✿ AREA16A-MERCURY	
MERCURY-00107F8B87C1	
MERCURY-00107F968393	
MERCURY-00107F96920A	
MERCURY-00107F96956B	
🗊 TSW-1060-IH1	
Group name 3 letters min Q	·

The device may now be managed and assigned to a group or room.

Claim Multiple Devices

To claim multiple devices:

 Record the MAC address and serial number of each device as a comma delimited CSV file. The MAC address and serial number are labeled on the shipping box or on a sticker attached to the device.

NOTES:


- If the device has multiple MAC addresses, use the MAC address that is providing the primary connection back to the network. For most devices, the Ethernet MAC address should be used. However, if your device is connecting to the network over a different protocol (such as Wi-Fi[®] communications), use the MAC address for that protocol instead.
- If claiming a Crestron software product (such as Crestron Virtual Control server software), the serial number and MAC address are generated by the software and can be located using its web configuration interface. For Crestron software products that are preinstalled on a computer or other device (such as the VC-4-PC-3), do not use the serial number and MAC address labeled on the device.

The CSV file should be formatted as shown below:

CSV File Format

MAC Address, Serial Number 00.10.7e.8b.81.b6,17284712 00.10.7e.8b.8c.87,17284570 00.10.7e.96.83.93,1716JBG01207 00.10.7e.96.92.0a,1716JBG01550 00.10.7e.8b.87.c1,17284670 **NOTE:** An optional third column may be added to the CSV file with custom device names. After being claimed, the device will take the custom name from the CSV file instead of its default name. For example, if adding a custom device name to the first example above, the formatting would be 00.10.73.8b.81.b6,17284712, [custom device name]


- 2. Save the CSV file to a location that may be accessed by the computer used to access the XiO Cloud service.
- 3. In the XiO Cloud service, select the **ENVIRONMENT** menu button **t** to display a drop-down menu.

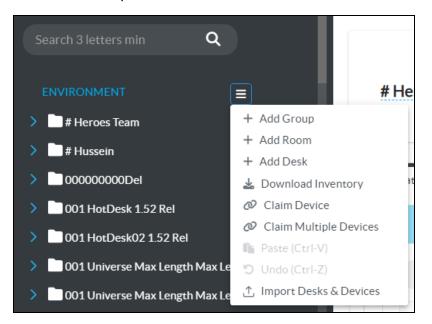

Environment - Drop-Down Menu

4. Select **Claim Multiple Devices**. The **Claim Multiple Devices** dialog box is displayed.

Claim Multiple Devices Dialog Box

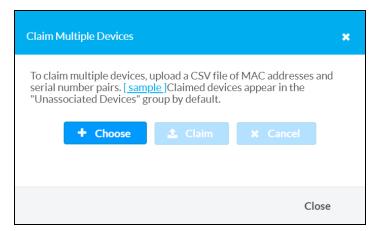

5. Select **Choose**, and then select the CSV file created in step 1.

6. Select **Claim** to claim all of the devices listed in the file. A message indicating the claim status of each device is displayed.

NOTE: If an error message is displayed stating that a device does not exist, connect that device to a network that has access to the internet, wait 15 minutes, and then try again.

7. Select **X** to close the dialog box. The host names of the claimed devices appear in the device tree under the group **Unassociated Devices**.

Unassociated Devices



The devices may now be managed and assigned to a group or room.

Unclaim Devices


Devices may be unclaimed to remove them from a user's account. Once a device is unclaimed:

- The device is no longer counted against the allotted number of devices for the account
- The device may be claimed by another account.
- The XiO Cloud service no longer enforces any settings on the device.

To unclaim a device:

- 1. Position the cursor over the device in the ENVIRONMENT menu to reveal its context menu.
- 2. Select the context menu button 🚍 of the device to display a drop-down menu.

Device - Drop-Down Menu

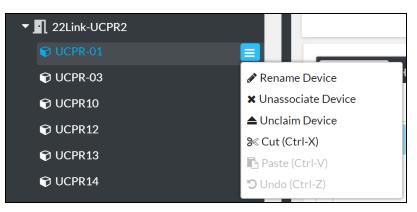

- 3. Select **Unclaim Device**. A confirmation dialog box is displayed.
- 4. Select **Yes** to unclaim the device, or select **No** to cancel.

NOTE: If a device that has any licenses on it is unclaimed, the licenses remain with the account and not the device. The licenses are removed from the device once it is unclaimed, and the licensed functionality is no longer available on the device.

Add Devices to Rooms or Desks

Devices may be added to rooms after they are claimed by the XiO Cloud service. Once devices are added to rooms or desks, all devices within a group or desk may be monitored and controlled at once.


Two methods may be used to add devices to a room or desk: Devices may be added via the context menu for the room or desk, or devices may be dragged from the **Unassociated Devices** group into a room or desk.

NOTE: <u>DSS-100</u> devices are added to a **Device Assistant Group** in the group tree after they are claimed via the <u>Crestron Device Assistant mobile app</u>. Drag these devices to a room or desk from this group instead.

To add devices to a room or desk via its context menu:


- 1. Position the cursor over the room or desk name in the **ENVIRONMENT** menu to reveal its context menu.
- 2. Select the context menu button 🚍 for the group or room to display a drop-down menu.

Group - Drop-Down Menu

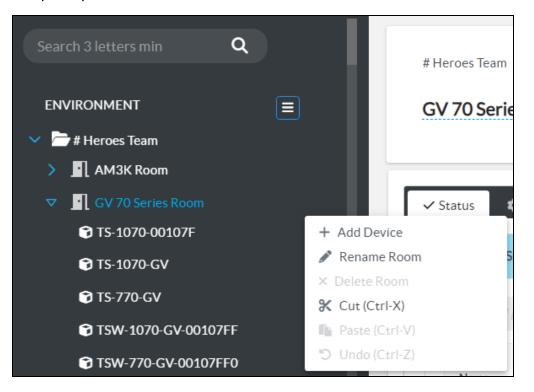

3. Select **Add Device**. A text box is added under the selected room or desk.

Group - Add Device Text Box

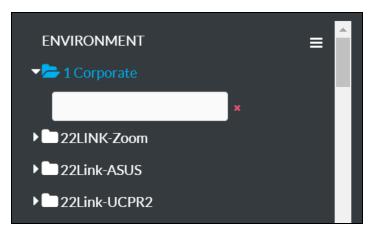

4. Start typing the name of the desired device. A list of claimed devices that match the entered text is displayed below the text box.


Group - Add Device Text Box (with Text)

ENVIRONMENT	≡
▼ ≻ 1 Corporate	
TSW	×
TSW-560	
▶ 22Link-ASUS	
▶ 22Link-UCPR2	

5. Select the desired device by clicking on it or by navigating to the device using the arrow keys and pressing **Enter**.

The device is reordered alphabetically within its parent room or desk after it is added. It is no longer shown in the **Unassociated Devices** group.

Group - Device Added

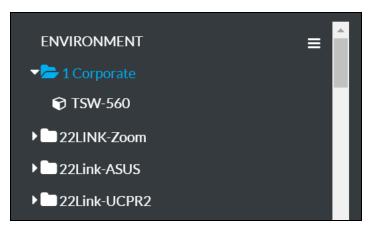


To drag a device from the **Unassociated Devices** group into another room or desk:

- 1. Select and hold the pointer over the device.
- 2. Drag the device from the **Unassociated Devices** group and drop it into the desired room or desk. The device is added to the room or desk and is no longer shown in the **Unassociated Devices** group.

To return a device to the **Unassociated Devices** group:

- 1. Position the cursor over the device in the **ENVIRONMENT** menu to reveal its context menu.
- 2. Select the context menu button 🗮 for the device to display a drop-down menu.

Device - Drop-Down Menu (Cut Action)

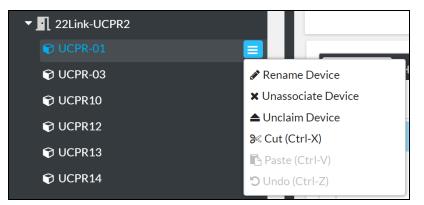

3. Select **Unassociate Device**. The device is added back to the **Unassociated Devices** group and is no longer shown in its previous room or desk.

Devices may also be dragged to the **Unassociated Devices** group or to any other room or desk that supports added devices.

Select the device from the group tree to view and configure device settings. For more information, refer to Configure Device Settings on page 73.

Cut and Paste

The cut and paste functionality allows items in the group tree to be moved more easily than the traditional drag and drop method, which is helpful when associating devices to rooms or groups in bulk. Cutting and pasting can be performed using the UI controls or keyboard shortcuts.

NOTE: Any item in the group tree can be cut and pasted. However, pasted items must abide by the organizational hierarchy of the group tree. For example, devices can only be pasted to rooms or desks, top-level groups cannot be pasted under subgroups, and so forth.


To cut items (add them to the clipboard):

Device - Drop-Down Menu

- 1. Select one or more items from the group tree. Press **Ctrl** + **Shift** on your keyboard to select multiple items.
- 2. Select the context menu button 🚍 for one of the selected items to display a drop-down menu.
 - ✓ 1 22Link-UCPR2
 ✓ UCPR-01
 ✓ UCPR-03
 ✓ Rename Device
 ✓ Unassociate Device
 ✓ Unclaim Device
 ✓ UcPR12
 ✓ UCPR13
 ✓ UCPR14
 ✓ Undo (Ctrl-Z)
- 3. Select **Cut**. The selected item(s) are added to the clipboard. Alternately, press **Ctrl** + **x** on your keyboard to perform this action.

To paste items that have been cut (added to the clipboard):

- 1. Select the parent node in the group tree where the cut items should be pasted.
- 2. Select the context menu button 📃 for the selected group tree node.
 - Group Drop-Down Menu (Paste Action)

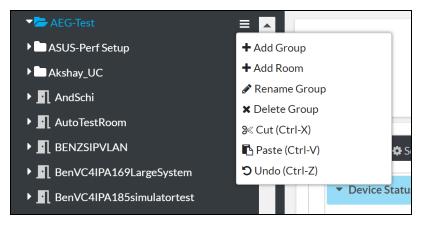

 Select Paste. The selected item(s) are pasted into the selected group tree node as long as it abides by the group tree hierarchy. Alternately, press Ctrl + v on your keyboard to perform this action.

To undo the previous cut or paste action, select **Undo** from the appropriate context menu or press **Ctrl** + **z** on your keyboard.


Download Inventory

An inventory report for the XiO Cloud account can be downloaded as a CSV file. The inventory report includes basic information about claimed devices and their location within the group tree.

To download the inventory report:

1. Select the **ENVIRONMENT** menu button 📃 to display a drop-down menu.

Environment - Drop-Down Menu

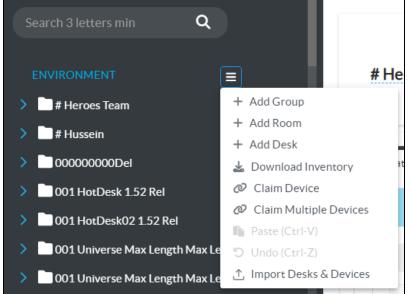

2. Select **Download Inventory**. The inventory report is downloaded to your PC as a CSV file.

View Grouped Devices, Rooms, and Desks

Select a group from the **ENVIRONMENT** menu to display its configuration page. Selections for viewing all devices, rooms, and desks within the group are provided. The **Device** tab is selected by default.

ice Rooms Desks	6								
atus 💠 Settings 🔲 Log	s Scheduled Actions								
Device Status									
Global Filter Q Dev	ce Model: All	~					🛓 Expe	12 Columns Selected	
Name 1	Device Model 1	Firmware-Version 1↓	Serial 1	MAC Address	Online Status 1	Pending Settings Delivery 1	IP Address ↑↓	Hostname ↑↓	,
C4-54B20389F5	UC-ENGINE	1.13.00.222	UCE075608UC	54.b2.03.89.f5.54	Offline	No	10.64.137.144	C4-54B20389F50	1
CP3N-7FB1FFA	CP3N	1.8001.5061.26823	1829JBH139UC	00.10.7f.b1.ff.54	Offline	No	10.64.137.134	CP3N-7FB1FFA	
	UC-ENGINE	1.13.00.222	UCE137286UC	54.b2.03.0a.0f.54	Offline	No	10.64.137.130	C4-54B2030A0FA	2
		1.13.00.222	UCE138870UC	54.b2.03.19.8c.54	Offline	No	10.64.137.139	C4-54B203198C2	1
UC-ENGINE-5482030A0FA	UCENGINE			1c.69.7a.61.83.54	Offline	No	10.64.137.136	\$4-1C697A6183D	2
UC-ENGINE-5482030A0FA UC-ENGINE-548203198C2	UC-ENGINE UC-ENGINE-SD-Z	1.13.00.222	UC\$083546UC						т
UC-ENGINE-5482030A0FA UC-ENGINE-548203198C2 UC-ENGINE-SD-1C697A61		1.13.00.222	UC\$083546UC UC\$083249UC	1c.69.7a.61.8454	Offline	No	10.64.137.145	\$4-1C697A61846	
UC-ENGINE-5482030A0FA UC-ENGINE-548203198C2	UC-ENGINE-SD-Z				Offline	No	10.64.137.145	54-1C697A61846	
UC-ENGINE-5482030A0FA UC-ENGINE-548203198C2 UC-ENGINE-SD-1C697A61	UC-ENGINE-SD-Z		UC\$083249UC			No	10.64.137.145	54-1C097A01840	

- Select **Device** to view status, configure settings, and perform other actions for all devices associated with rooms or desks in the group. For more information, refer to Manage Devices on page 68.
- Select **Rooms** to view the status of all rooms within the group.

Room Name	1↓ Health	ţ1	Space Type ↑↓	Occupied 1	System Power 1↓	Display Power 1	Current Source 1↓	Maintenance 1↓	System Check Last Run
Conf 105	Healthy		None	×	N/A	N/A	\Box	Disabled	N/A
Conf 202	Healthy		None	×	N/A	N/A	Ţ	Disabled	N/A
Server Room	Healthy		None	×	N/A	N/A	—	Disabled	N/A
					≪ < 1 → » 25	~			

The following information is displayed for each room by default:

NOTE: Most room status is driven by the XiO Cloud program connector functionality. For more information on adding this functionality to a room, refer to XiO Cloud Program Connector on page 57

- The room name, which can be selected to open its details page
- The current room health
- $^{\circ}$ The space type
- The reported occupancy state

- The system power state
- The power state of the display(s) in the room
- The current source routed to the primary display in the room as described in Appendix C: XiO Cloud Program Connector Sources on page 221
- The maintenance mode status
- $^{\circ}$ The date and time when a system check was last run
- Select **Desks** to view the status of all desks within the group.

Device Rooms Desks				
Global Filter Q				🛓 Export to CSV 2 Columns Selected 🗸
Desk Name	1↓ Desk Email	11	Space Type	11
desk1	desk1@gmail.com		Double Privacy Booth	
		\ll \langle 1 \rangle \gg 25 \checkmark		


The following information is displayed for each desk by default:

- The desk name, which can be selected to open its details page
- $^\circ~$ The email address associated with the desk scheduling calendar
- The space type

The data that is displayed for devices, rooms, or desks can be customized by filtering the table columns. To select or deselect table columns for devices, rooms, or desks, expand the drop-down menu at the top right of the status table. Then, select or deselect an item in the menu to display or hide that column from the status table, respectively. Use the check box at the top of the menu to select or deselect all columns.

The column selections for devices are shown below as an example.

Column Selection Drop-Down Menu (Device Tab)

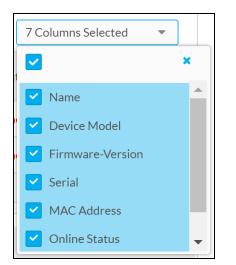

NOTE: Changes made to the status table are made only on a per-group basis. The status table will reset to its default settings after logging out of the XiO Cloud service.

The status table for devices, rooms, or desks can be downloaded as a CSV file by selecting the **Export to CSV** button at the top right of the status table. The CSV file will include all table columns that have been selected as described above.

Enter text into the **Global Filter** text box to search for and display results that match the search terms.

If the status table spans multiple pages, use the navigation arrows on the bottom of the page to move forward or backward through the pages, or select a page number to navigate to it. Additionally, the number of devices, rooms, or desks displayed on each page may be set to 5, 10, 20, or 25.

XiO Cloud Program Connector

As of XiO Cloud version 1.59, the XiO Cloud program connector is available for all rooms within an XiO Cloud environment. Programmers can enable custom monitoring, reporting, and control of rooms within XiO Cloud. Each room requires a unique SIMPL or C# program built with the XiO Cloud Room symbol to be loaded to a 4-Series[®] control system or Crestron Virtual Control (VC-4) server that is claimed to the XiO Cloud account. For more information on programming with the XiO Cloud Room symbol, refer to the SIMPL help file.

NOTE: The control system must be running the minimum firmware or software version (or greater) that supports the XiO Cloud program connector:

- 4-Series: 2.8005.0010
- VC-4: 4.0004.00093

	DM dress: Ghaziabad Uttar		Health Occupied	Maintenance
Room Details Space Type Meeting Room	Building Name PI Building 1	Floor 1	Time Zone (UTC-05) America/New_York	
Status Equipment	t List Group View Alerts	5	Room Control ()	System Check ()

Various cards and indicators are provided in the room **Status** controls that support different programming logic. Each programmable item is described in the sections that follow.

NOTE: As of XiO Cloud version 1.63, room control functions can be set as scheduled actions for a room or group. Schedule icons () are provided next to the room cards that support scheduled actions. For more information, refer to Scheduled Actions on page 84.

Room Program

The **Room Program** card allows for a control system and a unique room program to be paired with the XiO Cloud room. A room program must be applied to enable the XiO Cloud program connector functionality.

To apply a room program:

 Use the **Processor** drop-down menu to select a control system running the XiO Cloud Room symbol.

NOTE: Only supported control systems that have been claimed into the XiO Cloud account and that have a program created with the XiO Cloud Room symbol will be available for selection.

Room Program 🟾 🖯		
Processor		Program/Room ID
CP4	\sim	Select a Program or Room ID $$
1	Q	
CP4	-	
VC4_with_PIFW		

- 2. Use the **Program/Room ID** drop-down menu to select the program for the XiO Cloud room.
 - For 4-Series control systems, the program name is prepended with its corresponding device slot on the control system.
 - For VC-4 servers, the program name is prepended with the room ID of its corresponding room on the server.

NOTE: Only programs created with the XiO Cloud Room symbol will be available for selection. Once a program has been applied to a room, it can no longer be selected from this menu unless it is removed from the room.

Room Program 🟾 😂	
Processor	Program/Room ID
CP4 ~	Select a Program or Room ID $$
Apply	
	DeviceSlot6-ProgramaticIntegration_MC4.smw
	DeviceSlot7-ProgramaticIntegration_MC4.smw
	DeviceSlot8-ProgramaticIntegration_MC4.smw
	DeviceSlot10-ProgramaticIntegration_MC4.smw

3. Select **Apply**.

If the application is successful, green status indicators are displayed next to the **Processor** and **Program/Room ID** fields, and the applicable room controls and indicators are activated depending on the custom programming logic. A refresh button \gtrsim is also provided to refresh a connection to the room program.

Room Program <i>C</i>			
Processor	Program/Room ID		
СР4 🗸	DeviceSlot10-ProgramaticIntegration_MC4.smw $~~$		
Apply			

Room Control

The **Room Control** card shows the current power state of the room, the power state of any controlled displays in the room, and the current source that is routed to a display depending on the custom programming logic. Power on and off controls are also provided for the room and displays.

Room Control	0	
System Power	Display Power	Current Source

The following controls and indicators are provided:

NOTE: If the custom program does not support a control or indicator, it will be grayed out in the tile.

- **System Power**: Indicates whether the room power is on (represented by a green power icon) or off (represented by a black power icon). Select the icon to toggle the room power on or off depending on the programming logic. Power on and off events can also be scheduled in XiO Cloud.
- **Display Power**: Indicates whether controlled displays in the room are powered on (represented by a green power icon) or off (represented by a black power icon). Select the icon to toggle the display power on or off depending on the programming logic. Power on and off events can also be scheduled in XiO Cloud.

NOTE: If there are more than one display in the room, the **Display Power** state should represent all displays in the room, and power on/off should control the power state for all displays. This logic is recommended and must be enforced by the program.


• **Current Source**: Shows an icon representing the active source that is being routed to a display in the room, or shows a no source icon if no source is selected. A blank display icon is shown if the source type is unknown or has not been sent by the program. Hover the cursor over the icon to expose a description of the source. For a list of all available **Current Source** icons, refer to Appendix C: XiO Cloud Program Connector Sources on page 221.

Select the schedule icon () next to the room card name to navigate to the **Scheduled Actions** tab for the room under the **Group View** settings. Scheduled actions can be configured for display power and system power from that location.

System Check

The **System Check** card is used to perform a test of the room system based on the programming logic. The test can be used on all system components or specific system components (such as a microphone test). The system check and all logic that drives it relies on custom programming, allowing programmers to create tests for anything in their program.

NOTE: If the custom program does not include a system test, the **Start Test** button is grayed out in the tile.

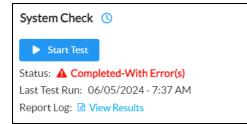

Select **Start Test** to perform the programmed room test. A digital signal is sent to the control system to initiate the test and the button text changes to **Running**. Once the test has completed, the results are populated in the **Cloud Activity Logs** accordion for the room and can be filtered based on the time stamp.

The following additional status fields and controls are provided:

- Status: Indicates the current status of the test (No Test, Running, Completed, Completed with Error(s), or Failed).
- Last Test Run: Indicates the date and time when the test was last run.
- **Report Log**: Select **View Results** to open a **System Check Results** window that shows a condensed and filtered view of the room **Cloud Activity Logs** corresponding with the test results.

Filter Q	
Date/Time	Description
06/05/2024 3:18 PM	Test Running 1
06/05/2024 3:18 PM	Test Running 2

- Enter a search term in the **Filter** text box to filter the results by the entered search criteria.
- Select Activity Log to open the full Cloud Activity Logs for the room.
- Select **Close** to close the **System Check Results** window.

Select the schedule icon () next to the room card name to navigate to the **Scheduled Actions** tab for the room under the **Group View** settings. Scheduled actions can be configured for system tests from that location.

Status Indicators

Various status indicators are shown at the top of the room pane that can be customized through the room program.



Each indicator and its programmatic functions are described in the sections that follow.

Room Health

The **Health** indicator shows the overall health status of the room, allowing building or IT administrators to quickly identify and triage rooms that are reporting issues.

Health status levels are set based on alerts reported from the room program and their severity, and these levels can be customized based on customer requirements. For example, if a room has a touch screen that is required for accessing the room controls, an alert with critical severity could be triggered when the touch screen goes offline to indicate that the entire room system is not functional. For more information on enabling alerts to control room health, refer to Alerts on page 127.

NOTE: Alerts are also shown in the room Alerts log and can be cleared as they are resolved.

The following health levels are provided that correspond with the severity of any active alerts:

- A green room health icon (+) indicates that the room is functioning normally with no reported issues or minor issues (**Notice** severity level).
- A yellow room health icon (+) indicates that the room is usable but has issues that could affect its performance (**Warning** and **Error** severity levels).
- A red room health icon (+) indicates that the room is not usable based on critical issues (**Critical** severity level).

Room Occupancy

The **Occupied** indicator shows whether the room is reporting occupancy or vacancy based on programming logic.

The custom program can tie the state of an occupancy sensor (or any other programming-defined occupancy event, such as the room reporting an active call) to the XiO Cloud Room symbol, which pushes the state to XiO Cloud. The programmed occupancy sensor does not need to be claimed into XiO Cloud (allowing for the use of a Cresnet® network occupancy sensor), and the programmed occupancy event can be combined with other XiO Cloud occupancy reporting triggers. The XiO Cloud room can also have its occupancy state set by other devices, which can the be sent to the program for automation logic and other purposes.

The following occupancy states are provided:

- A green occupancy icon 🔘 indicates that the room is currently occupied.
- A gray occupancy icon (2) indicates that the room is currently vacant.

Maintenance Mode

The **Maintenance** indicator shows whether the room is currently in maintenance mode, which is entered using the **Actions** menu for the room.

NOTE: Scheduled actions can be configured for maintenance mode by navigating to the **Scheduled Actions** tab for the room under the **Group View** settings. The custom program receives maintenance mode state from XiO Cloud, which allows programmers to define maintenance mode messaging in the room. For example, if the room is placed into maintenance mode to perform firmware updates on system components but the room is still largely usable, a programmer could create messaging that explains the scenario and any usage limitations. Conversely, if the room is not usable at all during maintenance mode, messaging could be provided to alert users that the room is offline and not currently available for meetings.

The following maintenance mode states are provided:

- A green maintenance icon 💥 indicates the room is currently in maintenance mode.
- A gray maintenance icon 🛞 indicates the room is currently not in maintenance mode.

Custom Alerts

Custom alerts or messages can be sent from the program to XiO Cloud when a corresponding event is triggered. These custom alerts and messages are reported into the **Cloud Activity Logs** for the room.

		DZEM_ROOR ress: India Arwal	n Bihar, 824124 - India			Health	Occupied	Mainter		✓ Action
Room	Details									
Space Meet	Type ing Room		ing Name oBuilding	Flc 1	oor	Time Zone (UTC-05) America/New_	York			
	Global Filte Q	Show Only Grou	ıp, Room or Desk Events		📋 to	÷			Download F	Previous 30 Days Events 😹
	Date and Time	†↓	User	t↓	Device Model	t↓	Device, Room, Group or Desk	ţţ	Event	t↓
					All	~				
	06/06/2024 3:44 PM		ROOM1		VC-4		Khozem_Room		System Power Failure	all
	06/06/2024 3:44 PM		ROOM1		VC-4		Khozem_Room		System Power Failure	ell
	06/06/2024 3:44 PM		re1, test		VC-4		Khozem_Room		Setting Changed:Syst value:On New value	em Power Old :Off
	06/06/2024 3:43 PM		re1, test		VC-4		Khozem_Room		Setting Changed:Syst New value:On	em Power Old value:
	06/06/2024 3:39 PM		ROOM1		VC-4		Khozem_Room		SystemCheck state u New value:4	pdated: Old value: 1
	06/06/2024 3:39 PM		ROOM1		VC-4		Khozem_Room		Test Ended (TestID:7	30)
	06/06/2024 3:39 PM		ROOM1		VC-4		Khozem_Room		Occupancy test succe	ess (TestID:730)
	06/06/2024 3:39 PM		ROOM1		VC-4		Khozem_Room		Audio test success (Te	estID:730)
	06/06/2024 3:39 PM		ROOM1		VC-4		Khozem_Room		Mick test success (Te	stID:730)
	00/00/2024 3.37114									


Licensed Features

For room-based accounts, licenses can be purchased to enable specific functionality within the XiO Cloud service. Licensed features may be added to rooms, removed from rooms, or transferred to different rooms.

NOTE: Licensed features can be configured only by users with Global Administrator permissions.

The **SETTINGS** menu for licensed features is located in the user management panel, which may be accessed by selecting the **Settings** button 🚳 in the navigation menu.

Settings – Services Option

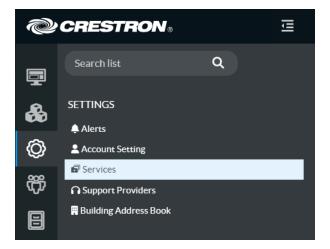

Select **Services** in the **SETTINGS** menu. A **Room Services** page is displayed to the right of the **SETTINGS** menu.

Room Services Page

ervice	s				
ILTER		art Date End Date		Update Multiple Licenses	
	h Q	Expired	ී Clear	Endpoint Management 🔹	Select 🔹 🗸
	Room ≑ (151)	Room Location 🗢	Endpoint Management (120/15344)	Support ≑ (149/9042)	Workplace Analytics (102/8802)
	22Link-A SUS		None 🔻	Dec 31, 2022 -	Dec 31, 2022 🔹
	22Link-U CPR2		Dec 31, 2022 🔹	Dec 31, 2022 💌	Dec 31, 2022 🔹
	• 25Live	Brijesh	None 💌	Dec 31, 2022 💌	Dec 31, 2022 💌
	· 260	ASUS-Perf Setup	Dec 31, 2022 💌	Dec 31, 2022 💌	Dec 31, 2022 💌
	AM-3x00	QEPlano>AM-3K	Dec 31, 2022 💌	Dec 31, 2022 💌	Dec 31, 2022 💌
	Ancillary Devices	EG_Hus-HN-Master	Dec 31, 2022 🔹	Dec 31, 2022 -	Dec 31, 2022 💌
	• AndSchi		Dec 31, 2022 💌	Dec 31, 2022 🔹	None 💌
	AutoTest Room		Dec 31, 2022 💌	Dec 31, 2022 💌	Dec 31, 2022 💌

Licensed features are organized by room name and displayed within a table. The total number of available licenses versus purchased licenses for each feature is displayed next to the license type in the table headings.


Drop-down menus for each license type are also displayed within each room row:

- If a license has not been applied to the room, the drop-down menu shows the **None** selection.
- If a license has been applied to the room, the drop-down menu shows the license expiration date. If multiple licenses are available, use the drop-down menu to select a different license.
- Select **Remove License** from the drop-down menu to remove a license from a room and add it back to your license pool.
- Enter text into the provided search field to display licenses that match the search term(s).

Apply Multiple Licenses

Licenses can be applied to multiple rooms at once using the **Apply Available Licenses** feature, which can be selected from the **Action** drop-down menu at the top right of the page.

Room Services Page - Apply Available Licenses



Selecting **Apply Available Licenses** will display a warning message showing the number of unlicensed rooms for each license type. Select **Apply** to apply the available licenses from your license pool to the unlicensed rooms.

NOTE: If the number of available licenses is less than the number of unlicensed rooms for a particular license type, this information is indicated in the warning message. Licenses will be applied to only a number of rooms that match the license count.

Update Multiple Licenses

Licenses can be updated for multiple rooms at once using the **Update Multiple Licenses** feature, which is located at the top right of the license table.

Room Services Page - Update Multiple Licenses



- 1. Select the license type to be updated from the first drop-down menu under **Update Multiple Licenses**.
- 2. Select the license expiration date from the second drop-down menu under **Update Multiple** Licenses.
- 3. Check the check box next to any room that should be updated with the license type selected in step 1. Check the check box in the table header row to select or deselect all rooms that are visible on the page.

NOTE: If no check boxes are checked, the selected license type will be applied to all rooms in the account.

4. Select the check button under **Update Multiple Licenses**. A dialog box is displayed asking whether the licenses should be applied to the chosen room(s).

NOTE: If the number of available licenses is less than the number of selected rooms, a warning message with this information will be shown in the dialog box.

5. Select **Apply**. The license type selected in step 1 will be applied to all rooms selected in step 3.

NOTE: If a room already has a license of the selected type applied, this process will replace the existing license with the newly selected license.

Filter and Manage Licenses

Enter text into the global search field at the top left of the screen to search for and display rooms or locations that match the search term(s). Additionally, use the **Start Date** and **End Date** text boxes to filter licenses by the provided date range, and use the **Clear** button to clear the current filters. Check the **Expired** check box to display only licenses that have expired.

Room Services Page - Filter



If the room list spans multiple pages, use the navigation arrows on the bottom of the page to move forward or backward through the pages, or select a page number to navigate to that page. Each license type also provides arrow controls in its heading row that sorts the available rooms by license expiration date.

The following information and controls are provided for each listed room:

- **Room**: The room name
- Room Location: The location of the room within the group tree hierarchy
- **Endpoint Management**: Indicates whether an Endpoint Management license has been assigned to the room

NOTE: An Endpoint Management license is required for the room before any other licensed functionality can be added.

- **Support**: Indicates whether a Support license has been assigned to the room. Removing a Support license adds it back to the customer's license pool.
- Workplace Analytics: Indicates whether a Workplace Analytics license has been assigned to the room. A Workplace Analytics license can be added only if one or more unused Workplace Analytics licenses are available in a customer's license pool. Removing a Workplace Analytics license adds it back to the customer's license pool.

Manage Devices

Devices may be managed via the XiO Cloud service after they have been claimed by the service and added into a licensed group or room. Devices may be managed individually or as a group.

Select a device from the group tree to view and configure the device status, settings, and licenses. The configuration page for the device also provide options for viewing status dashboards and activity logs, and automated actions may be scheduled for the device.

NOTE: Not all device management options are available for some devices.

Device Configuration Page

Status Settings	🖻 Dashboard 🛛 🗐	Logs Scheduled Ac	ta	
✓ Device				
	Model	AM-3000-WF-I		
	Serial Number	2131GSP02131		
+ More Details	Firmware Version	2.0400.0013		
> Network				
> HDMI Output				
> AirMedia				
> Control System				
> Connected Devices				
> Alerts				

Use the following procedures to manage devices via the XiO Cloud service.

Rename a Device

Each device in the XiO Cloud service has a unique device name, which allows the device to be identified and organized within the service. The device name is used only by the XiO Cloud service.

By default, the device name is set as the host name of the device. However, the device may be renamed as needed.


NOTE: Changing the device name has no impact on the host name or other identifying features on the hardware.

Two methods may be used to rename a device: The device name may be changed in the group tree or from its configuration page.

To change the device name in the group tree:


- 1. Position the cursor over the device in the **ENVIRONMENT** menu to reveal its context menu.
- 2. Select the context menu button 📃 of the device to display a drop-down menu.

Device - Drop-Down Menu

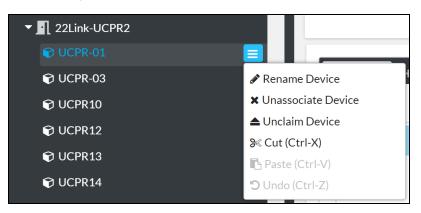

3. Select **Rename Device**. The device name becomes an editable text box.

Device - Edit Device Name

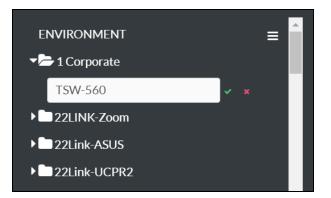

- 4. Enter a new device name in the text box. A device name must be at least three characters long.
- 5. Select the green check icon 🗹 or select **Enter** to save the device name. Select the red **x** icon 🗮 to discard the changes.

To change the device name from the configuration page:

- 1. Select the device from the group tree to display its configuration page.
 - Device Configuration Page

Ì	CRESTRON	프 수 ස 용	٩
Ē	 DMPS3_1.503Test Delete 	GV 70 Series Room	
æ	Eng FW VE Executives Beta	TS-1070-GV	
Ø	Frank_Devices		
ŝ	> 🗋 G-Test	🗸 Status 🌣 Settings 🔊 Remote Control 📧 Dashboard 🔳 Logs 🕓 Scheduled Actions 🔓 File Management 🖤 Device Metadata	
	V 🔄 GV 70 Series Room	The system is currently offline	
	Ping Ping		
Ģ	TS-1070-0010	V Device	
_		Model TS-1070-GV	
8	3 TS-770-GV	Serial Number 2039/BH02039	
	3 TSW-1070-GV-00107	Firmware Version 2003/018	
	3 TSW-770-GV-00107F	- More Details	
	Gautham_X70		
	> I H2MAutomation	T5-1070-GV 2.003.0018	
	> 🖪 HD-CTL-101	Build Wed Sep 7 14:38:07 EDT 2022 (474774)	
	> II HD-CTLsdfsdfdsfs	Updater 2.003.0015	
	> 🛐 HD-MD	Bootloader N/A	
	> 🔄 HD-TEST	CCUI Version 1.13.883998	
	Helium Automation	XIOSDK 38.1	

2. Select the device name on the top left of the configuration page. The device name becomes an editable text box.

evice		lion Page - Ea	t Device Name		
10	orporate				
Т	SW-560] ~	×
	✓ Status	Settings	Jul Dashboard		Log

Device Configuration Page - Edit Device Name

- 3. Enter a new device name in the text box. A device name must be at least three characters long.
- 4. Select the green check icon or select **Enter** to save the device name. Select the red **x** icon to discard the changes.

View Device Status

The device status may be viewed for individual devices or for multiple devices within the same group or room.

View Status for a Single Device

To view the status for a single device, select a device from the group tree to display its configuration page. The **Status** tab is open by default.

NOTE: A device must be added into a licensed room or group before its configuration page can be viewed.

Device Configuration Page - Status Tab (Devices)

Status 🔅 S	ettings 🔍 Licenses	🔟 Dashboard	Activity Log	O Scheduled Actions
		The	system is currently offline	
 Device 				
		el MERCURY		
		ut PinPoint UX		
	Occupancy state			
		er 1725JBH011	79	
		on 1.3705.0006		
		us Awake		
	Skype for Business Present			
▶ Audio				
 Connections 				
 HDMI Input 				
HDMI Output	ıt			
 Network 				
 Services 				
 Applications 				
 Alerts 				

The **Status** tab provides expandable "accordions" that display static and changing device attributes. Dynamic attributes, such as volume, change in the appropriate status accordion within seconds of being changed on the device.

Select an accordion name to expand it. If the accordion is expanded, select the accordion name again to collapse it. The accordions provided vary depending on the device.

View Status for a Group of Devices

To view the status for multiple devices within the same group or room, select a group or room from the group tree to display its configuration page. The **Status** tab is selected by default.

Group Configuration Page - Status Tab (Device Status)

 Device Status 						
Global Filter Q				🛃 🛓 Exp	ort to CSV 7 Colu	mns Selected 🛛 👻
	Device Model 🖨	Firmware-Version				Pending Settings
Name 🗢	All 👻	\$	Serial 🗢	MAC Address 🖨	Online Status 🖨	Delivery 🖨
TSW-560P- 00107FCC2700	TSW-560P	3.001.0017	1724-89401761	90.30.7% or.27.61	Offline	No
TSW-570- 00107FD95B00	TSW-570	1.004.0024	20406276	00.10.71.49.56.42	Offline	No
		М	▲ 1 ▶ ▶ 25 ■	-		

The **Status** section lists all of the devices within the group or room and any subgroups in table format. The **Device Status** table provides a subset of important status information for the devices within the group and its subgroups.

NOTE: Selecting the **Unassociated Devices** group displays the device status for all unassociated devices in the account. Only the **Name**, **Device Model**, **Serial**, and **MAC Address** status fields are provided for unassociated devices. An unassociated device must be moved to a licensed room or group before its individual status can be viewed.

The following information is displayed for each device by default:


- The name and model
- The loaded firmware version, including whether any firmware updates are pending
- The serial number and MAC address
- The online status, which indicates whether the device is connected to the XiO Cloud service
- The pending settings delivery status, which indicates whether any device settings changes are pending

NOTE: If the **Pending Settings Delivery** status is **Yes**, device settings have been saved in the portal but have not yet been applied to the device (such as in instances where the device is unplugged).

The data that is displayed for each device in a group or room can be customized by filtering the table columns for that group or room. By default, 7 columns are displayed that contain the data described in the list above. Up to 15 columns can be displayed by selecting or deselecting a column in the provided drop-down menu.

To select or deselect table columns for a group or room, expand the drop-down menu at the top right of the status table. Then, select or deselect an item in the menu to display or hide that column from the status table, respectively. Use the check box at the top of the menu to select or deselect all columns.

Column Selection Drop-Down Menu

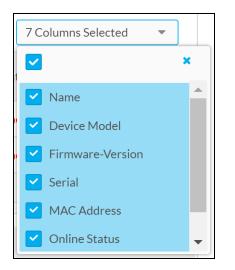

NOTE: Changes made to the status table are made only on a per-group or room basis. The status table will reset to its default settings after logging out of the XiO Cloud service.

The device status table for a group or room can be downloaded as a CSV file by selecting the **Export to CSV** button at the top right of the status table. The CSV file will include all table columns that have been selected as described above.

Enter text into the **Global Filter** text box to search for and display devices that match the search terms.

If the device lists spans multiple pages, use the navigation arrows on the bottom of the page to move forward or backward through the pages, or select a page number to navigate to that page. Additionally, the number of devices displayed on each page may be set to 5, 10, 20, or 25 devices.

Configure Device Settings

Device settings may be configured for individual devices or for multiple devices within the same group or room.

Configure Settings for a Single Device

To configure the settings for a single device, select a device from the group tree to display its configuration page, and then select the **Settings** tab.

NOTE: A device must be added into a licensed room or group before its configuration page can be viewed.

✓ Status	Settings Remote C	ontrol 🛄 Dashboard	Activity Log	O Scheduled Actions	🖹 File Management	
		The syste	m is currently offline			
- System	Setup					
	- Time/Date					
	SNTP					
	Custom Time Server	pool.ntp.org				
	Date Format	DMY	~			
	Time Format	12H○ 24H		~		
	Time Zone	(UTC-05:00) Eastern T	ime (US & Canada 🔻			
	+ Network					
	+ Camera					
	+ Device Display					
 Service 	25					
Netwo	rk Proxy Settings					
► Audio						
Applica	ations					
► Contro	l System					

Device Configuration Page - Settings Tab (System Setup)

The **Settings** tab provides selections for configuring various device settings. When a device is first claimed and added to a group, the current device settings are prepopulated in the XiO Cloud service.

To change a device setting:

1. Locate the device setting in the appropriate **Settings** accordion.

The accordions provided vary depending on the device. Some accordions include subsections that may be expanded by selecting the plus (+) button next to the subsection name. If the subsection is expanded, select the minus (-) button to collapse the subsection.

2. Fill the check box next to a setting to enable it in XiO Cloud.

If a setting is not enabled in XiO Cloud, it will not be sent to the device and can be managed by processes outside of XiO Cloud (such as joins).

NOTE: If a setting is enabled in XiO Cloud, it will show what is currently saved in the portal. If a setting is not enabled in XiO Cloud, it will show what is currently set on the device.

For more information on configuring specific settings for a device, refer to its documentation at www.crestron.com/manuals.


Once a device setting has been changed, the **Actions** button on the top right of the configuration page changes to a **Save Changes** button. Select **Save Changes** to push the updated setting(s) to the device.

Save Changes Button

304 Link		
TSW-1060-IH1	 Save Changes 	•

After the settings have been pushed from the cloud to the device successfully, a toast notification is displayed confirming the success.

Device Settings Saved Successfully Message



If the device has not yet received the settings, orange "Delivery to Device Pending" text is shown next to the changed settings until the device receives the settings.

NOTES:

- Depending on the settings that are changed, the device may restart a few minutes after **Save Changes** is selected.
- Each setting checks for valid input. If an invalid input is entered, red text explaining the error is displayed next to the setting, and a red underline is shown under the setting. Changes cannot be saved until the error is resolved.
- A setting entered at the group level cannot be edited on the individual device page. Each device in a group inherits any group-level settings.

To undo changes before saving the settings to the device, select the drop-down arrow next to the **Action** (or **Save Changes**) button, and then select **Revert**. The device settings are returned to their last saved state.

Configure Settings for a Group of Devices

To configure the settings for multiple devices within the same group or room, select a group or room from the group tree to display its configuration page, and then select the **Settings** tab.

Group Configuration Page - Settings Tab (System Setup)

lect items to include in	n Group Sett	ings		Select A
evice Model: MERCU	RY	•		
▼ System Setup				
La	anguage	English (English)	•	
S	Standby	Always On	•	
 + Time/Date > Services > Scheduling 				
 Services 				
 Services Scheduling 				

Configuring device settings (such as language or date and time) at the group level pushes the settings to every device in that group or room or its subgroups. Device settings configured at the group level overwrite the same settings on the individual device pages.

NOTE: No device settings can be configured for devices within the **Unassociated Devices** group. An unassociated device must be moved to a licensed room or group before its settings can be configured.

Each group-level setting in the **Settings** section provides a check box next to the setting:

- Select an empty check box to activate the associated setting at the group level. Green text is displayed next to the setting to indicate that the setting is now included in the group settings.
- Select a filled check box to disable the associated setting at the group level.

By default, all group-level settings are disabled.

System Setup Accordion (Language Setting Enabled)

✓ System Setup			
Language	English (English)	~	Language is included in Group Settings
Standby	Always On	-	
+ Time/Date			

Group-level settings in the **Settings** section are organized by device type. To configure the group-level settings for a device type:

- 1. Select the desired device type from the **Device Model** drop-down menu on the top left of the **Settings** section.
- 2. Navigate through the accordions provided for each device to locate the desired group-level settings.
- 3. Select the applicable check box(es) next to the group-level settings to activate the associated setting at the group level.

Once a group setting has been changed, the **Actions** button on the top right of the configuration page changes to a **Save Changes** button. Select **Save Changes** to save the group-level settings.

Save Changes Button

304 Link	✓ Save Changes	-

Additional settings may be configured for subgroups after changes are made at the parent group level.

Only settings that have not been configured for the parent group may be activated. Parent group settings are disabled because they are inherited by the subgroup. A "Setting is Inherited from [Group]" text is displayed next to any subgroup settings that may not be activated, where [Group] is the parent group name.

System Setup Accordion (Subgroup)

ystem Setup				
 Device Settings Admin PIN 				
	Enable PIN			
	Enable Pin			
	Panel PIN			
	Confirm Panel PIN			
— Date/Time				
Synchronization				
	Time Synchronization			Setting is Inherited from Area 4
NTP Time Servers				
Address		Por	t	
		No records found		
+ Add - Remove				
Configuration				
	Time Zone	(UTC-05:00) Eastern Time (US & Canad	a) ~	Setting is Inherited from Area 4
	Date Format	WMD	~	Setting is Inherited from Area 4
	Time Format	12		Setting is Inherited from Area 4
	i ime Pormat	24		-

Subgroup-level settings in the **Settings** section are organized by device type. To configure the subgroup-level settings for a device type:

- 1. Select the desired device type from the **Device Model** drop-down menu on the top left of the Settings section.
- 2. Navigate through the accordions provided for each device to locate the desired subgroup-level settings.
- 3. Select the applicable check box(es) next to the subgroup-level settings to activate the associated setting at the subgroup level.

Once a subgroup setting has been changed, the **Actions** button on the top right of the configuration page changes to a **Save Changes** button. Select **Save Changes** to save the subgroup-level settings.

Save Changes Button

304 Link	✓ Save Changes	•	

Any remaining settings may be configured for individual devices after changes are made at the parent group and subgroup level.

Only settings that have not been configured for the parent group or subgroup may be configured. Parent group and subgroup settings are disabled because they are inherited by the device. An "Inherited from Group Settings" text is displayed next to any device settings that may not be activated.

NOTE: Unchecking the check box for a group setting does not change the setting for an individual device, but makes it possible to change the setting on the individual device configuration page.

Device Status Page Showing "Inherited from Group Settings" Text

	The system is currently offline	
System Setup		
 Services 		
- Fusion		
Fusion Cloud	Enable	Inherited from Group Settings
	https://yourdomain.fusioncloud.c	Inherited from Group Settings

NOTE: Adding a device to a group or room automatically pushes down any of the settings from the group to the device.

Prevent Unnecessary Restarts

Under rare circumstances, applying certain settings to a device may cause unexpected device behavior, such as repeated restarting, to occur.

If the XiO Cloud service detects a device in this state:

- The XiO Cloud service stops sending the setting that is causing the issue to the device, which prevents restarts from occurring.
- A message is displayed on the device settings page stating that undesired behavior was detected and that settings are no longer being sent to the device.
- An alert message is placed next to the setting that is causing the issue.

To resume sending settings to the device, update the setting that is causing the issue, and then select **Save Changes** from the **Action** menu. The XiO Cloud service resumes sending settings to the device once it verifies that the problem setting is fixed.

Manage Licenses

Certain Crestron devices use licenses to enable extra functionality. These licenses may be managed through the XiO Cloud service. Licenses may be added to devices, removed from devices, or transferred to different devices.

The XiO Cloud service maintains a record of all of the licenses that have been purchased for a customer's account, including licenses that were included with purchased devices.

NOTE: As of XiO Cloud release 1.36, managing device licenses (such as VC-4 server licenses) within XiO Cloud no longer requires purchase of any XiO Cloud room-based licenses.

Manage Licenses for a Single Device

To manage the licenses for a single device, select a device from the group tree to display its configuration page, and then select the **Licenses** tab.

obal Filter Q + Add			All 🗸
Name 🗢	License Type 🗢	Expiration Date 🖨	Add/Remove
MERCURY-0	AirMedia	n/a	+ Add -
MERCURY-00	HDMI	n/a	+ Add -

Device Configuration Page - Licenses Tab

The **Licenses** section lists all of the licenses that are available for the device in table format. The **Licenses** table provides the following information for each license:

- The device name
- The license type

- The expiration date
- Controls to add or remove the license

Enter text in to the **Global Filter** text box to search for and display licenses that match the search terms.

If the license list spans multiple pages, use the navigation arrows on the bottom of the page to move forward or backward through the pages, or select a page number to navigate to that page.

To add a license for a feature that has not yet been licensed for a device, select**Add** in the **Add/Remove** column for the device.

NOTE: If multiple licenses are available for the same feature, the license that expires first is added first automatically. For example, if a 1-year AirMedia® presentation system license and a 2-year AirMedia license are available, the 1-year license is added first.

If a license other than the license with the earliest expiration date is desired, select the arrow next to the **Add** button to choose from the available expiration dates in the account.

Device Configuration Page - Licenses Tab (Expiration Date Selection)

🗸 Stat	tus 🏟 Settings 🛛 🔍 Li	censes 🔟 Dashboard	Activity Log O Schedul	ed Actions
Glo	obal Filter Q + A	dd 🗕 🗕 Remove		All
	Name 🗢	License Type 🗢	Expiration Date 🖨	Add/Remove
	MERCURY-0	AirMedia	n/a	+ Add -
	MERCURY-00	HDMI	n/a	Dec 31 2018 [1 Available]
		₩ ≪ 1	₩ ₩	

To add licenses for multiple features at the same time, check the boxes next to the license features, and then select **Add** at the top of the screen. As with adding licenses individually, if multiple licenses are available for the same feature, the license that expires first is added first automatically.

Select the check box in the table heading row to select or deselect all available licenses.

Device Configuration Page - Licenses Tab (Add Multiple Licenses)



After adding a license using either of these methods, a confirmation dialog box is displayed. Select **YES** to apply the license.

Add Licenses Confirmation Dialog Box

re you sure you wish t	o add the following licenses?	
Name	License Type	Expiration Date
MERCURY-0	AirMedia [1 Available]	Dec 31 2018
MERCURY-00	HDMI [1 Available]	Dec 31 2018

To remove a license for a feature that has not yet been licensed for a device, select **Remove** in the **Add/Remove** column for the device.

Removing a license returns it to the customer's license pool, allowing the same license to be applied to a different device.

Device Configuration Page - Licenses Tab (Remove Button)

bal Filter Q + Ad	ld <mark>–</mark> Remove		All 🝷
Name 🗢	License Type 🗢	Expiration Date 🖨	Add/Remove
Tech Pubs Mercury	AirMedia	Never	- Remove
Tech Pubs Mercury	HDMI	Never	- Remove

To remove licenses for multiple features at the same time, check the boxes next to the license features, and then select **Remove** at the top of the screen.

Select the check box in the table heading row to select or deselect all available licenses.

 Status 	s 🌣 Settings 🔍 Licer	nses 🛄 Dashboard	🔲 Activity Log 🛛 O Schedu	led Actions
	al Filter Q + Add	- Remove		All
	Name 🗢	License Type 🗢	Expiration Date 🖨	Add/Remove
	Tech Pubs Mercury	AirMedia	Never	- Remove
	Tech Pubs Mercury	HDMI	Never	- Remove
		≪ 1		

Device Configuration Page - Licenses Tab (Remove Multiple Licenses)

NOTE: Adding or removing licenses may cause a device to restart. Behavior may differ between device models due to firmware differences.

Manage Licenses for a Group or Room

To manage the licenses for multiple devices within the same group or room, select a group or room from the group tree to display its configuration page, and then select the **Licenses** tab.

Device Model: MERCURY	-		
Global Filter Q +	Add – Remove		Show: All
Name	License Type	Expiration Date	
Name Tech Pubs	License Type	Expiration Date	
	License Type HDMI	Expiration Date Never	- Remove

Group Configuration Page - Licenses Tab

The **Licenses** section of the group or room configuration page provides the same information and controls as the **Licenses** section of the device configuration page; however, the licenses for all the devices in the group or room and its subgroups are displayed.

To add or remove the licenses for multiple features or devices at once, press **Ctrl** and select the appropriate features, and then use the bulk **Add** and **Remove** buttons at the top of the page to add or remove the licenses, respectively.

Group Configuration Page - Licenses Tab (Select Multiple Licenses)

' Status 🔅 Settings 🔍 L	icenses 🔟 Dashboard	Activity Log 🛛 🖸	Scheduled Actions
Device Model: MERCURY	•		
Global Filter Q + A	dd 🗕 🗕 Remove		Show: All
Name	License Type	Expiration Date	
Name Tech Pubs	License Type	Expiration Date	
	License Type HDMI	Expiration Date Never	- Remove

Scheduled Actions

Scheduled actions allow certain device and room functions to be automated from the cloud.

The available actions for each device vary, although all devices support a scheduled restart and firmware upgrade. All rooms support display power, system check, system power, and maintenance mode actions. Actions may be scheduled to occur once or in a recurring pattern.

NOTE: Scheduled actions for rooms require the XiO Cloud Program Connector functionality to be configured appropriately for each action. For more information, refer to XiO Cloud Program Connector on page 57.

Scheduled actions are accessible from the **Scheduled Actions** tab for an individual device, group, or room.

Action	Group/Room/Device	Schedule	Last Ran	Next Run	Add/Remove
⊘ Firmware					+ Add
🕥 Reboot					+ Add
Request Device Log Files					+ Add

For rooms or groups, select **Device** to view the available scheduled actions for their grouped devices.

🗸 Status 🛛 🏟 Settings	🗉 🔳 Dashboard 🛛 🖽 Log	s Scheduled Actions			
Device	Room				
Device Model: AM-2	200 🗸				
Action	Group/Room/Device	Schedule	Last Ran	Next Run	Add/Remove
⊘ Firmware					+ Add
() Reboot					+ Add

Group Configuration Page - Scheduled Actions (Device)

For rooms or groups, select **Room** to view the available scheduled actions for the room or grouped rooms, respectively.

Group Configuration Page - Scheduled Actions (Room)

Status 🗳 Settings	🗷 Dashboard 🛛 🔚 Logs	Scheduled Actions			
Device	Room				
Action	Group/Room/Device	Schedule	Last Ran	Next Run	Add/Remove
Maintenance Mode					+ Add
Display Power					+ Add
System Check					+ Add
System Power					+ Add
			< > >>		

The **Scheduled Actions** table lists the actions that may be scheduled for the selected device, device model, or room.

When scheduling actions for a group or room, select the desired device type from the **Device Model** drop-down menu on the top left of the **Scheduled Actions** section. An action created in the group or room configuration page will be applied to all devices that share the selected model.

Select the arrow button next to an action to view more details about the action.

Schedule Actions Table

Action	Group/Room/Device	Schedule	Last Ran	Next Run	Add/Remove
⊘ Firmware					+ Add
	384	Oct 03, 2024 05:25 EDT	Oct 03, 2024 05:25 EDT		
	DM-NVX-384-C4426	Oct 07, 2024 23:34 EDT	Oct 07, 2024 23:34 EDT		— Remove
	384	Oct 08, 2024 00:40 EDT	Oct 08, 2024 00:40 EDT		
	384_Siva	Oct 09, 2024 01:41 EDT	Oct 09, 2024 01:41 EDT		
	DM-NVX-384-C4426	Nov 08, 2024 22:40 EST			— Remove
⊘ Reboot					+ Add
⊘ Request Device Log Files					+ Add

The following information is displayed for each device:

- The name of the action
- The device model, device model, or room group
- The schedule that has been set for the action
- The date and time when the action was last ran

NOTE: If the action was triggered but the device was unable to complete it for any reason, such as being offline at the scheduled date and time, an error icon **(**) is shown next to the **Last Ran** date and time to indicate this error.

- The date and time when the action is scheduled to run again
- Controls for adding and removing an action

Create a Scheduled Action

To schedule an action:

 Select the + Add button under Add/Remove. An Add Scheduled Action dialog box is displayed. Add Scheduled Action Dialog Box

Add Schedu	led Action		×
When:	11/01/2024 15:54	(UTC-12:00) International Date Line West	-
	Recurrence Pattern: Never	~	
		Cancel Sa	ave

- 2. Select the **When** field to open the calendar and time settings.
- 3. Select the date and time for the action to occur. If the **Recurrence Pattern** is set to **Never**, the action will occur only once at the selected date and time.

> < November 2024 Su Mo Tu We Th Fr Sa 384_Siva 1 2 DM-N 3 4 5 6 7 8 9 Add Schedul 10 11 12 13 14 15 16

Add Scheduled Action Dialog Box (Calendar and Time Settings)

	17	18	19	20	21	22	23		
When:	24	25	26	27	28	29	30	national Date Line West	~
Rebo	27	23	20	27	20	27	50		
			~		^				
1			15	5 :	54				
			\sim	,	\sim				

4. Select a time zone from the drop-down menu to the right of the **When** field.

NOTE: All devices in the same time zone that share a scheduled action perform that action at the same time if the action is set at a group level. If there are devices in different time zones, their actions may be scheduled individually.

- 5. If applicable, use the **Recurrence Pattern** drop-down menu to select if and when the action should repeat. The following options are provided:
 - Never: The action will occur only once on the date and time that is set for the When field.
 - **Daily**: The action will occur every day starting on the date and time that is set for the **When** field.
 - Weekly: The action will occur every week on the days selected, starting on the date and time that is set for the When field. Select the empty check box next to a day to select it.

When:	11/01/2024 15:54	Ë	(UTC-12:00) Internationa	I Date Line West	\sim
Rebo	oot				
	Recurrence Pattern:	Weekly	~		
	Sunday 🔽 Monday	🗸 Tuesday 🗸	Wednesday 🔽 Thursday	🗸 Friday 🗌 Saturday	

Add Scheduled Action Dialog Box (Weekly Recurrence Pattern)

• **Monthly**: The action will occur on the selected date of every month. Options are **1** through **31** and last.

Add Scheduled Action				×
When: 11/01/2024 15:58	Ë	(UTC 12:00) Internetional Data Line W	ect V	
Reboot		(UTC-12:00) International Date Line We	est 🗸	
Recurrence Pattern:	Monthly ~			
Day:	1 ~	of every month		
			Cancel Sav	е

Add Scheduled Action Dialog Box (Monthly Recurrence Pattern)

NOTE: The selection in the **When** box determines the first time the scheduled action occurs and does not need to be set for the recurrence pattern. In the example above, the first time the action occurs will be on July 12. Thereafter, it will occur on the first day of each month, so the next occurrence will be on August 1.


- 6. If applicable, use the provided controls to configure additional settings for the scheduled action. Each category of scheduled actions has its own unique controls.
- 7. Select **Save**. The new scheduled action is added under its parent category.

Delete a Scheduled Action

To delete a scheduled action:

- 1. Use the arrow button next to the action name to expand the selection.
- 2. Select the **- Remove** button under **Add/Remove** for the desired action. A **Confirmed Scheduled Action Delete** dialog box is displayed.

Confirm Scheduled Action Delete Dialog Box

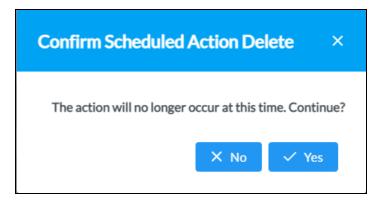


3. Select **Yes** to delete the action, or select **No** to cancel the deletion.

Dashboard


The Dashboard section provides interactive data that shows when and how a device is used within the organization.

The **Dashboard** section is accessible from the **Dashboard** tab for an individual device or for a group or room (license-dependent).

Device Configuration Page - Dashboard

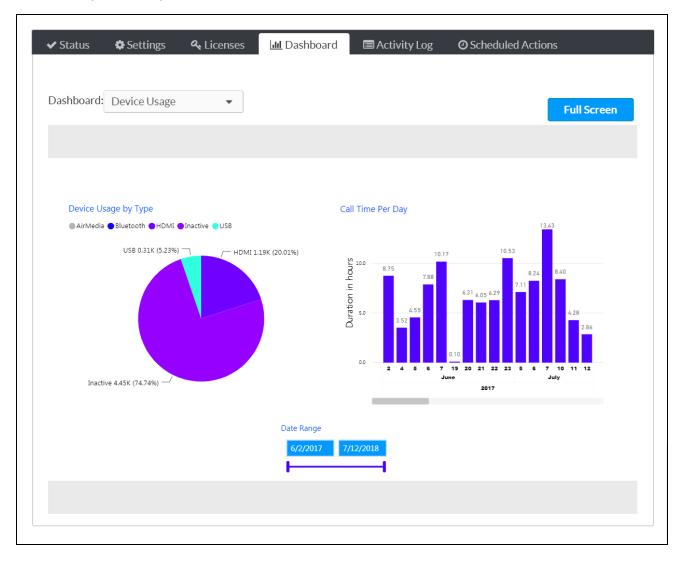

Group Configuration Page - Dashboard

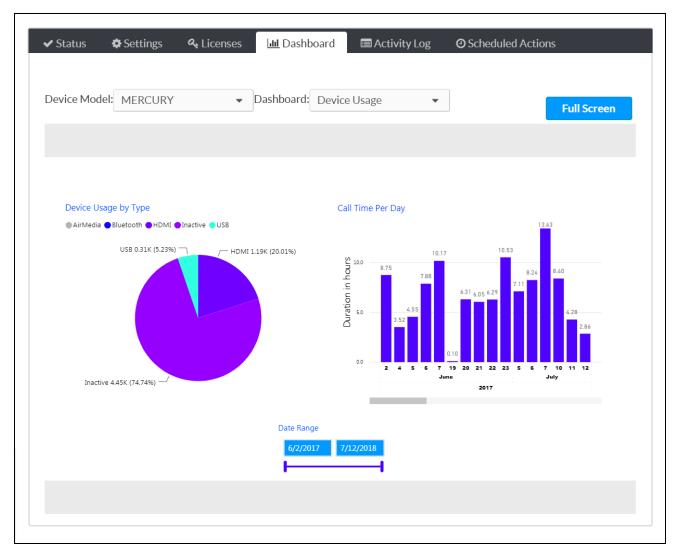

Use the **Dashboard** drop-down menu to select the type of data shown for the device (such as device usage). The available data varies by device.

When viewing the **Dashboard** section for a group or room, select the desired device type from the **Device Model** drop-down menu on the top left of the **Settings** section. The dashboard presents data for all devices within the group or room that share the same model.

Dashboards are interactive and contain different charts that may be cross-filtered by selecting the chart and filters:

- Hover the mouse cursor over a chart to expose additional selections for viewing and sorting the chart, changing the level of data shown, and exporting data as a CSV file or a Microsoft Excel® software file.
- Use the **Date Range** filter to show data from a specific date range. Enter a start and end date in the appropriate fields, or drag the two points on the slider bar up and down to adjust the start and end dates.

Select **Full Screen** to display the **Dashboard** section in full screen mode. To return to the normal size, press the **Esc** key on the keyboard.

Activity Log

The **Activity Log** section provides a list of events that have occurred for each device.

The **Activity Log** section is accessible from the **Activity Log** tab for an individual device or for a group or room (license-dependent).

Device Configuration Page - Activity Log

Global Filter Q	to	m
		Download Previous 30 Days Events
Date and Time 👻	User 🖨	Event 🗢
07/12/2018 3:58 PM	Ian H	Scheduled Reboot action created
07/11/2018 12:51 PM	lan H	Setting Changed:Fusion Cloud URL Old value:https://fitc- mstrs.crestronfusion.com/Fusion/device manager/api/devicemanager New value:https://yourdomain.fusioncloud.co m
07/11/2018 12:51 PM	lan H	Setting Changed:Fusion Cloud Old value:True New value:True
07/11/2018 11:50 AM	lan H	Setting Changed:Host Name Old value:TSS-10-IH1 New value:TSW- 1060-IH1

The Activity Log presents the following information for each device in table format:

- Scheduled actions
- Changed device settings, including the original and new values
- Licenses that were added to or removed from the device
- Movement from one group to another
- Movement between online and offline states

Each entry in the **Activity Log** table includes the date and time of the event, the logged-in user who performed the event (if applicable), and a summary of the event.

The **Activity Log** table at the group level presents additional data, including the device model and the device, group, or subgroup that was affected. Use the drop-down menu at the top of the **Device Model** column to filter the table by device type.

Group Configuration Page - Activity Log

Global Filter Q	Show Only Gro		to	
Globar Inter		upevents		evious 30 Days Events
Date and Time 👻	User 🖨	Device Model 🗢	Device or Group 🖨	Event 🗢
07/12/2018 3:58 PM	lan H	TSW-1060	TSW-1060-IH1	Scheduled Reboot action created
07/11/2018 12:51 PM	lan H	TSW-1060	304 Link	Setting Changed:Fusion Cloud URL Old value: New value:https://yourdom ain.fusioncloud.com
07/11/2018 12:51 PM	lan H	TSW-1060	TSW-1060-IH1	Setting Changed:Fusion Cloud URL Old value:https://fitc- mstrs.crestronfusion.c om/Fusion/deviceman ager/api/devicemanag er New value:https://yourdom ain.fusioncloud.com
07/11/2018 12:51 PM	lan H	TSW-1060	304 Link	Setting Changed:Fusion Cloud Old value: New value:True

The table may be filtered using a global filter or date filter:

- Enter text in to the **Global Filter** text box to search for and display activity log entries that match the search term(s). (For example, typing "Mercury" in the global filter box will show all rows containing the word "Mercury" in any column.)
- Click inside the first date filter text box to select a start date for the activity log, and then click inside the second date box to select an end date for the activity log. The activity log updates to show entries within the specified date range.

If the activity log list spans multiple pages, use the navigation arrows on the bottom of the page to move forward or backward through the pages, or select a page number to navigate to that page.

Select **Download Previous 30 Days Events** to download the previous 30 days of the activity log as a CSV file. Any filter applied to the table are not applied to the CSV file.

When viewing the Activity Log at the group level, select the empty check box next to **Show Only Group Events** to update the table to show events that were performed at the group level only.

Device Metadata

The **Device Metadata** section allows various metadata information to be added to devices within the XiO Cloud service.

The Device Metadata section is accessible from the Device Metadata tab for an individual device.

~	Status	🌣 Settings	E Dashboard	🔳 Logs	Scheduled Actions	🏶 Device Metadata	
	✓ Device	e Quick Links					່ງ Revert
					Text to Display		
		Link 1				Ø	
		Link 2				Ø	
		Link 3				Ø	
		Link 4				Ø	
		Link 5				Ø	

Expand the **Device Quick Links** accordion to associate related URLs to a device for quick access within the XiO Cloud service, such as URLs for XPanels, device documentation, and other management portals. Up to five URLs can be added per device.

NOTE: The following URL protocols are supported: "http://", "https://", "ssh://", "sftp://", "rtsp://", "vnc://". For protocols that are not supported by the web browser, a compatible application must be registered in the OS of the local computer; otherwise, selecting the link will open a blank page in the web browser. The registered application is OS dependent and must be able to handle the associated resource URI.

For each link, enter the desired URL within the first text field, and then enter the text to display within the second field. The link is provided to the right of these text fields once it has been entered. Select the link once it has been generated to open the URL in a new tab.

Update Firmware


Firmware for one or all devices may be updated from the XiO Cloud service. When new firmware is released for a device, it is posted to the cloud and made available for update.


NOTE: Firmware updates are scheduled actions and may be managed like any other scheduled action. For more information, refer to Scheduled Actions on page 84.

To update device firmware:

NOTE: As of XiO Cloud version 1.58, firmware cannot be downgraded from the XiO Cloud service on any devices.

- 1. Select the individual device or the group where the firmware update is desired.
- 2. Select **Update Firmware Version** from the **Action** drop-down menu.



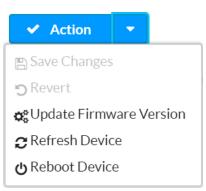

The **Update Firmware** dialog box is displayed.

Update Firmware Dialog Box

Update Firmware				×
Device-Model	AM	-200 💌	,	
Version	1.37	781.00008.001 -	•	
Update-Time	0	Now		
	\bigcirc	09/11/2018 09:16		(UTC-12:00) International D: 🗢
				Cancel Update

NOTE: When updating firmware from the group or room level, select the device model from the **Device-Model** drop-down menu to update the firmware of all devices that share the model type.

3. Use the **Version** drop-down menu to select the firmware version that will be installed on the device or devices.

NOTE: Release notes may be downloaded from the link below the **Version** menu if available.

- 4. Select when the firmware update will be performed:
 - a. Select the **Now** radio button to perform the firmware update immediately, or select the radio button next to the **date/time** and **time zone** fields to perform the firmware update at a set date and time. The firmware update will occur on the selected date and time.
 - b. Select inside the **date/time** field to display a pop-up dialog box for selecting a date and time.
 - c. Use the drop-down menu to the right of the **date/time** field to select a time zone for the firmware update.

		<		Septe	embei	r2018	}	>	
		Su	Mo	Tu	We	Th	Fr	Sa	
								1	
Update Firmware		2		4		6			
			10	11	12	13	14	15	
Device-Model	AM-2	16	17	18	19	20	21	22	
Version	1.378	23	24	25	26	27	28	29	
		30	1	2		4		6	
Update-Time	0			(09::	^ 16 ~			
	•	09/1	1/20	18 09	9:16	Ê		(U	JTC-12:00) International D; 👻
							-		
									Cancel Update

Update Firmware Dialog Box (Day and Time Selection)

5. Select **Update** to perform the firmware update at the selected date and time, or select **Cancel** to cancel the firmware update.

At the specified update time, the device connects to a secure Crestron file server to download and install the firmware. If the device cannot complete the download and installation on the first attempt, it tries up to three more times. If these attempts fail, the device tries one more time at 2:00 AM local time. If this final attempt fails, a failure message is displayed in the **Firmware-Version** column on the group **Status** page.


NOTE: Automatic firmware updates through the XiO Cloud service cannot be turned off.

Restart Devices

An individual device or groups of devices may be rebooted remotely from the XiO Cloud service.

To restart one or more devices, select **Reboot Device** from the **Action** drop-down menu on the desired device or group page. The device or devices restart immediately.

Action Drop-Down Menu

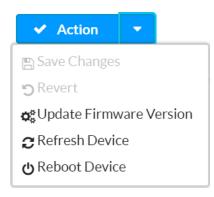

Refresh Devices

Occasionally, the settings or status of a device shown in the XiO Cloud service may become out of sync with the settings or status on the actual device.

To obtain the latest settings and status from the device, select **Refresh Device** from the **Action** dropdown menu. The latest device settings and status are synced with the XiO Cloud service.

Manage Users

Individuals in an organization may have their own login credentials to access the XiO Cloud service. The system administrator can limit a user's access to only the devices that they need to manage. For example, an administrator in Hong Kong may be granted read/write access to devices in their local office but granted read-only access to devices in the London office.

This section explains how to manage users locally.

Add a New User

The **USERS** menu is located in the user management panel, which may be accessed by selecting the **Users** button 🛱 in the navigation menu.


Users Menu



The **USERS** menu provides a list of the users with access to the XiO Cloud service for the organization.

To add a new user:

- 1. Select the **USERS** menu button 🔁 to display a drop-down menu.
 - Users Menu Add New User

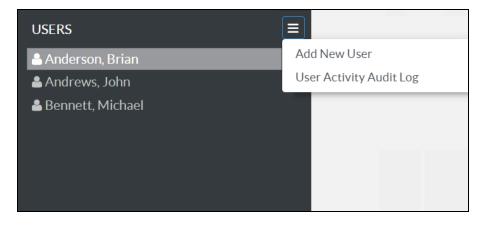

2. Select **Add New User**. A **Users** page is displayed to the right of the **USERS** menu.

Users Page

Profile				
▼ Details			🖱 Revert	🖺 Save Changes
	Identity Provider	CHeDirectory.mail.onmicrosoft.com		
	User Name			
	First Name			
	Middle Name			
	Last Name			
	Email			
	Role	Global Administrator 🔹		
	What's New Message			

- 3. Use the provided fields to enter information about the new user, including identity provider, username, name, email address, and role. Two roles are available in the XiO Cloud service:
 - Select **Global Administrator** from the **Role** drop-down menu to grant the user complete access to every part of the system. The user may add other global administrators. There must always must be at least one global administrator in the system.
 - Select **Standard User** from the **Role** drop-down menu to grant the user limited levels of access based on assigned groups. This user may not add other global administrators.
- 4. Once all information is entered, select **Save Changes** at the top right of the page. Select **Revert** to clear any information that was entered.

The user receives an email asking for account confirmation, along with a temporary password. A change of password is requested on the first login.

Edit User Information

Any of the information entered for a user during the account creation process may be edited at any time.

To edit the information for an existing user:

1. Select the user's name in the **USERS** menu. A **Users** page with the **Profile** tab open by default is displayed to the right of the **USERS** menu.

Uses Page - Profile

✓ Details		Reset Password	'S Revert	Save Changes
Account N	me Account			
User N	me jsmith1@CHeDirectory.mail.onmicrosoft.com			
First N	me John			
Middle N	me			
Last N	me Smith			
E	nail jsmith1@crestron.com			
Identity Prov	der CHeDirectory.mail.onmicrosoft.com			
	ole Standard User	\sim		
What's New Mess	age			
Alert E	nail			
Alert Mobile Phor	e 🕽 📃 🗸 +1 201-555-0123			

2. Use the provided fields to edit information about the user, including name, email address, role, and alert notifications.

NOTE: For more information on managing alerts, refer to Alerts on page 127. For more information on the What's New Message, refer to What's New Message on page 125.

3. Select **Save Changes** at the top right of the page to save any changes made. Select **Revert** to clear any information that was entered.

To reset a user's password, select **Reset Password** at the top right of the page. An email will be sent to the user with instructions for resetting their password.

Manage User Access

Users may be granted different access levels to groups or rooms within the XiO Cloud service environment.

NOTE: For more information on the tasks that can be performed by each user access level, refer to Appendix B: User Access Matrix on page 218.

To manage access levels for a user:

- 1. Select the user's name in the **USERS** menu. A **Users** page with the **Profile** tab open by default is displayed to the right of the **USERS** menu.
- 2. Select the **Access** tab.

Users Page - Access Tab

Details		Save Changes
	Q	
Name 1.	Access Level	Inherit
# Heroes Team	Viewer 🗸	
001 Universe Max Length Max Length Max Length Maxi	Viewer 🗸	
PDIMPLE-DoNotUse1	Viewer 🗸	
AMPS_Perf	Viewer V	
AraVC4Test	Viewer 🗸	
CUZ	Viewer 🗸	
Delete	Viewer V	
GV 70 Series Room	Viewer 🗸	
Mukesh	Viewer 🗸	
NA Heroes	Viewer 🗸	
	« < 1 2 > » 10	<u> </u>

3. Use the **Access Level** drop-down menu to select the user's access level for each group and subgroup or room.

NOTE: Enter text in to the **Group or Room Search** text box to search for and display groups or rooms that match the search term(s).

- Select **Viewer** to grant the user read-only access to the group or room. The user may view devices within the group or room but cannot modify them.
- Select **Tech** to grant the user read and write access to the group or room. The user may view the status of devices and change device settings within the group or room.
- Select **Administrator** to grant the user read and write access to the group or room and to allow the user to change the access level of other users to the group or room.
- Select **Hidden** to hide the room or group from the user within the group tree.

• (Subgroups or room only) Select **Inherit** to have the subgroup or room inherit the access level settings of its parent group. **Inherit** is the default setting for subgroups.


NOTE: The access level for a subgroup or room that is set to **Inherit** from its parent group can be overridden. For example, if a standard user has **Viewer** permissions for the parent group, that user can be assigned **Tech** permissions for a subgroup or room below the parent group.

Delete a User

Users may be deleted from the XiO Cloud service to remove their access and to prevent them from viewing or changing any settings in the service.

To delete a user:

1. Select the user's name in the **USERS** menu.

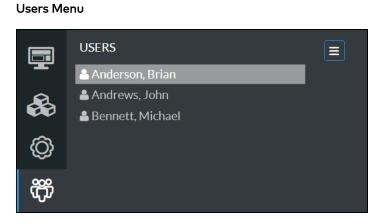

2. Select **Delete User** from the **Action** menu.

Action Drop-Down Menu - Delete User



The **Confirm User Delete** dialog box is displayed.

Confirm User Delete Dialog Box



3. Select **Yes** to delete the user or select **No** to cancel the deletion.

Download User Activity Audit Log

A user activity audit log for the XiO Cloud account can be downloaded as a CSV file. The audit log provides a list of recent user-initiated events (such as login and logoff) with corresponding user IDs and time stamps.

To download the user activity audit log:

1. Select the **USERS** menu button 📃 to display a drop-down menu.

Users Menu - User Activity Audit Log

USERS	
🐣 Anderson, Brian	Add New User
🛓 Andrews, John	User Activity Audit Log
畠 Bennett, Michael	

2. Select User Activity Audit Log. The audit log is downloaded to your PC as a CSV file.

Single Sign-On

XiO Cloud accounts can be configured for enterprise single sign-on (SSO) with the Okta® management platform, the Active Directory® service, and other identity providers. Account administrators may contact Crestron support to configure their accounts for single sign-on.

To configure SSO for the XiO Cloud service using an identity provider:

- Create a SAML or OpenID application registration in the identity provider. Refer to <u>Crestron</u> <u>Online Help article 1000838</u> for instructions on how to create SAML applications for common identity providers.
- 2. Submit a completed <u>XiO Cloud SSO Request Form</u> to Crestron. Crestron will respond to the account administrator via email once the integration is confirmed.
- 3. Add one or more external users to the XiO Cloud account as described in Manage Users on page 100.
 - Select **External Domain** for **Identity Provider** when creating the external user.
 - The email address specified for the external user must match their email address used to access the identity provider.
 - Ensure that the appropriate user role and access level are delegated to the external user.
- 4. Test that the external user(s) can log into the service once Crestron has confirmed the integration.


XiO Cloud also supports multifactor authentication (MFA) for single sign-on solutions. MFA is configured within your identity provider.

Account Dashboard

The XiO Cloud service provides an account dashboard that shows various account statuses in real time. The account dashboard can be accessed by selecting the **Home** button 🗐 in the navigation menu and is displayed by default after logging into the service. The account dashboard can also be viewed for individual groups or rooms using the left navigation menu.

NOTE: For dashboards with date ranges, the data shown will extend only until the end of the previous day.

Account Dashboard

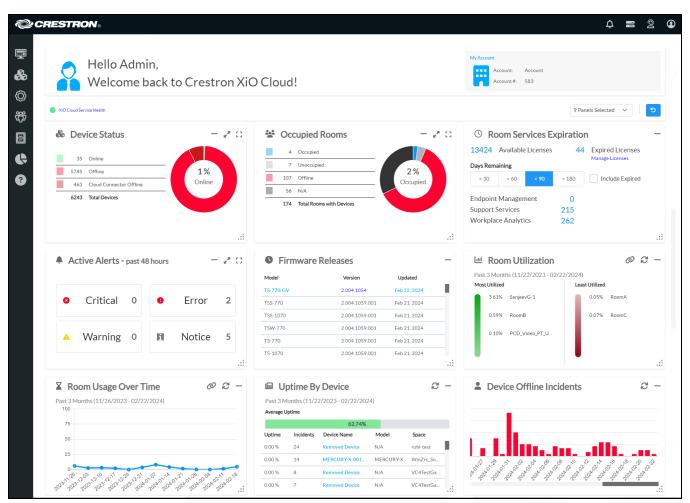

The account dashboard page provides a message near the top of the page that indicates the current health status of the XiO Cloud service.



XiO Cloud Service Health

A green icon is shown if the service is healthy, and a red icon is shown if the service is unhealthy (experiencing issues or outages). A link to <u>Crestron Online Help answer ID 5894</u> is also provided that gives detailed information on the current health status of the XiO Cloud service and updates regarding service restoration.

The account dashboard page also contains tiles that each show different account statuses. These tiles can be expanded, hidden, or reordered as needed.

NOTE: Certain account status tiles may not provide all of the controls listed below.

• Select the maximize button [] at the top right of a tile to expand the tile to the full width of the browser window and to show more information for the associated account status.

NOTE: The maximize button cannot be selected if the browser window is not maximized to full screen.


- If a tile is expanded to full width, select the maximize button 🛟 again to shrink the tile to its original size, or select the half-width button 📲 to shrink the tile to half the width of the browser window.
- Select the half-width button 2^{n} at the top right of a tile to expand the tile half the width of the browser window and to show more information for the associated account status.
- If a tile is expanded to half width, select the half-width button * again to shrink the tile to its original size.
- Select the minimize button to hide the tile from the account dashboard page. Hidden tiles can
 be returned to the account dashboard page using the View Panels drop-down menu.
- Select the refresh button ${\mathcal C}$ to refresh the data shown in the tile (if supported).
- Select the link button Ø to navigate to the Historical Reports page for generating a custom report based on the data shown in the tile (if supported). For more information, refer to Historical Reports (Early Access) on page 120.
- Use the **View Panels** drop-down menu on the top right of the page to show or hide tiles. If a tile is selected, it will be shown on the account dashboard page. If a tile is unselected, it will be hidden from the page.
- Select the clear button to clear any filters that have been created to sort data in the account status tiles. Each tile that allows filters will also provide a clear button for the individual account status.


• Press and hold a tile's header bar or the grip icon in the bottom-right corner to float the tile for reordering. Once it is floating, drag the tile across the account dashboard page to the desired location, and then release the tile to move it to that location. If the floating tile is placed over an existing tile, the latter tile is moved automatically.

The following account statuses are displayed in the dashboard.

Device Status

Expand the **Device Status** tile to display information about devices that are reporting online or offline within the service. The devices that are shown can be filtered based on their status and type.



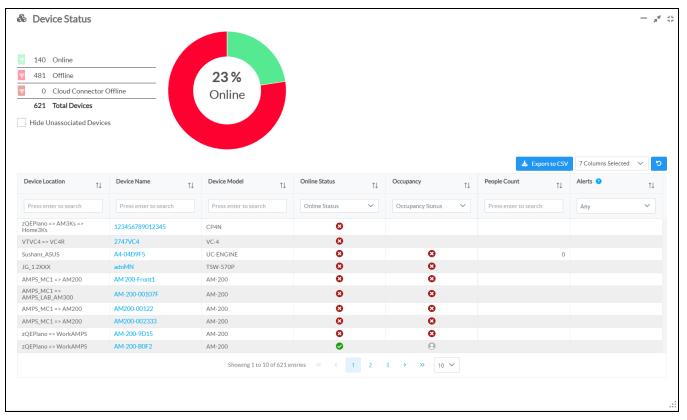

A pie chart is provided that gives an overview of the devices that are reporting online or offline within the service. The pie chart corresponds with the device status categories that are listed to the left of the chart. The following device status categories are provided:

NOTE: Devices that have not been associated with a room or group are included in the device status reports by default. Select the **Hide Unassociated Devices** check box below the device status categories to hide all unassociated devices from the device status reports.

- Online: Indicates the number of devices that are reporting online within the service.
- **Offline**: Indicates the number of devices that are reporting offline within the service. A device is considered offline after it fails to respond to multiple call attempts issued five minutes after the device first reports as disconnected.
- **Cloud Connector Offline**: Indicates the number of connected Crestron XiO Cloud Gateway devices that are reporting offline.

Certain device status categories have filter buttons **t** that can be used to show or hide the category from the pie chart. The color of the filter buttons matches the color of the device status category in the pie chart. Once a device status category is hidden, select the button again to show the status in the pie chart. The percentage of online devices shown within the pie chart changes automatically depending on the selected filters.

NOTE: The filter buttons also filter data in the device status table within the tile automatically.

The **Device Status** tile also lists all devices in the account in table form. Each table column provides a search field or drop-down menu in its header row that allows the device table to be filtered or sorted based on the selected criterion. The table also provides navigation controls at the bottom of the tile that can be used to move between pages and set the number of table rows per page.

The following information is provided for each device:

- **Device Location**: The room or group where the device is located within XiO Cloud.
- **Device Name**: The device name in XiO Cloud. Select the device name to navigate to the device within the group tree.
- **Device Model**: The device model.
- Online Status: Indicates whether the device is reporting online ♥ or offline 8 within XiO Cloud. Crestron XiO Cloud Gateway connected devices that are reporting offline show a cloud connector offline icon ♥.
- **Occupancy**: Shows one of the following icons if the device supports occupancy detection. No icon is shown if the device does not support occupancy detection.
 - [°] Shows a blue icon 😫 if occupancy is detected.
 - ° Shows a gray icon 🕘 if no occupancy is detected.
 - [°] Shows an x icon 😢 if occupancy detection is reporting offline.
- **People Count**: If occupancy detection is supported by the device, displays the occupancy number for the associated room.
- Alerts: If alerts are reported for the room, a description of the issue and the corresponding alert level (Notice, Warning, Error, and Critical) are shown for each alert.

The data that is displayed in the device table can be customized by filtering the table columns. By default, 7 columns are displayed that contain the data described in the list above. Select the clear button \bigcirc to clear any filters for the **Device Status** tile.

To select or deselect table columns for the device status table, expand the drop-down menu at the top right of the table. Then, select or deselect an item in the menu to display or hide that column from the table, respectively. Use the check box at the top of the menu to select or deselect all columns.


NOTE: The device status table will reset to its default settings after logging out of the XiO Cloud service.

The device status table can be downloaded as a CSV file by selecting the **Export to CSV** button at the top right of the table. The CSV file includes all selected table columns as described above.

Occupied Rooms

Expand the **Occupied Rooms** tile to display information about room occupancy status within the service. The rooms that are shown can be filtered based on their status and type.

Account Dashboard Page - Occupied Rooms

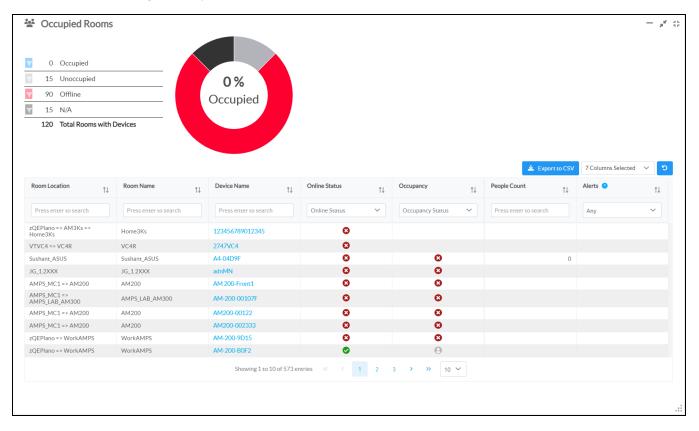

A pie chart is provided that gives an overview of the room occupancy within the service. The pie chart corresponds with the room occupancy categories that are listed to the left of the chart. The following room occupancy categories are provided:

- **Occupied**: Indicates the number of rooms that are reporting as occupied within the service. If multiple devices in a room report occupancy, the room will show as occupied if any of these devices report active occupancy.
- Unoccupied: Indicates the number of rooms that are reporting as unoccupied within the service.
- **Offline**: Indicates the number of rooms that have occupancy detection reporting as offline within the service.
- **N/A**: Indicates the number of rooms that do not contain devices that report occupancy.

Certain room occupancy categories have filter buttons T that can be used to show or hide the category from the pie chart. The color of the filter buttons matches the color of the room occupancy category in the pie chart. Once a room occupancy category is hidden, select the button again to show the status in the pie chart. The percentage of occupied rooms shown within the pie chart changes automatically depending on the selected filters.

NOTE: The filter buttons also filter data in the room occupancy table automatically.

The **Occupied Rooms** tile also lists all rooms in the account in table form. Each table column provides a search field or drop-down menu in its header row that allows the room occupancy table to be filtered or sorted based on the selected criterion. The table also provides navigation controls at the bottom of the tile that can be used to move between pages and set the number of table rows per page.

The following information is provided for each room:

- **Room Location**: The location of the room within the group tree.
- Room Name: The room name in XiO Cloud
- **Device Name**: The device name that reports occupancy within the room (if applicable). Select the device name to navigate to the device within the group tree.
- Online Status: Indicates whether the device is reporting online ♥ or offline ♥ within XiO Cloud. Crestron XiO Cloud Gateway connected devices that are reporting offline show a cloud connector offline icon ♥.
- **Occupancy**: Shows one of the following icons if the device supports occupancy detection. No icon is shown if the device does not support occupancy detection.
 - [°] Shows a blue icon 😫 if occupancy is detected.
 - Shows a gray icon 🥥 if no occupancy is detected.
 - [°] Shows an x icon 😢 if occupancy detection is reporting offline.
- **People Count**: If occupancy detection is supported by the device, displays the occupancy number for the associated room.
- Alerts: If alerts are reported for the room, a description of the issue and the corresponding alert level (Notice, Warning, Error, and Critical) are shown for each alert.

The data that is displayed in the room occupancy table can be customized by filtering the table columns. By default, 7 columns are displayed that contain the data described in the list above. Select the clear button \bigcirc to clear any filters for the **Occupied Rooms** tile.

To select or deselect table columns for the room occupancy table, expand the drop-down menu at the top right of the table. Then, select or deselect an item in the menu to display or hide that column from the status table, respectively. Use the check box at the top of the menu to select or deselect all columns.

NOTE: The room occupancy table will reset to its default settings after logging out of the XiO Cloud service.

The room occupancy table can be downloaded as a CSV file by selecting the **Export to CSV** button at the top right of the table. The CSV file includes all selected table columns as described above.

Active Alerts - last 48 hours

Expand the **Active Alerts - last 48 hours** tile to display information about alert messages that have been raised within the service over the last 48 hours.

Account Dashboard Page - Active Alerts - last 48 hours

S Cri	tical	0 🔻	•	Error	0	T	•	Warning	0	T		Notice	9 🔻
											🛓 Export to C	5V 7 Columns	Selected 🗸 🖸
уре	↑↓	Room Name	î↓	Room Location	î↓	Device Name	î↓	Device Model	î↓	Date	ţì	Alert	¢↓
		Press enter to search		Press enter to search		Press enter to search		Press enter to search		Date		Press ente	r to search
lotification		MercLegacy_GE		A_Mercury Performance ercLegacy_GE	=> M	PERFORMANCELAB	16	MERCURY		12/20/2022	2 5:02:20 AM	HDMI In Is (Connected: True
lotification		MercLegacy_GE		A_Mercury Performance ercLegacy_GE	=> M	PERFORMANCELAB	20	MERCURY		12/20/2022	2 5:02:21 AM	HDMI In Is (Connected: True
lotification		MercLegacy_GE		A_Mercury Performance ercLegacy_GE	=> M	PERFORMANCELAB	20	MERCURY		12/19/2022	2 10:26:28 PM	MicMute: Tr	ue
lotification		MercLegacy_GE		A_Mercury Performance ercLegacy_GE	=> M	PERFORMANCELAB	26	MERCURY		12/20/2022	2 5:02:23 AM	HDMI In Is (Connected: True
lotification		MercLegacy_GE		A_Mercury Performance ercLegacy_GE	=> M	PERFORMANCELAB	27	MERCURY		12/20/2022	2 5:02:15 AM	HDMI In Is (Connected: True
lotification		MercLegacy_GE		A_Mercury Performance ercLegacy_GE	=> M	PERFORMANCELAB	28	MERCURY		12/20/2022	2 5:02:11 AM	HDMI In Is (Connected: True
lotification		MercLegacy_GE		A_Mercury Performance ercLegacy_GE	=> M	PERFORMANCELAB	29	MERCURY		12/20/2022	2 5:02:35 AM	HDMI In Is (Connected: True
lotification		MercLegacy_GE		A_Mercury Performance ercLegacy_GE	=> M	PERFORMANCELAB	30	MERCURY		12/20/2022	2 5:02:23 AM	HDMI In Is (Connected: True
lotification		RTM-xx70-Loft		RTM-xx70-Loft		X70PERF-27		TSS-1070		12/20/2022	2 1:01:10 PM	Display Stat	us: On

The **Active Alerts - last 48 hours** tile shows the total number of alert messages that are active. Each alert level (**Notice**, **Warning**, **Error**, and **Critical**) shows a number that indicates how many alerts are active for that level.

NOTE: For more information on alert messages, refer to Alerts on page 127.

The **Active Alerts - last 48 hours** tile also lists all active alerts in the account in table form. Each table column provides a search field or drop-down menu in its header row that allows the alerts table to be filtered or sorted based on the selected criterion. The table also provides navigation controls at the bottom of the tile that can be used to move between pages and set the number of table rows per page.

The following information is provided for each alert:

- Type: The alert level (Notice, Warning, Error, and Critical)
- Room Name: The room name in XiO Cloud where the alert was raised.
- Room Location: The location of the room within the group tree.
- Device Name: The device name in XiO Cloud that raised the alert.
- Device Model: The device model.

- **Date**: The date and time when the alert was raised.
- **Alert**: A description of the issue that triggered the alert.

The data that is displayed in the alerts table can be customized by filtering the table columns. By default, 7 columns are displayed that contain the data described in the list above. Select the clear button \bigcirc to clear any filters for the **Active Alerts - last 48 hours** tile.

To select or deselect table columns for the alerts table, expand the drop-down menu at the top right of the table. Then, select or deselect an item in the menu to display or hide that column from the table, respectively. Use the check box at the top of the menu to select or deselect all columns.

NOTE: The alerts table will reset to its default settings after logging out of the XiO Cloud service.

The alerts table can be downloaded as a CSV file by selecting the **Export to CSV** button at the top right of the table. The CSV file includes all selected table columns as described above.

Firmware Releases

The **Firmware Releases** tile displays information about recent firmware releases for devices that have been claimed to the XiO Cloud account. For more information about updating device firmware in XiO Cloud, refer to Manage Devices on page 68.

NOTE: The Firmware Releases tile cannot be expanded to full or half-width size.

Account Dashboard Page - Firmware Releases

• Firmware Releases			_
Model	Version	Updated	
TSW-1070	2.004.1004.001	Apr 28, 2023	E
TSW-1060	3.002.1012.001	Apr 27, 2023	
UC-ENGINE-SD-Z	1.13.00.010-Zoom	Apr 26, 2023	
CP3	1.8001.0214.01	Apr 25, 2023	
CP3N	1.8001.0214.01	Apr 25, 2023	
RMC3	1.8001.0214	Apr 25. 2023	
			* * * *

The following information is provided for each firmware release:

- Model: The device model.
- **Version**: The device firmware version.

NOTE: If release notes are available for the device firmware version within XiO Cloud, the listed firmware version is displayed as a hyperlink that opens the release notes in a new tab or browser window or downloads them to the local computer.

• **Updated**: The date the firmware version was last updated or released.

Room Utilization

The **Room Utilization** tile displays information about the most and least used rooms within the XiO Cloud account (or for an individual group or room) based on reported occupancy. The data is fixed to a three month period leading up to the current date.

NOTE: The Room Utilization tile cannot be expanded to full or half-width size.

 Lesst 3 Months (11/22/2023 - 02/22/2024)

 Most Utilized
 Least Utilized

 3.61%
 3anjeevG-1

 0.59%
 0.05%

 0.10%
 PCD_Video_PT_UC-P8_...

Account Dashboard Page - Room Utilization

The following information is provided:

NOTE: Only rooms that support occupancy detection are included.


- **Most Utilized**: Lists up to four rooms that have been most utilized based on their reported occupancy in descending order. A percentage is shown next to each room indicating its total occupancy over a 24-hour period.
- Least Utilized: Lists up to four rooms that have been least utilized based on their reported occupancy in ascending order. A percentage is shown next to each room indicating its total occupancy over a 24-hour period.

Room Usage Over Time

The **Room Usage Over Time** tile displays information about how often rooms are used over time within the XiO Cloud account (or for an individual group or room) based on reported occupancy. The data is fixed to a three month period leading up to the current date.

NOTE: The Room Usage Over Time tile cannot be expanded to full or half-width size.

Account Dashboard Page - Room Usage Over Time

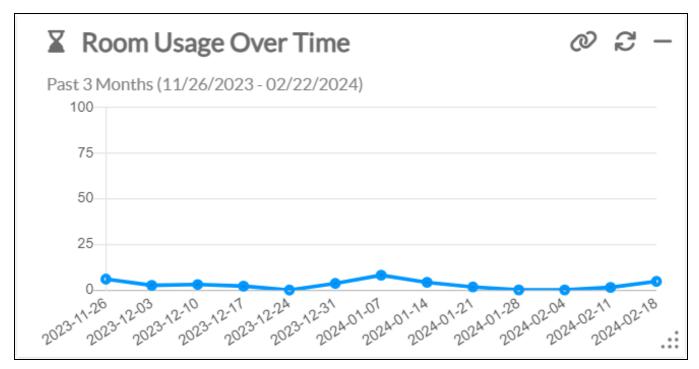

The **Room Usage Over Time** data is presented as a line graph where room usage is represented by data points for each week in the three-month period. Each data point is a percentage indicating the room or room group's total occupancy over a 24-hour period for the given week. Hover over a data point to view the exact usage percentage for that week.

NOTE: Only rooms that support occupancy detection are included.

Uptime By Device

The **Uptime By Device** tile displays information about the uptime for every device within the XiO Cloud account (or for an individual group or room). The data is fixed to a three month period leading up to the current date.

NOTE: The **Uptime By Device** tile cannot be expanded to full or half-width size.

Account Dashboard Page - Uptime By Device

l⊟ Upt	time By De	evice		Q .	_
Past 3 Mo	nths (11/22/202	23 - 02/22/2024)			
Average Upt	time				
		62.75%			
Uptime	Incidents	Device Name	Model	Space	
0.00 %	1	Removed Device	N/A	Ancillary Devices	
0.00 %	1	Removed Device	N/A	Ancillary Devices	
0.00 %	1	saira-CP4	CP4	Ancillary Devices	
0.00 %	1	MERCURY-X-00107FCF2	MERCURY-X	VenkatOffice	

The **Average Uptime** filled bar chart reports the average uptime (as a percentage) for all devices over a 24-hour period.

A table is also provided that lists all devices in ascending order by average uptime. The table includes the following information:


- **Uptime**: The average uptime for the device over a 24-hour period (as a percentage).
- Incidents: The number of incidents reported by the device.
- Device Name: The device name.
- Model: The device model.
- **Space**: The room or group where the device is located.

Device Offline Incidents

The **Device Offline Incidents** tile displays information about the number of reported offline incidents for all devices within the XiO Cloud account (or for an individual group or room). The data is fixed to a three month period leading up to the current date.

NOTE: The Device Offline Incidents tile cannot be expanded to full or half-width size.

Account Dashboard Page - Device Offline Incidents

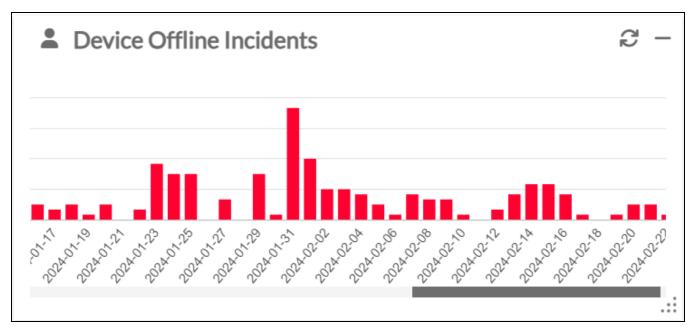

The **Device Offline Incidents** data is presented as a bar graph where offline incidents are represented by bars for each day in the three-month period. Each bar indicates the total number of offline incidents per day. Hover over a bar to view the exact number of offline incidents for that day. Use the scroll bar to scroll through the provided date range.

Room Services Expiration

The **Room Services Expiration** tile displays information about available and expired licenses for the XiO Cloud account (or for an individual group or room).

NOTE: The **Room Services Expiration** tile cannot be expanded to full or half-width size.

Account Dashboard Page - Room Services Expiration

() R	oom Ser	vices E>	cpiratio	n	
13377	Available	e Licenses	0	Expired Licenses Manage Licenses	
Days Rem	naining				
< 30	< 60	< 90	< 180	Include Expired	
Endpoin	it Managen	nent	15		
Support	Services		30		
Workpla	ace Analyti	CS	0		

The total number of **Available Licenses** and **Expired Licenses** are displayed at the top of the tile. Select **Manage Licenses** under the **Expired Licenses** count to navigate to the **Room Services** page for managing expired licenses. For more information, refer to Licensed Features on page 64.


The bottom portion of the tile shows the total number of available licenses per license type (**Endpoint Management**, **Support Services**, and **Workplace Analytics**) within a set period.

- Use the **Days Remaining** selections to show only licenses that are set to expire within the selected number of days (**30**, **60**, **90**, or **180**).
- Fill the **Include Expired** check box to also show licenses that have already expired.

Historical Reports (Early Access)

The XiO Cloud service provides a feature that allows custom historical reports to be generated based on various data sets within the XiO Cloud account. Historical reports can be customized based on report type, date range, and location within the environment group tree.

NOTE: Historical reports are currently in an early access period and will be turned on for all accounts in an upcoming XiO Cloud release. To have historical reports turned on for your XiO Cloud account, contact Crestron True Blue support via phone, email, or chat as described at www.crestron.com/Support.

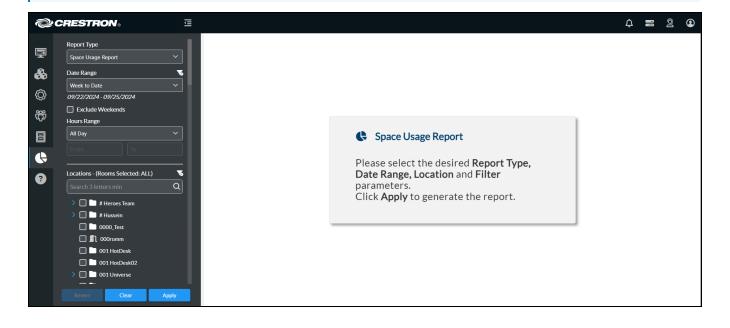

This feature is accessed by selecting the **Historical Reports** button **C** in the navigation menu.

Space Usage Report	
Date Range	
Week to Date	~
09/22/2024 - 09/25/2024	
Exclude Weekends	
Hours Range	
All Day	~
From	
ocations - (Rooms Selected: ALL)	
ocations - (Rooms Selected: ALL) Search 3 letters min	 م
	Q
Search 3 letters min	R Q
 >	ـــــــــــــــــــــــــــــــــــــ
Search 3 letters min # Heroes Team # Hussein 0000_Test	Q
Search 3 letters min # Heroes Team # Hussein 0000_Test 1	ه
Search 3 letters min # Heroes Team # Hussein 0000_Test 1 000romm 001 HotDesk	ه م
Search 3 letters min # Heroes Team # Hussein 0000_Test 1 000romm 001 HotDesk 001 HotDesk02	ر م
Search 3 letters min # Heroes Team # Hussein 0000_Test 1 000romm 001 HotDesk	6 Q


Use the following filters to customize the historical report.

- **Report Type**: Select one of the provided report types from the drop-down menu. Each report type includes different data sets from a specific category (such as space usage metrics) that are shown when the report is generated.
- **Date Range**: Select one of the provided date ranges from the drop-down menu. The generated report will show data only from within the specified range.

NOTES:

- While historical reports are in early access, no more than three months of data can be selected in any date range query.
- For reports with date ranges that include the current day, the data shown will extend only until the end of the previous day.

• Select **Custom Timeframe** to create a custom date range for the report. A pop-up calendar is displayed that is used to select the start and end dates to be used.

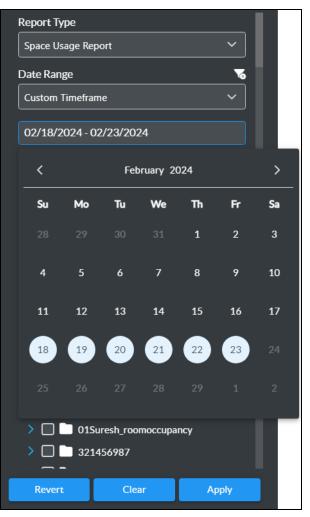

- $^{\circ}$ Select the filter clear button $\overline{\mathbf{v}}$ to clear any custom filters created for this selection.
- **Hour Range**: Select one of the provided hour ranges from the drop-down menu. The generated report will show data only from within the specified range.
 - Select **In Range** to create a custom hour range for the report. Select inside the start and end time boxes to display controls for setting the range.


Hours Range	
In Range	~
07:00 AM	05:00 PM
へ へ へ 07 : 00 AM	lected: ALL) To
~ ~ ~	Q
> Heroes	Team

- Select **Outside Range** to only show data that does not fall within a custom hour range for the report. Select inside the start and end time boxes to display controls for setting the range.
- **Locations**: Select the groups, rooms, or desks that will be included in the report using the environment group tree. The number of selected nodes are shown above the search field.
 - Fill the check box next to the group, room, or desk in the group tree to add that node to the report.

NOTE: If no nodes are selected, the report will include data for the entire group tree.

- Use the search function to search for a specific node within the group tree. The group tree will only show nodes that match the entered search terms.
- Select the filter clear button **™** to clear any custom filters created for this selection.

Once all filters have been selected, select **Apply** to generate the report within the right pane of the screen. If any changes are made to the report filters, select **Apply** again to generate a new report.

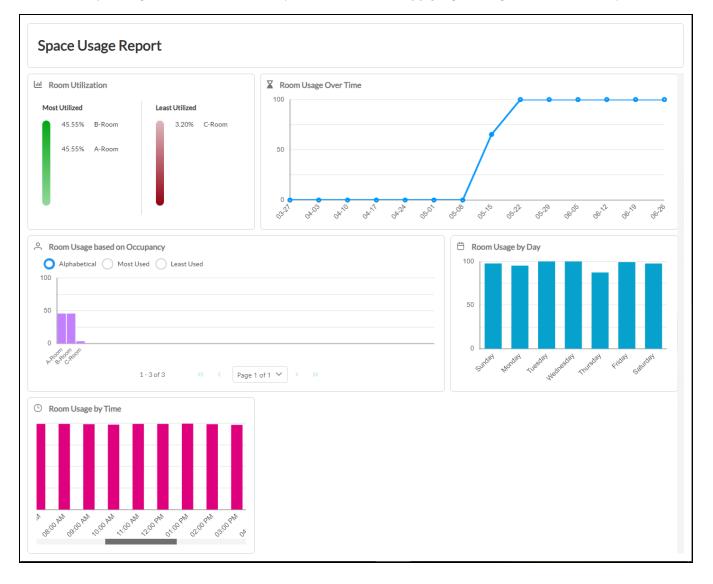

The following additional controls are provided:

- Select **Revert** to revert the report filters to their previous settings.
- Select **Clear** to restore the report filters to their default values.

What's New Message

The XiO Cloud service shows messages occasionally that announce new features or news about the service. Recent What's New messages can be viewed by selecting the alerts button \bigcirc on the top right of the page.

To disable these messages for a user, turn off the **What's New Message** toggle on the user's profile page. For more information on editing user information, refer to Edit User Information on page 102.

User Profile Page

✓ Details		Reset Password	් Revert	Save Changes
Account Name	Account			
User Name	jsmith1@CHeDirectory.mail.onmicrosoft.com			
First Name	John			
Middle Name				
Last Name	Smith			
Email	jsmith1@crestron.com			
Identity Provider	CHeDirectory.mail.onmicrosoft.com			
Role	Standard User	\sim		
What's New Message				
Alert Email				
Alert Mobile Phone 🚯	+1201-555-0123			

Progress Tracker

Certain tasks initiated within the XiO Cloud service that involve large data sets (such as importing desks and devices for the Crestron Desk Scheduling functionality) can take a considerable amount of time to complete. The progress tracker function allows users to check on the status of these tasks running in the background at any time.

Select the progress tracker button 🚍 on the top right of the page to display the **Progress Tracker** dialog box.

Progress Tracker										
Filter Q										
Task Name	¢↓	Started At	î↓	Status	î↓	Description	î↓	Initiated By ↑↓	Actions	
Desk Import		11/09/2023 12:53 PM		 11/09/2023 12:53 PM 		Sample.csv		lan@CCCDirectory.mail.onmicro	× 🛓	

The **Progress Tracker** dialog box lists all in-progress tasks for the account in table form. A **Filter** function is provided to filter the table based on the entered information. Each table column also provides sorting controls to sort the data in that column.

The following information is provided for each task:

- Task Name: The name of the task.
- **Started At**: The date and time when the task was started.
- **Status**: The current task status. Completed tasks show a green check icon ✔ with the date and time that the task was completed.
- Description: Information about the task, such as the name of an imported file.
- Initiated By: The XiO Cloud user who initiated the task.
- Actions: Provides actions for the task, such as clearing the task or downloading an imported file.

Alerts

The XiO Cloud service sends alerts when it detects an issue with a device. Alerts are sent via email or text messages to any user that is configured to receive alerts. Alerts can also be tied to custom programming logic for individual XiO Cloud rooms. For room-based accounts, enabling alerts requires purchase of one SW-XIOC-S license per room.

NOTE: XiO Cloud alerts can be integrated with ServiceNow[®] software instances. For more information, refer to Appendix A: Configure ServiceNow for XiO Cloud Alerts on page 201.

Configure Contact Information

To receive alerts, a user must enable alerts for email and/or text messages in his or her profile page.

To configure alerts for a user:

- 1. Select the user's name in the **USERS** menu. A **Users** page with the **Profile** tab open by default is displayed to the right of the **USERS** menu.
- 2. Choose one or both of the following alert methods:
 - Select the check box next to the **Alert Email** text field to enable email alerts. Enter a valid email address in the **Alert Email** text field to receive messages at that address.
 - Select the check box next to the Alert Mobile Phone text field to enable text message alerts. Enter a valid mobile phone number (including country code and area code) in the Alert Mobile Phone text field to receive text messages at that phone number.

NOTE: SMS services are not supported in all countries. For a list of countries that currently support the service, refer to FAQs on page 169.

User Profile Page

Profile 🌼 Access	Alerts				
✓ Details			Reset Password	5 Revert	Save Changes
	Account Name	Account			
	User Name	jsmith1@CHeDirectory.mail.onmicrosoft.com			
	First Name	John			
	Middle Name				
	Last Name	Smith			
	Email	jsmith1@crestron.com			
	Identity Provider	CHeDirectory.mail.onmicrosoft.com			
	Role	Standard User	\sim		
	What's New Message				
	Alert Email				
	Alert Mobile Phone 🚯	+1201-555-0123			

3. Select **Save Changes** at the top right of the screen to save any changes made. Select **Revert** to clear any information that was entered.

Configure Alert Levels

Alerts may be configured so that they are issued at different severity levels for different groups. This configuration is set at the user level, so each user may customize the alerts that they receive.

To configure access levels for alerts:

NOTE: A user must be configured to receive alerts via email or mobile phone before alert levels can be configured for that user. Refer to Configure Contact Information on page 127 for more information.

1. Select the user's name in the **USERS** menu. A **Users** page with the **Profile** tab open by default is displayed to the right of the **USERS** menu.

2. Select the **Alerts** tab.

Users Page – Alerts Tab

Details			Save Changes
		Q	
Name	î↓ N	Minimum Alert Level	Inherit
Heroes Team		None V	
Hussein Master		None V	
001 Universe Max Length Max Length Max Length Maxi		None 🗸	
001_159_Timeseries_Reports		None 🗸	
001_Leo_UI_Caching		None 🗸	
01Suresh_roomoccupancy		None 🗸	
01_Timeseries_Reports_MVP_1.57_1.58		None 🗸	
1 Corporate Drive		None V	
15 Volvo 222		None 🗸	
321456987		None V	
	~~	< < 1 2 3 > >> 10	~

- 3. Use the **Minimum Alert Level** drop-down menu to select the alert severity level (**None**, **Notice**, **Warning**, **Error**, or **Critical**) for each group and subgroup or room. Only alerts of the chosen severity level or higher will be sent.
- 4. (Subgroups only) Select **Inherit** to have the subgroup or room inherit the alert severity level settings of its parent group. **Inherit** is the default setting for subgroups and rooms.

NOTE: Enter text in to the **Group or Room Search** text box to search for and display groups or rooms that match the search term(s).


5. Select **Save Changes** at the top right of the screen to save any changes made. Select **Revert** to clear any information that was entered.

Manage Alerts

The changes made to a device that trigger an alert may be customized. The XiO Cloud service adds common alerts automatically. However, these alerts may be deleted and new alerts may be added.

The **SETTINGS** menu for alerts is located in the user management panel, which may be accessed by selecting the **Settings** button 🔯 in the navigation menu.

Settings – Alerts Option

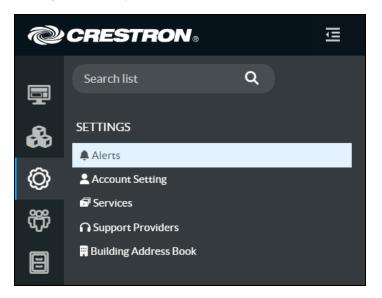

Select **Alerts** in the **SETTINGS** menu. An **Alerts** page with the **Status Fields** tab open by default is displayed to the right of the **SETTINGS** menu.

Alerts									✓ Action ✓
Status Fields Device Model: VC-4		~	Alerts Batching:	D					
Global Filter	L .								
Status Field $\uparrow \downarrow$	Status	¢↓	Delay (in minutes) $\uparrow \downarrow$	Severity	¢↓	Enabled	¢↓	Enable Room Health $\uparrow\downarrow$	Remove
Device Connection Status	Offline		1	Critical					-
Device Connection Status	Online		1	Notice					-
				< 1					

Alerts – Status Fields Tab

Alerts in the **Status Fields** section are organized by device type. To configure alerts for a device type, select the desired device type from the **Device Model** drop-down menu on the top left of the **Status Fields** section.

Alerts may be also be batched by turning on the **Alerts Batching** toggle. When **Alerts Batching** is turned on, all alerts for a device are batched together and may be enabled/disabled or removed at once.

The **Status Fields** table presents all of the alerts configured for the selected device type. The following information is provided:

- Status Field: The device status type (An alert is triggered if changes to this status are detected.)
- **Status**: The state that the device status must reach in order to trigger an alert
- **Delay**: The duration in minutes that the device must remain in the selected status before an alert is triggered
- **Severity**: The severity level of the alert, which determines the users who are notified based on their configured alert levels
- Enabled: Provides controls for enabling or disabling the alert
- Enable Room Health: If this toggle is turned on, the alert will contribute to the room health status based on the chosen severity level. For more information on room health, refer to XiO Cloud Program Connector on page 57.
- **Remove**: Provides controls for removing the alert

Add a New Alert

To add a new alert:

1. Select Add Alert from the Action drop-down menu.

Drop-Down Menu with Add Alert Option

✓ Action	~	
🌲 Add Alert		

An **Add Alert** dialog box is displayed.

Add Alert Dialog Box

Add Alert		×
Device Model	AM-200	~
Status Field		~
Status		\sim
Delay	0-1440 Minute(s)	
Severity	Notice	~
		Cancel Add

- 2. Use the provided text fields and drop-down menus to enter the required information for the alert.
- 3. Once all information has been entered, select **Add** to add the alert or **Cancel** to cancel adding the alert.

The new alert is displayed in the **Status Fields** section of the **Alerts** page for the selected device type.

Delete an Alert

To delete an alert, select the minus button (-) in the **Remove** column for that alert.

View Alerts

In addition to receiving alerts via email or text messages, alerts may also be viewed for individual devices and for groups of devices.

Alerts are accessible from the **Alerts** accordion of the **Status** tab for an individual device or for a group.

Settings Tab – Alerts Accordion

Global Filter Q						Clear A
Date and Time $\uparrow \downarrow$	Severity $\uparrow\downarrow$	Device 1	Alert	¢↓	Status ↑↓	
12/09/2024 6:44 PM	Warning	AM-200-00107F9BB1290	Device Connection Status:Online:1 Min		Active	Clear
12/09/2024 6:44 PM	Error	AM-200-00107F9BB1290	Device Connection Status:Online:1 Min		Active	Clear
12/09/2024 6:44 PM	Notice	AM-200-00107F9BB1290	Device Connection Status:Online:1 Min		Active	Clear
12/09/2024 6:41 PM	Error	AM-200-00107F9BB1290	Device Connection Status:Offline:1 Min		Resolved	Clear
12/09/2024 6:41 PM	Notice	AM-200-00107F9BB1290	Device Connection Status:Offline:1 Min		Resolved	Clear
11/19/2024 4:32 AM	Notice	AM-200-00107F9BB1290	AirBoard Enabled:Disable:1 Min		Active	Clear
11/19/2024 4:19 AM	Error	AM-200-00107F9BB1290	AirBoard Enabled:Enable:1 Min		Resolved	Clear
11/19/2024 4:10 AM	Notice	AM-200-00107F9BB1290	AirBoard Enabled:Disable:1 Min		Resolved	Clear
11/19/2024 3:52 AM	Error	AM-200-00107F9BB1290	AirBoard Enabled:Enable:1 Min		Resolved	Clear
11/18/2024 7:42 AM	Notice	AM-200-00107F9BB1290	AirBoard Enabled:Disable:1 Min		Resolved	Clear

The **Alerts** section provides the following information in table format:


- The date and time the alert was issued
- The severity of the alert
- The device that caused the alert to be issued
- The status field, status, and duration values that triggered the alert
- The status of the alert (An alert changes from **Active** to **Resolved** automatically when the status field value changes to a status other than the one that triggered the alert.)
- A **Clear** button that removes the alert from the log

Select **Clear All** at the top right of the table to clear all listed alerts.

File Library

Various files can be loaded to the XiO Cloud service for use by claimed devices via the File Library selections. Select the **File Upload** button in the navigation menu to display the **FILE LIBRARY** menu.

FILE LIBRARY Menu

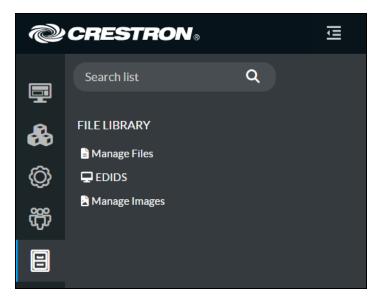

The following selections are provided:

- Manage Files: Contains a library of programs and projects for control systems, touch screens, and other devices
- **EDIDs**: Contains a library of Extended Display Identification (EDID) data files for use with display devices
- Manage Images: Contains a library of image files for use by various devices

Each menu selection is described in the following sections.

Manage Files

Select Manage Files from the FILE LIBRARY menu to display the Manage Files page.

Manage Files Page

nage Files					✓ Action
Manage Files					
Global Filter	۹				
Name 🔺	Version 🖨	File Type 🗢	Notes 🗢	Edit	Delete
253HybridMC3IR_ Pgm1Master	3	Program	253HybridMC3IR_ Pgm1Master	🕼 Edit	Delete
308HTTPS	1	Program	308HTTPS	🕼 Edit	🛍 Delete
4Series_2200JSON _TEST_PROGRAM	1	Program	2200JSON_TEST_P ROGRAM	🕼 Edit	Delete
4Series_with_IP_ID _4_8	1	Program	with_IP_ID_4_8_v4. Ipz	🕼 Edit	Delete
4Series_with_no_ipi d_prog_2	1	Program	with_no_ipid_prog_ 2	🕼 Edit	Delete
570PUserProjectJ asmine	1	User Project	fileuploadtest	🕼 Edit	â Delete
828TcpTraffic	1	Program	828TcpTraffic	🕼 Edit	â Delete
AM200	1	User Project	AM200	🕼 Edit	â Delete
AM2001	1	User Project	AM2001	🕼 Edit	Delete
asd	3	Program	xml	🕼 Edit	Delete

Each loaded program or project file is represented in a table that provides the following information and controls. An **Action** drop-down menu is also provided in the top-right of the page that is used to add program or project files to XiO Cloud.

- Name: The program or project name
- Version: The version of the program or project
- File Type: The program or project file type
- Notes: User-provided notes that describe the program or project
- Edit: Contains an Edit button that is used to edit program or project information (Refer to Edit a Program or Project on page 138 for more information.)
- Delete: Contains a Delete button that is used to delete the program or project file from XiO Cloud

Enter text in to the **Global Filter** text box to search for and display programs or project files that match the search term(s).

If the table spans multiple pages, use the navigation arrows on the bottom of the page to move forward or backward through the pages, or select a page number to navigate to that page.

Add a Program or Project

To add a program or project file to XiO Cloud:

NOTE: Only valid program or project files (.cpz, .lpz, .xml, or .zip) can be uploaded. Other file types will be rejected.

1. Select **Add File** from the **Action** drop-down menu.

Drop-Down Menu with Add File Option



The **Add Files** dialog box is displayed.

Add Files Dialog Box

Add Files			×
File Type Name Notes	Control System Programs	▼	
File Name			
			Cancel

- 2. Enter the following information about the program or project file:
 - **File Type**: Select one of the supported program or project file types from the drop-down menu:
 - Control System Programs
 - User Project
 - Mobility Project
 - Web Browser Project

- **Name**: Enter a program or project name into the text field.
- **Notes**: Enter any notes about the program or project into the text field.

Once the information above is entered, the **+ Add File** button can be selected.

- 3. Select + Add File, and then navigate to the program or project file on the computer.
- 4. Select the program or project file, and then select **Open**. The filename and file size is shown after the program or project file is selected.

NOTE: Select the **x** button to discard the program.

Add Files Dialog Box - File Preview

Add Files		×
File Type Name Notes File Name	Control System Programs My New Program A new program + Add File Lupload × Cancel	
	VoiceReg.lpz 1.009 MB	
		Cancel

NOTE: Only compiled program files may be uploaded. The program code must be compiled with a minimum version of the include4.dat file to ensure full compatibility with XiO Cloud. For more information, refer to the respective programming tool help file.

5. Select **Upload**. Growl notifications are displayed when the upload starts and completes.

Upon successful upload, the program or project file is added to the **Manage Files** table.

Edit a Program or Project

To edit an existing program or project file within XiO Cloud, navigate to the program or project file within the **Manage Files** table. Then, select **Edit** within the table row for the file. A **Manage Programs** dialog box is displayed.

Manage Programs Dialog Box

			3
gram			
File Name 🗢	Upload Status	Download	Delete
VoiceReg.lpz	Completed	4	<u> </u>
on ± Upload	× Cancel		
			Cancel
	File Name 🗢 VoiceReg.lpz	File Name Upload Status VoiceReg.lpz Completed M 1	File Name Upload Status Download VoiceReg.lpz Completed *

The program or project files are represented in a table that provides the following information and controls. Controls are also provided for adding new versions of the program or project file.

• Version: The version of the program or project

NOTE: If there are multiple versions of a program or project file available, each version populates a table row.

- File Name: The program or project file name
- Upload Status: The upload status of the program or project file
- Download: Contains a download button
 that is used to download the program or project file to a computer.
- Delete: Contains a delete button
 that is used to delete the program or project file from XiO Cloud

If the table spans multiple pages, use the navigation arrows on the bottom of the page to move forward or backward through the pages, or select a page number to navigate to that page.

To edit the program or project name, select the program or project name on the top-left of the dialog box. A text field is displayed where the name can be edited. Select the green check button we to save any changes.

To add a new version of the program or project file:

- 1. Select + Add Version, and then navigate to the program or project file on the computer.
- 2. Select the program or project file, and then select **Open**. The file name and file size are shown after the program or project file is selected.


NOTE: Select the **x** button to discard the program.

Manage Programs Dialog Box - File Preview

Mana	ge Programs				*
My	/ New Prog	ram			
Ve	ersion 🗢	File Name 🜲	Upload Status €	Download	Delete
	1	VoiceReg.lpz	Completed	2	۵
			K ∢ <u>1</u> ▶ H		
	+ Add Version	± Upload	× Cancel		
Voic	eReg.lpz 1.00	09 MB 🗙			
					Cancel

NOTE: Only compiled program files may be uploaded. The program code must be compiled with a minimum version of the include4.dat file to ensure full compatibility with XiO Cloud. For more information, refer to the respective programming tool help file.

3. Select **Upload**. A **Download File to Device** dialog box is displayed asking whether the new program or project version should be pushed to devices, rooms, or groups running the older file version.

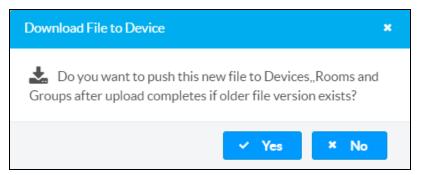

4. Make a selection to start the upload. The new file version is added to the Manage Programs table. The Upload Status changes from "In Progress" to "Completed" once the new file version is uploaded successfully.

EDIDs

Select **EDIDs** from the **FILE LIBRARY** menu to display the EDIDs page.

EDIDs Page

ult EDI		
Defau	It EDIDs 🔐 User EDIDs	
Glob	al Filter Q	
No.	Name	
1	DM default EDID	
2	Consumer 1080P HBR	
3	Consumer 720P HBR	
4	Laptop 16x9 1080P 2CH	
5	Laptop 16x10 1920x1200 2CH	
6	Laptop 16x10 1280x800 2CH	
7	Laptop widescreen 2CH	
8	Consumer 1080P50 HBR	
9	Consumer 720P50 HBR	
10	Laptop 16x9 1080P50 2CH	
	H	

The EDIDs page is divided into two sections that can be accessed by selecting the respective tab at the top of the page:

- **Default EDIDs**: Provides a collection of default EDID data files (in CEDID format) for common display device configurations
- User EDIDs: Provides a collection of custom EDID data files (in CEDID format) and supports uploading new EDID data files

Enter text in to the **Global Filter** text box to search for and display EDID data files that match the search term(s).

If the table spans multiple pages, use the navigation arrows on the bottom of the page to move forward or backward through the pages, or select a page number to navigate to that page.

Add a Custom EDID File

EDIDs Page - User EDIDs

To upload a custom EDID data file (in CEDID format) to XiO Cloud:

NOTE: Only valid CEDID files can be uploaded. Other file types will be rejected.

1. Select the User EDIDs tab to display the User EDIDs page.

		✓ Action –
Default	EDIDs 🛃 User EDIDs	
Global	Filter Q	
No.	Name	Action
1	RK1	🛍 Delete
2	02 EDID Test	â Delete
2 3	02 EDID Test RK2	Delete

Select Add EDID from the Action drop-down menu.
 Drop-Down Menu with Add EDID Option



The **EDID File Upload** dialog box is displayed.

EDID File Upload Dialog Box

EDID File Upload			×
Browse EDID file to	upload		
+ Browse	± Upload	× Cancel	
			Cancel

- 3. Select + **Browse**, and then navigate to the CEDID file on the computer.
- 4. Select the CEDID file, and then select **Open**. The filename and file size are shown after the CEDID file is selected.

NOTE: Select the **x** button to discard the CEDID file.

5. Select **Upload**. Growl notifications are displayed when the upload starts and completes.

Upon successful upload, the EDID data file is added to the User EDIDs table.

Delete a Custom EDID File

To delete a custom EDID file from XiO Cloud:

NOTE: The default EDID files provided by XiO Cloud cannot be deleted.

1. Select the **User EDIDs** tab to display the User EDIDs page.

EDIDs Page - User EDIDs

		✓ Action ▼
🖵 Default I	EDIDs 🛃 User EDIDs	
Global	Filter Q	
No.	Name	Action
1	RK1	Delete
2	02 EDID Test	û Delete
3	RK2	û Delete
	RK3	û Delete
4		🛍 Delete
4	RRR	

- 2. Navigate to the file within the User EDIDs table.
- 3. Select **Delete** from the corresponding table row. A dialog box is displayed confirming the deletion.
- 4. Select **Yes** to delete the file.

Manage Images

Select Manage Images from the FILE LIBRARY menu to display the Images page.

Images Page

Images				
Global Filter Q				
No.	Name	Preview	Action	
1	galleria1.jpg	and the second	Telete	
2	galleria2.jpg		Telete	
3	galleria3.jpg		Toelete	
4	galleria4.jpg	Contraction of the second seco	Tolete	
5	galleria5.jpg		Tolete	
6	galleria6.jpg		Toelete	
7	galleria7.jpg		Tolete	
8	galleria8.jpg		Tolete	
9	galleria10.jpg		Telete	
10	bedroomgreen1.jpg		Telete	

Each loaded image file is represented in a table that provides the following information and controls. An **Action** drop-down menu is also provided in the top-right of the page that is used to add image files to XiO Cloud.

- No.: The image file number within XiO Cloud (determined by the upload order)
- Name: The image filename

- **Preview**: A thumbnail preview of the image file
- Action: Contains a Delete button that is used to delete the image file from XiO Cloud

Enter text in to the **Global Filter** text box to search for and display image files that match the search term(s).

If the table spans multiple pages, use the navigation arrows on the bottom of the page to move forward or backward through the pages, or select a page number to navigate to that page.

Add an Image File

Images can be added into XiO Cloud from a remote web server or from the local computer.


NOTE: Only valid image files can be added. Other file types will be rejected.

Add an Image File from a Web Server

To add a custom image file to XiO Cloud from a remote web server:

1. Select **Add Image** from the **Action** drop-down menu.

Drop-Down Menu with Add Image Option



The Image File Upload dialog box is displayed.

Image File Upload Dialog Box

Add Image	×
Add Image	
Source Type O URL File	
Custom Image Graphic Source	
Name	
No Preview Available	
Cancel	Add Image

- 2. Select URL for Source Type.
- 3. Enter the full URL of the image file on the remote server in the **Custom Image Graphic Source** text field. The filename, file size, and a thumbnail preview of the image are shown after the image file is selected.
- 4. Enter a name for the image file that will be displayed in XiO Cloud in the Name text field.
- 5. Select Add Image. Toast notifications are displayed when the add process starts and completes.

NOTE: Select the **x** button instead to discard the image file.

If the process is successful, the image file is added to the **Images** table.

Add a Local Image File

To add a custom image file to XiO Cloud from a remote web server:

1. Select Add Image from the Action drop-down menu.

Drop-Down Menu with Add Image Option



The Image File Upload dialog box is displayed.

2. Select File for Source Type.

Image File Upload Dialog Box - File Source Type

Add Image		×
Add Image		
Source Type	URL File	
Custom Image Graphic Source	ئ	
No Preview Available		
	Cancel Add Image	

- 3. Select the upload button 👌 next to **Custom Image Graphic Source**, and then navigate to the image file on the computer.
- 4. Select the image file, and then select **Open**. The filename, file size, and a thumbnail preview of the image are shown after the image file is selected.
- 5. Select **Add Image**. Toast notifications are displayed when the add process starts and completes.

NOTE: Select the **x** button instead to discard the image file.

Upon successful upload, the image file is added to the **Images** table.

Delete an Image File

To delete an image file from XiO Cloud:

- 1. Navigate to the file within the Images table.
- 2. Select **Delete** from the corresponding table row. A dialog box is displayed confirming the deletion.
- 3. Select **Yes** to delete the file.


Load a Program to a Control System

The XiO Cloud service provides controls for uploading a program file to a 3-Series[®] or 4-Series[™] control system. Once a program has been uploaded to the XiO Cloud environment, it may be pushed to any number of control systems that have been claimed by the service.

Upload a New Program

To upload a new program to the XiO Cloud environment:

Select the File Upload button in the navigation menu to display the FILE LIBRARY menu.
 FILE LIBRARY Menu

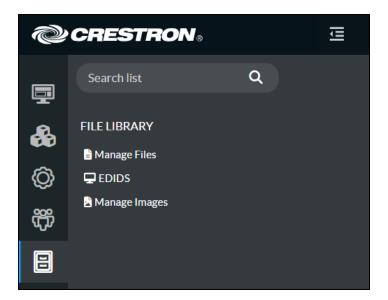

Select Add File from the Action drop-down menu.
 Drop-Down Menu with Add File Option



The **Add Files** dialog box is displayed.

Add Files Dialog Box

Add Files					×
File Type	3-Series Programs	5	•		
Name					
Notes					
File Name	+ Add File				
				Cancel	lh

- 3. Enter the following information about the program:
 - File Type: Select Control System Programs from the drop-down menu
 - **Name**: Enter a name for the program.
 - **Notes**: Enter any notes about the program.

Once the information above is entered, the **+ Add File** button can be selected.

- 4. Select + Add File, and then navigate to the program file on a connected computer.
- 5. Select the program file, and then select **Open**. The filename and file size of the program is shown after the program is selected.

NOTE: Select the **x** button to discard the program.

Add Files Dialog Box - Program Preview

Add Files			×
File Type Name Notes File Name	Control System Programs My New Program A new program + Add File ± Upload × Cancel		
	VoiceReg.lpz 1.009 MB		
		Cancel	

NOTE: Only compiled programs may be uploaded. The program code must be compiled with a minimum version of the include4.dat file to ensure full compatibility with XiO Cloud. For more information, refer to the respective programming tool help file.

6. Select **Upload**. A window showing the status of the upload is displayed.

Upon successful upload, the program file is added to the **Manage Files** table on the right side of the screen.

Manage Files Table

Global Filter Q					
Name 🔷	Version 🖨	Device Type 🗢	Notes 🖨	Edit	Delete
3-Series	1	Program	This is a file	🕼 Edit	â Delete
707Independents oftStructuredStor age	3	Program	707Independents oftStructuredStor age	🕼 Edit	Delete
buzz.cpz	1	Program	Note1	🕼 Edit	â Delete
File upload status	3	Program	2030SecureTcpSe rver_TestClient	🕼 Edit	🛍 Delete
VoiceControl	1	Program	Voice Control for CS	🖉 Edit	🛍 Delete

Manage Programs

Use the **Manage Files** table to manage program files after they have been uploaded to the XiO Cloud environment.

Edit a Program

Select **Edit** next to a program file to edit that program file. A **Manage Programs** dialog box is displayed.

Manage Programs Dialog Box

Manage Programs				×
VoiceControl				
Version 🗢	File Name 🗢	Upload Status 🗢	Download	Delete
1	VoiceReg.lpz	InProgress	±	Ê
		≪ <u>1</u> >> >		
+ Add Version	🛓 Upload	× Cancel		
				Cancel

The **Manage Programs** dialog box provides the following information about the program in table format:

- The program version
- The program file name
- The status of the program upload
- Controls to download or delete the program file

To edit the program name, select the program name in the top left corner of the dialog box. The program name becomes an editable text box. Select the green check icon \checkmark or press **Enter** to save the new program name. Select the red **x** icon **x** to discard the changes.

To add a new version of the program file:

 Select + Add Version, and then select an updated version of the program from the host computer. The file name and file size of the program is shown after the program is selected. Select the x button to discard the program.


/oiceControl		 ✓ X 		
Version 🗘	File Name 🗘	Upload Status 🗢	Download	Delete
1	VoiceReg.lpz	InProgress	*	D
		≪ <u>1</u> >> >		
+ Add Versio	n 🔔 Upload	× Cancel		
biceReg.lpz 1.0	009 MB 🗶			

Manage Programs Dialog Box - Program Preview

2. Select Upload.

A message window is displayed asking whether the updated program file should be pushed to all devices running the older program file.

Download File to Device Window

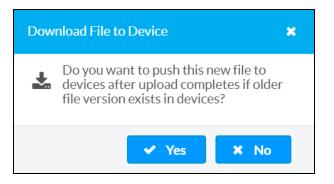

3. Select **Yes** to push the program file to all applicable devices, or select **No** to upload the file without pushing the program to the devices.

Upon successful upload, the new program file is added to the **Manage Programs** table with the latest iteration of the version number. All previous versions of the program file are retained in this table unless they are deleted manually.

Manage Programs	Dialog Box -	New Program	Version Uploaded
5 5			•

oiceControl		✓ ×		
Version 🖨	File Name 🗘	Upload Status 🗘	Download	Delete
1	VoiceReg.lpz	InProgress	*	â
2	VoiceReg.lpz	InProgress	*	Û
		≪ <u>1</u> >> >		
+ Add Version	🕹 Upload	× Cancel		
+ Add Version	🛓 Upload		_	

Select the **x** button or **Cancel** to exit the **Manage Programs** dialog box.

Delete a Program

Select **Delete** next to a program file to delete that program file. A message window is displayed asking whether the program file should be deleted.

Select **Yes** to delete the program file or **No** to cancel the deletion.

NOTE: If multiple versions of a program file have been uploaded, all program file versions will be deleted.

Load a Program to Device

Once a program is uploaded to the XiO Cloud environment, it may be loaded to any number of claimed 3-Series or 4-Series control systems within the environment.

To load a program to a control system:

- 1. Select the **Groups** button 🗞 on the left side of the screen.
- 2. Select the desired control system from the group tree to display its configuration page.

Select the File Management tab. A table showing all of the device's program slots is displayed.
 File Management Tab

Location ⁺	File 🗢	Version 🗢	Status 🗢	Actions
Slot 1	< <no file="">></no>	0		🚣 Load File
Slot 2	< <no file="">></no>	0		🕹 Load File
Slot 3	< <no file="">></no>	0		🕹 Load File
Slot 4	< <no file="">></no>	0		🕹 Load File
Slot 5	< <no file="">></no>	0		🕹 Load File
Slot 6	< <no file="">></no>	0		🕹 Load File
Slot 7	< <no file="">></no>	0		🚣 Load File
Slot 8	< <no file="">></no>	0		🛓 Load File
Slot 9	< <no file="">></no>	0		🕹 Load File
Slot 10	< <no file="">></no>	0		🕹 Load File

Select Load File next to the desired program slot. The Download File dialog box is displayed.
 Download File Dialog Box

Download File				×
File Type File	Program 705CrestronWebScripting.cpz [V1	•		
			Cancel	Update //

- 5. Enter the following information about the program file:
 - File Type: Select Program from the drop-down menu.
 - **File**: Select the uploaded program file from the drop-down menu. The program version is displayed to the left of the program file name.
- 6. Select **Update**. The program file is pushed to the chosen program slot of the control system.

Manage a Loaded Program

Use the **File Management** table to manage program files after they have been loaded to a 3-Series or 4-Series control system.

File Management Tab

🖌 Status 🛛 🛱 Settings	Activity Log O Scheduled Actions	🖹 File Management		
Location [^]	File 🗢	Version 🗢	Status 🗢	Actions
Slot 1	708IndependentsoftMsg.cpz	1	Registered	€ ◄ ๖
Slot 2	2004SecureTcpClient.cpz	1	Registered	
Slot 3	2000SQLiteDBTests.cpz	2	Registered	☑ ► ⊃
Slot 4	707IndependentsoftStructuredSto rage.cpz	1	Registered	C 🚽 💟
Slot 5	706CrestronSNMPTest.cpz	1	Registered	
Slot 6	< <no file="">></no>	0		ᆂ Load File
Slot 7	< <no file="">></no>	0		🕹 Load File
Slot 8	< <no file="">></no>	0		🕹 Load File
Slot 9	< <no file="">></no>	0		🔹 Load File
Slot 10	708IndependentsoftMsg.cpz	1	Registered	
		H 🕂 <u>1</u> 🕨 H		

The File Management table displays the following information for each program slot:

- Location: The program slot of the control system
- File: The name of the program file loaded to the control system
- Version: The program file version

NOTE: The **Version** column for a loaded program will also note if a newer version of the program was loaded to XiO Cloud but has not yet been loaded to the device.

- Status: The registration status of the program file
- Actions: Controls to load a program file to the program slot or to manipulate a loaded program

Edit a Loaded Program

Select the edit button *constant or a loaded program file in the Actions* column to edit the program file.

The **Download File** dialog box is displayed.

Download File Dialog Box

Download File			*
File Ty F	Program Program		
		Cancel	Update

The following program file information may be edited:

- File Type: Use the drop-down menu to select the file type (Program)
- File: Use the drop-down menu to select a program file to load to the program slot.

Once all changes have been made, select **Update**. The updated program file is pushed to the chosen program slot of the control system. Select **Cancel** to cancel any changes.

Start/Stop a Loaded Program

Select the play button > next to a loaded program file in the **Actions** column to start the program file. A growl notification is displayed stating that the program start command has been sent to the control system, and that there may be a small delay before the program starts.

If a program is running, select the stop button in the **Actions** column to stop the program. A growl notification is displayed stating that the program stop command has been sent to the control system, and that there may be a small delay before the program stops.

Unregister a Loaded Program

Select the circular arrow button program from the control system. A growl notification is displayed stating that the program unregister command has been sent to the control system, and that there may be a small delay before the program is unregistered.

Remote Control

Remote control functionality allows the display of a supported user control device (such as TSW-60 series touch screens, TSW-70 series touch screens, Crestron Mercury® video conference systems series, Crestron Mercury X series, and Crestron Mercury Mini series) to be viewed and controlled within XiO Cloud. Users can control the user interface directly by clicking on the virtual display, which mirrors the touch controls on the physical device.

Remote control functionality supports any programs that can run on the user control device, including custom user projects, Crestron scheduling, and partner applications. Users also have full control of the capacitive hard buttons on the user interface (if present).

NOTE: Remote control for room-based accounts requires purchase of one SW-XIOC-S license per room.


Enable Remote Control

A global administrator must enable remote control for the XiO Cloud account before users can access the functionality.

To enable remote control for an account:

- 1. Select the gear icon 0 on the left side of the screen.
- 2. Select Account Setting.

SETTINGS Menu

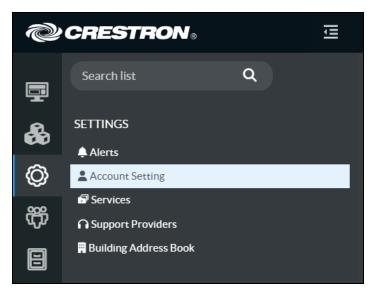

3. Within the **Profile** tab on the right side of the screen, turn on the **Enable Remote Tab** toggle. **Profile Tab**

Profile Details Revert Save Changes Account Name ISE TradeShow Account # 8856885 Enable Remote Tab Enabled

4. Tap **Save Changes** on the top right of the screen.

Request Remote Control Access

Certain device families (such as Crestron Flex phones) require a local user to approve the remote control request before access is granted. The following sections describe the procedures and work flows associated with requesting remote control access.

Initiate a Request

To initiate a remote control request from XiO Cloud:

- 1. Navigate to the user control device that supports remote control functionality.
- 2. Select the **Remote Control** tab on the right side of the screen. A **Remote Control Permission** dialog box is displayed.

Remote Control Permission Dialog Box

✓ Status 🛛	Settings	€ Remote Control	E Dashboard	🔳 Logs	Scheduled Action	ons			
✤ Mode :								4	Request Control
		Remote Con	trol Permissio	n		×			
		Remote control request remote		quires permi	ssion. Do you wish	to			
					✓ Yes	< No			
	06.AM						-		

3. Select **Yes** to initiate the remote control request. Selecting **No** closes the dialog box without sending the request, and the user must navigate back to the **Remote Control** tab to display the dialog box again.

After initiating the request, the **Mode** status changes to **Remote control request has been sent**. The remote user must wait until a local user accepts or denies the request as described in Accept or Decline the Request on page 159.

Remote control request has been sent Mode

✓ Status	🌣 Settings	€ Remote Control	E Dashboard	🔳 Logs	Scheduled Actions	
✔ Mode :	Remote contro	ol request has been	sent			🗲 Request Control

If a local user does not respond to the remote request within 30 seconds, the **Mode** status changes to **The request for control has Timed Out**, and a **Retry** button is displayed next to the **Mode**. Select **Retry** to resend the remote control request. There is no limit to the number of retries that can be sent.

The request for control has Timed Out Mode

✓ Status	🌣 Settings	€ Remote Control	E Dashboard	🔳 Logs	Scheduled Actions
✓ Mode :	The request for	control has Timed Ou	t Retry		

Accept or Decline the Request

After a remote control request is initiated, the user control device prompts a local user to accept or decline the request via a pop-up window.

- If the local user accepts the request, the **Mode** status changes to **View**, and the **Request Control** button can be selected. Refer to View a User Interface on page 160 and Control a User Interface on page 161 for more information.
- If the local user declines the request, the **Mode** status changes to **Remote control request has declined**, and no remote control functionality is provided. The remote user can retry the remote control request as described in Initiate a Request on page 158.

Remote control request has declined Mode

✓ Status	🌣 Settings	€ Remote Control	E Dashboard	🔳 Logs	Scheduled Actions	
4 Mode : *	Remote contro	ol request has declir	ned			

End a Remote Control Session

The local user can end an active remote control session at any time by selecting **End Remote Support Session** on the user control device. The **Mode** status within XiO Cloud changes to **Remote control Session has ended**, and remote control functionality is no longer provided.

A remote control session times out after one hour. At that time, the local user is prompted to continue or end the session via a pop-up window on the user control device.

- If the local user selects **Continue**, the remote session continues without any interruption.
- If the local user selects **End**, the **Mode** status within XiO Cloud changes to **Remote control Session has ended**, and remote control functionality is no longer provided.
- If the local user does not respond to the prompt, the remote session times out and remote control functionality is no longer provided.

View a User Interface


Users can view a connected user interface once remote control is enabled for the XiO Cloud account.

NOTE: To access user control devices within a group, users must have **Tech** access or above.

To view a connected user interface:

- 1. Navigate to the user control device that supports remote control functionality.
- 2. Select the **Remote Control** tab on the right side of the screen.
- 3. If prompted, initiate a remote control request as described in Request Remote Control Access on page 158.


Remote Control Tab



NOTES:

- Remote control is available only on the device level.
- The **Remote Control** tab is shown only if the user control device has been upgraded to a firmware version that supports this functionality. The device firmware can be updated directly through XiO Cloud if necessary.

The content that is currently displayed on the user interface is shown as an image in the **Remote Control** tab.

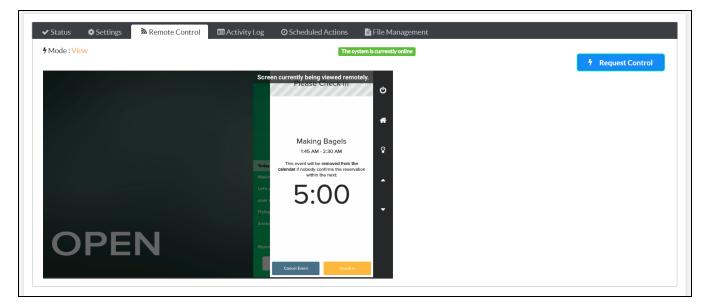

Remote Control Tab - User Interface (View Mode)

By default, the user interface is placed in **View** mode, which is indicated in the top left of the screen.

- The image of the remote user interface is updated approximately every five seconds.
- If the remote user interface is viewed for 15 minutes without any other activity occurring on the page, the image stops updating automatically. Refresh the page in the browser to resume viewing the user interface in real time.

Control a User Interface

To take control of a user interface:

- 1. Navigate to the user control device that supports remote control functionality.
- 2. Select the **Remote Control** tab on the right side of the screen.
- 3. If prompted, initiate a remote control request as described in Request Remote Control Access on page 158.
- 4. Select **Request Control** on the top right of the screen.

NOTE: Only one user can control a remote user interface at any time. If another user requests control, the current user controlling the display is placed back in **View** mode. Users controlling the physical user interface are not affected by remote usage.

Within a few seconds, the mode switches from **View** to **Control**, and the **Request Control** button changes to a **Release Control** button.

While in **Control** mode, select anywhere on the virtual user interface, including capacitive hard buttons (if present), to send a virtual touch command to the device.

NOTE: If the user control device is in standby mode, a black screen is displayed. Click the remote screen once to wake the user control device. Normal control can resume once the image updates to show the remote user interface.

To stop controlling the user control device, select **Release Control**. The user control device, returns to **View** mode.

Privacy Considerations

Remote control functionality was designed with privacy considerations in mind.

- The remote control functionality must be enabled by a Global Administrator before it can be used.
- To access user interfaces within a group, users must have **Tech** access or above.
- Whenever a user is viewing or controlling the user interface remotely, a "Screen currently being viewed remotely" message is displayed on the physical device.
- The activity log is updated to record whenever a user starts and stops viewing or controlling a user interface.
- Remote control access can be disabled entirely on a user interface by issuing the REMOTECONTOL DISABLE console command in Crestron Toolbox[™] software.
- No images from the user interface are stored on Crestron servers longer than is necessary to display them, and no images are accessible by Crestron staff.

Enable API Access


Users with Global Administrator permissions can enable the XiO Cloud REST API functionality directly from the XiO Cloud portal. For room-based accounts, enabling API access requires purchase of a SW-XIOC-API license for the account.

The XiO Cloud REST API binds to the XiO Cloud server as a new transport interface (much like a direct transport interface or a serial join interface). The REST API layer provides a translation from the XiO Cloud server. Web server requests are stateless, and all stateful information is maintained between the XiO Cloud REST API layer and account, group, and device data. For more information, refer to the XiO Cloud Service API microsite at https://developer.crestron.com.

To enable API access from the portal:

- 1. Select the gear icon 0 on the left side of the screen.
- 2. Select Account Setting.

SETTINGS Menu

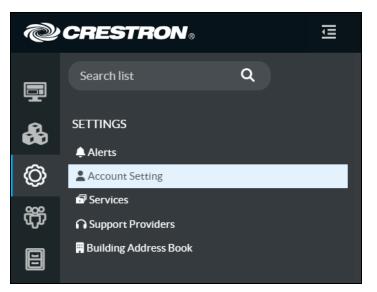

3. Within the **Profile** tab on the right side of the screen, expand the **Details** accordion, then turn on the **Enable API Access** toggle.

Profile Tab - Details Accordion

✓ Details	Save Changes 🖸 Revert
Account Name	Account
Account #	583
Enable Remote Tab	
Enable API Access	
Auto Assign Room Licenses	
First Name *	John
Last Name *	Smith
Email Address *	jsmith1@crestron.com
Api Subscription Key	
Account Id	NUMBER 402 HILL WAR WAR RECEIPTING
Email Address * Api Subscription Key	


- 4. Enter the administrator's name and email address in the appropriate text fields.
- 5. Tap **Save Changes** on the top right of the accordion. An API authentication key is displayed next to **Api Key**.

Manage Support Providers

The **Support Providers** feature allows customers to grant account access to Authorized Resellers and Crestron Service Providers (together, Authorized Support Providers). Once a support provider is granted access, the provider can view and manage the account as specified by the Global Administrator in the customer account. Customers can revoke a support provider's access to their account at any time.

NOTE: Support providers must create an XiO Cloud Management Portal account to access customer accounts as described in the <u>XiO Cloud Management Portal User Guide</u>. Once the customer grants a support provider access to their account, portal account users that have been authorized to access the account will be added automatically as **Standard Users** with **Viewer** permissions. These permissions can be elevated by the customer Global Administrator as described in Manage User Access on page 102.

The **SETTINGS** menu for managing support providers is located in the user management panel, which may be accessed by clicking the **Settings** button 🚳 in the navigation menu.

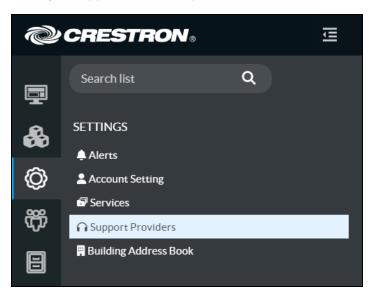

Settings - Support Providers Option

Select **Support Providers** in the **SETTINGS** menu. A **Support Providers** page is displayed to the right of the **SETTINGS** menu.

Support Providers Page

pport Providers						
Providers						
Providers					_	
Providers						+ Add Support Provider
Providers Support Provider \$	Status 🗢	Granted Access 🗢	User Granted	Revoked Access	User Revoked	+ Add Support Provider Action
	Status 🗢	Granted Access 🗢	User Granted	Revoked Access	_	

Support providers are organized by name and displayed within a table. Support provider access can be granted or revoked using the functions in this page.

Add a Support Provider

To add a new support provider to the customer account:

1. Select + Add Support Provider at the top right of the page. The Add Support Provider dialog box is displayed.

Add Support Provider Dialog Box

+ Add Support Provider	×
Support Provider#	
	✓Add X Cancel

2. Enter a valid seven-digit support provider ID into the **Support Provider#** text field. This number will be provided by your Authorized Support Provider.

3. Select **Add**. A **Support Provider Confirmation** dialog box is displayed to confirm whether the support provider should be added.

Support Provider Confirmation Dialog Box

+ Support Provider Confirmation	×
Are you sure you want to add the following support Provider to your account? Support Provider : DealerAccount_SSO Support Provider# 1336133	
✓Add X Cancel	

4. Select **Add**. The support provider is added to the table within the **Support Providers** page.

Manage Support Providers

Once support providers have been added as described in Add a Support Provider on page 166, they can be managed using the provided table.

Support Providers Table

					+	Add Support Provider
Support Provider 🗢	Status 🖨	Granted Access 🖨	User Granted	Revoked Access	User Revoked	Action
DealerAccount_SSO	Active	6/16/21	RoomGroup14 Premiu m14	-	-	Revoke
DealerAccount_SSO2	Revoked	6/16/21	Dearler User1	6/16/21	RoomGroup14 Premiu m14	Reactivate
ALVA SOFTWARE	Revoked	6/16/21	Dearler User1	6/16/21	RoomGroup14 Premiu m14	Reactivate
CREATIVE TECHNOL OGY-CHICAGO	Revoked	6/16/21	RoomGroup14 Premiu m14	6/16/21	RoomGroup14 Premiu m14	Reactivate

If the support provider table spans multiple pages, use the navigation arrows on the bottom of the page to move forward or backward through the pages, or select a page number to navigate to that page. Certain columns also provide arrow controls in the heading row that sorts the table by the data in those columns.

The following information and controls are provided for each listed room:

- Support Provider: The name of the Authorized Support Provider account.
- Status: The status of the Authorized Support Provider account within the customer account.
 - **Active**: Indicates that the Authorized Support Provider is currently authorized to access the customer account.
 - **Revoked**: Indicates that access to the customer account for the Authorized Support Provider has been revoked.

- **Granted Access**: The date when the Authorized Support Provider was granted access to the customer account.
- **User Granted**: The customer account user that granted account access to the Authorized Support Provider.
- **Revoked Access**: The date when the Authorized Support Provider's access to the customer account was revoked (if applicable).
- **User Revoked**: The customer account user that revoked account access from the Authorized Support Provider.
- Action: Provides an action button based on the Authorized Support Provider account status:
- **Revoke**: If the Authorized Support Provider has been granted access to the customer account, select **Revoke** to revoke their access to the customer account.
- **Reactivate**: If the Authorized Support Provider's customer account access has been revoked, select **Reactivate** to reactive their access to the customer account.



This topic provides answers to frequently asked questions regarding the XiO Cloud service.

What is the XiO Cloud service?

The XiO Cloud service is a device management software as a service (SaaS). The XiO Cloud service allows all supported Crestron devices and certain supported third-party devices across an enterprise to be managed and configured from one central, secure location in the cloud. The XiO Cloud service may be used to view the status of a device, to configure various device and network settings, to manage licenses, and to update device firmware. After enrolling in the service, the XiO Cloud portal can be accessed at portal.crestron.io.

For more details and additional resources, refer to <u>https://www.crestron.com/xiocloud</u>.

What devices are supported by the XiO Cloud service?

For a list of supported Crestron devices, refer to the **Specifications** tab on any of the <u>XiO Cloud product</u> <u>pages</u> at <u>www.crestron.com</u>.

What minimum device firmware versions are required to connect to the XiO Cloud service?

The following table provides minimum firmware versions that must be running on a supported device in order for the device to connect to the XiO Cloud service.

NOTE: If a supported device is not listed in the table below, then it does not have a minimum firmware version that is required to connect to the XiO Cloud service.

Model(s)	Firmware Versions
AV3, CP3, CP3N, DIN-AP3, DIN-AP3MEX, FT-TS600, FT-TSC600, MC3, MPC3-101, MPC3-102, MPC3-201, MPC3-302, PRO3, RMC3, TSCW-730	1.8001.0176
DM-MD8X8-CPU3, DM-MD8X8-CPU3-RPS, DM-MD16X16-CPU3, DM-MD16X16-CPU3-RPS, DM-MD32X32-CPU3, DM-MD32X32-CPU3-RPS, DMPS3-200-C, DMPS3-300-C, DMPS3-300-C-AEC, DMPS3-4K-50, DMPS3-4K-100-C, DMPS3-4K-150-C, DMPS3-4K-200-C, DMPS3-4K-250-C, DMPS3-4K-300-C, DMPS3-4K-350-C	1.603.0112
TSS-7, TSS-10, TSW-560, TSW-560P, TSW-760, TSW-1060	2.009.0121
DGE-100, DM-DGE-200-C, TS-1542, TS-1542-C	1.4662.00000.000
CCS-UC-1 W/PS, CCS-UC-1-AV W/PS, CCS-UC-1-X, UC-M50-U, UC-M50-UA, UC-M70-U, UC-M70-UA, UC-MX50-U, UC-MX70-U	1.4395.00025.001

Model(s)	Firmware Versions
AM-200, AM-300	1.4493.00039.003
DM-NVX-350, DM-NVX-350C, DM-NVX-351, DM-NVX-351C, DM-NVX-352, DM-NVX-352C, DM-NVX-D30, DM-NVX-D30C, DM-NVX-E30, DM-NVX-E30C	5.1.4651.00031
AMP-2000, AMP-4000, AMP-4600, AMP-8000, AMP-8075, AMPI-8075, AMP-8150, AMPI-8150, DSP-860, DSP-1280, DSP-1281, DSP-1282, DSP-1283	1.00.380.002
CEN-ODT-C-POE	1.001.0063
AV4, CP4, CP4N, DIN-AP4, MC4, MC4-I, PRO4, RMC4	2.7000.00083
UC-ENGINE, UC-ENGINE-SD, UC-ENGINE-SD-Z	1.00.16.885 or 1.00.17.185
	The minimum firmware version is dependent on the UC-ENGINE hardware. XiO Cloud and the device will select the correct version automatically.
HD-RX-4K-410-C-E, HD-RX-4K-410-C-E-SW4, HD-RX-4K-510-C-E, HD-RX-4K-510-C-E-SW4	1.0.4365.16200

What XiO Cloud features are supported by Crestron devices?

All Crestron devices that can be claimed into the XiO Cloud service support the following features at minimum:

- Online status
- Network settings
- Firmware updates
- Remote restart
- Crestron Fusion® service provisioning (enable/disable and cloudurl)
- Log file retrieval

Certain Crestron devices support additional XiO Cloud features. These additional features are implemented either when the device support is initially released or during a future update to the XiO Cloud service.

Which takes precedence: local settings made on the device, or settings made within the XiO Cloud service?

Settings enforced in the XiO Cloud service always take precedence to local settings. If a local setting is changed, it will report its new value to the XiO Cloud service, and the device will indicate that changes to its settings are pending. Refresh the device within XiO Cloud to see its updated settings.

How do I determine if the XiO Cloud service is down?

Refer to <u>Crestron Online Help article 5894</u> for the current status of the XiO Cloud service. Subscribe to this article to get updates on any status changes.

Does the XiO Cloud service support single sign-on (SSO) solutions?

The XiO Cloud service supports both SAML and OpenID Connect for SSO, which are supported by all major identity providers including the Azure® Active Directory® service.

For more information on integrating SSO with XiO Cloud via Azure Active Directory, refer to www.crestron.com/News/Blog/April-2020/SSO-for-XiO-Cloud-using-Azure-AD.

What device ports are required to connect to the XiO Cloud service?

Devices communicate to the XiO Cloud service over TCP using port 443 (AMQP over WebSockets).

What IP addresses are used for the XiO Cloud service?

The XiO Cloud service is located within Azure's US East and West datacenters. The current list of datacenter IP addresses is available at www.microsoft.com/en-us/download/confirmation.aspx?id=56519.

For more information on the URLs and IP addresses used by the XiO Cloud service, refer to the XiO Cloud Service Security Reference Guide.

How do I check that a device is registered with the XiO Cloud service?

To check that a device is registered with the XiO Cloud service, issue the hydrogenstatus command to the device using the **Text Console** tool in Crestron Toolbox[™] software.

A sample response is shown below indicating that the device is registered to the XiO Cloud service but not claimed.

```
MERCURY>HYDROGENSTATUS
HydrogenUrl: https://fc.crestron.io/api/device/create
This unit is online with Hydrogen
IoT Hub Url: prd-use-iothub.azure-devices.net
Last IOT connect Time: 02/08/2018 15:43:02
Hydrogen device state: REGISTRATION_SUCCESSFUL
HttpsRegistrationRetryInterval (sec): 300
IoTHeartbeatInterval (sec): 300
Empty Callback from CPH count: 0
CresNextReceiveThread: waiting on queue...
```

How to I disable a Crestron Fusion in the Cloud (FITC) connection?

The Crestron Fusion Cloud URL must be changed to the myCrestron URL (<u>https://api.my.crestron.com/api/Registration</u>) prior to disabling the FITC connection. This is required when moving a device from a Crestron Fusion Cloud server to an on-premesis Crestron Fusion server.

What countries currently support SMS alerts for the XiO Cloud service?

SMS (short message service) for XiO Cloud alerts is not currently supported in all countries. The following countries are supported at this time:

- American Samoa
- Anguilla
- Antigua
- Australia
- Barbuda
- Bahamas
- Barbados
- Belgium
- Bermuda
- Canada
- Cayman Islands
- Dominica
- Dominican Republic
- Ireland
- Grenada
- Grenadines
- Guam
- India
- Israel
- Jamaica
- Montserrat
- Myanmar
- North Mariana Islands
- Puerto Rico
- Sweden
- Trinadad
- Turks
- United Kingdom
- United States of America
- Virgin Islands

To inquire about SMS support for a country that is not currently listed, contact Crestron.

Can I turn off automatic firmware updates in XiO Cloud?

The automatic update feature cannot be turned off by the XiO Cloud service. Unlike the auto update mechanism that is configured out of the box for individual devices, XiO Cloud firmware updates use a different manifest location that includes only the firmware version that has been applied to a device. A device managed through XiO Cloud uses the auto update feature to ensure it is running the firmware applied from XiO Cloud.

How does XiO Cloud determine whether a device is offline?

Prior to XiO Cloud version 1.59:

- Devices send a heartbeat to XiO Cloud every 8 minutes (480 seconds).
- XiO Cloud sends a response back to the device for every third heartbeat. If the device does not receive this response after the third heartbeat, it is marked offline in XiO Cloud.

As of XiO Cloud version 1.59:

- If a device is disconnected from IoT Hub, XiO Cloud waits five minutes before attempting to ping the device three times. If the device does not respond to any of these pings, XiO Cloud marks the device as offline. If the device responds to any of these pings, it maintains its online status.
- Devices send a heartbeat to XiO Cloud every 60 minutes (3600 seconds).

Devices will not automatically switch over to the new offline detection method after XiO Cloud version 1.59 is released. The device must be disconnected from XiO Cloud and then reconnected (or restarted) for the change to take affect.

Troubleshooting

This topic provides troubleshooting procedures for various issues that may occur when using the XiO Cloud® service.

Issue	Solution(s)
A device reports that it is registered with the XiO Cloud service but is reporting as offline within the service.	Ensure that the date and time settings on the device are correct. Incorrect date and time settings can cause the device to report as offline.
The device goes offline after roughly 12 hours.	Ensure that the date and time settings on the device are correct. Incorrect date and time settings can cause the device to report as offline.
	Additionally, if the device is connected to a control system, check that the time and time zone settings on the control system are correct.
Conflicts occur when attempting to schedule actions for a device.	Stagger the times for scheduled actions to ensure there are no conflicts with delivery.
A change to device settings from XiO Cloud is rejected by the device.	Ensure there are no IP ID conflicts within your system. IP IDs must be unique across systems.
	For example, if you are adding a Crestron Connected® Display at IP ID 03 to a system that is configured to use Crestron Fusion® software at IP ID 03, the settings will be rejected by the device due to the IP ID conflict.
Errors are received when attempting to claim a device to the XiO Cloud service.	Ensure that the device is connected to the network and has internet access. After connecting the device, wait a few minutes until the device has been registered.
	Issue the hydrogenstatus command to the device using the Text Console tool in Crestron Toolbox™ software to ensure the device is able to connect to the XiO Cloud service.
The device reports as connected but the settings in XiO Cloud are different than the local settings on the device.	Select Refresh Device from the Action drop-down menu to refresh the device connection.
The device is showing pending settings even though it is reporting as connected.	Select Refresh Device from the Action drop-down menu to refresh the device connection.

Issue	Solution(s)
Settings changed from XiO Cloud are not applied on the device.	Pushing settings while a firmware update is in progress on a device (not scheduled, but actively in progress on a device) may result in the settings not being applied to the device.
	To resolve, select Refresh Device from the Action drop-down menu to refresh the device connection.
A firmware upgrade fails to start.	Applying settings may cause a firmware upgrade to not start if the settings are saved around the same time that the upgrade begins.
	To resolve, restart the firmware upgrade.

Works with XiO Cloud

The XiO Cloud[®] service is designed to work with many Crestron[®] and third-party products.

The following device types work with XiO Cloud:

- Audio on page 177
- Conferencing on page 178
- Connectivity on page 187
- Control on page 188
- Lighting and Environmental on page 190
- Power on page 191
- Scheduling on page 192
- Sensors on page 193
- Third-Party Devices on page 194
- Touch Screens on page 196
- Video on page 198

Audio

The following audio solutions are supported by the XiO Cloud® service.

Amplifiers

- AMP-2800: 2-Channel Power Amplifier, 800 W/Ch, Discontinued
- AMP-4600: 4-Channel Power Amplifier, 600 W/Ch
- <u>AMP-8075</u>: 8-Channel Power Amplifier, 75 W/Ch, 4/8 Ω or 70V, North America and Japan, 100– 120V, Discontinued
- AMPI-8075: 8-Channel Power Amplifier, 75 W/Ch, 4/8 Ω or 70V, International, 220–240V, Discontinued
- <u>AMP-8150</u>: 8-Channel Power Amplifier, 150 W/Ch, 4/8 Ω or 70V, North America and Japan, 100– 120V
- <u>AMPI-8150</u>: 8-Channel Power Amplifier, 150 W/Ch, 4/8 Ω or 70V, International, 220–240V

Digital Signal Processors

- DSP-860: Crestron Avia® 8x6 Digital Signal Processor
- DSP-1280: Crestron Avia® 12x8 Digital Signal Processor
- DSP-1281: Crestron Avia® 12x8 Digital Signal Processor with Dante® Audio Networking
- <u>DSP-1282</u>: Crestron Avia[®] 12x8 Digital Signal Processor with USB Audio, AEC, and Audio Conferencing Interface, Discontinued
- <u>DSP-1283</u>: Crestron Avia® 12x8 Digital Signal Processor with Dante® Audio Networking, USB Audio, AEC, and Audio Conferencing Interface, Discontinued

Multiroom Audio Accessories

- DM-NAX-2XLRI-1G: DM NAX[®] Audio-over-IP Wall Plate with XLR, Black, 1-Gang
- <u>DM-NAX-AUD-IO</u>: DM NAX[®] Audio-over-IP Converter with Balanced/Unbalanced Line-Level Audio Input and Output
- DM-NAX-AUD-USB: DM NAX® Audio-over-IP Converter with USB-C® Audio Input and Output
- <u>DM-NAX-BTIO-1G</u>: DM NAX[®] Audio-over-IP Wall Plate with Bluetooth[®] Audio Support, Analog Audio Input and Output, 1-Gang
- <u>DM-NAX-XSP</u>: DM NAX[®] 8K Smart Display Controller and Network Audio Encoder/Decoder with eARC Support

Conferencing

The following conferencing solutions are supported by the XiO Cloud® service.

AirMedia Wireless Presentation and Conferencing

- AM-200: AirMedia® Presentation System 200, Discontinued
- AM-300: AirMedia® Presentation System 300, Discontinued
- AM-3000-WE: AirMedia® Receiver 3000 with Wi-Fi® Network Connectivity
- AM-3000-WF-I: AirMedia® Receiver 3100 with Wi-Fi® Network Connectivity, International
- AM-3100-WF: AirMedia® Series 3 Receiver 100 with Wi-Fi® Connectivity
- AM-3100-WF-I: AirMedia® Series 3 Receiver 100 with Wi-Fi® Connectivity, International
- AM-3200: AirMedia® Series 3 Receiver 200
- <u>AM-3200-GV</u>: AirMedia[®] Series 3 Receiver 200, Government Version
- AM-3200-WF: AirMedia® Series 3 Receiver 200 with Wi-Fi® Connectivity
- <u>AM-3200-WF-I</u>: AirMedia[®] Series 3 Receiver 200 with Wi-Fi[®] Connectivity, International
- AM-TX3-100: AirMedia® Series 3 Connect Adapter
- AM-TX3-100-I: AirMedia® Series 3 Connect Adapter, International

Crestron Flex Solutions

The following Crestron Flex solutions are supported by the XiO Cloud® service.

All-In-One Bars

- <u>UC-B70-A-T</u>: Crestron Flex Large Room Conference Solution with All-In-One Videobar 70 for Microsoft Teams[®] Software
- <u>UC-B70-A-T-I</u>: Crestron Flex Large Room Conference Solution with All-In-One Videobar 70 for Microsoft Teams[®] Software, International
- <u>UC-B70-A-Z</u>: Crestron Flex Large Room Conference Solution with All-In-One Videobar 70 for Zoom Rooms[®] Software
- <u>UC-B70-A-Z-I</u>: Crestron Flex Large Room Conference Solution with All-In-One Videobar 70 for Zoom Rooms[®] Software, International

Crestron Flex Kits

NOTE: The individual devices that can be connected to the XiO Cloud service vary by Crestron Flex kit. Refer to the documentation for your Crestron Flex kit for more information about which devices can be connected to the XiO Cloud service.

 <u>UC-B30-T</u>: Crestron Flex Small Room Conference System with Video Soundbar for Microsoft Teams[®] Rooms

- <u>UC-B30-T-GV</u>: Crestron Flex Small Room Conference System with Video Soundbar for Microsoft Teams[®] Rooms, Government Version
- <u>UC-B30-T-L</u>: Crestron Flex Small Room Conference System with Video Soundbar and Lenovo[®] M920Q ThinkSmart[™] Edition Tiny for Microsoft Teams[®] Rooms, Discontinued
- <u>UC-B30-T-L-WM</u>: Crestron Flex Small Room Conference System with Video Soundbar, Wall Mounted Control Interface, and Lenovo[®] M920Q ThinkSmart[™] Edition Tiny for Microsoft Teams[®] Rooms, Discontinued
- <u>UC-B30-T-WM</u>: Crestron Flex Small Room Conference System with Video Soundbar and Wall Mounted Control Interface for Microsoft Teams[®] Rooms
- <u>UC-B30-Z</u>: Crestron Flex Small Room Conference System with Video Soundbar for Zoom Rooms[®] Software
- <u>UC-B30-Z-L</u>: Crestron Flex Small Room Conference System with Video Soundbar and Lenovo® M920Q ThinkSmart™ Edition Tiny for Zoom Rooms® Software, Discontinued
- <u>UC-B30-Z-L-WM</u>: Crestron Flex Small Room Conference System with Video Soundbar, Wall Mounted Control Interface, and Lenovo® M920Q ThinkSmart™ Edition Tiny for Zoom Rooms® Software, Discontinued
- <u>UC-B30-Z-WM</u>: Crestron Flex Small Room Conference System with Video Soundbar and Wall Mounted Control Interface for Zoom Rooms[®] Software
- <u>UC-B31-T</u>: Crestron Flex Small Room Conference System with Jabra® PanaCast® 50 Video Bar for Microsoft Teams® Rooms
- <u>UC-B31-T-INDIA</u>: Crestron Flex Small Room Conference System with Jabra[®] PanaCast[®] 50 Video Bar for Microsoft Teams[®] Rooms, India
- <u>UC-B31-T-WM</u>: Crestron Flex Small Room Conference System with Jabra® PanaCast® 50 Video Bar and Wall Mounted Control Interface for Microsoft Teams® Rooms
- <u>UC-B31-T-WM-INDIA</u>: Crestron Flex Small Room Conference System with Jabra® PanaCast® 50 Video Bar and Wall Mounted Control Interface for Microsoft Teams® Rooms, India
- <u>UC-B31-Z</u>: Crestron Flex Small Room Conference System with Jabra® PanaCast® 50 Video Bar for Zoom Rooms® Software
- <u>UC-B31-Z-INDIA</u>: Crestron Flex Small Room Conference System with Jabra® PanaCast® 50 Video Bar for Zoom Rooms® Software, India
- <u>UC-B31-Z-WM</u>: Crestron Flex Small Room Conference System with Jabra® PanaCast® 50 Video Bar and Wall Mounted Control Interface for Zoom Rooms® Software
- <u>UC-B31-Z-WM-INDIA</u>: Crestron Flex Small Room Conference System with Jabra® PanaCast® 50
 Video Bar and Wall Mounted Control Interface for Zoom Rooms® Software, India
- <u>UC-BX30-T</u>: Crestron Flex Advanced Small Room Conference System with Video Soundbar for Microsoft Teams[®] Rooms
- <u>UC-BX30-T-GV</u>: Crestron Flex Advanced Small Room Conference System with Video Soundbar for Microsoft Teams® Rooms, Government Version
- <u>UC-BX30-T-WM</u>: Crestron Flex Advanced Small Room Conference System with Video Soundbar and Wall Mounted Control Interface for Microsoft Teams[®] Rooms
- <u>UC-BX30-Z</u>: Crestron Flex Advanced Small Room Conference System with Video Soundbar for Zoom Rooms[®] Software

- <u>UC-BX30-Z-WM</u>: Crestron Flex Advanced Small Room Conference System with Video Soundbar and Wall Mounted Control Interface for Zoom Rooms® Software
- <u>UC-BX31-T</u>: Crestron Flex Advanced Small Room Conference System with Jabra® PanaCast® 50 Video Bar for Microsoft Teams® Rooms
- <u>UC-BX31-T-INDIA</u>: Crestron Flex Advanced Small Room Conference System with Jabra[®] PanaCast[®] 50 Video Bar for Microsoft Teams[®] Rooms, India
- <u>UC-BX31-T-WM</u>: Crestron Flex Advanced Small Room Conference System with Jabra® PanaCast® 50 Video Bar and Wall Mounted Control Interface for Microsoft Teams® Rooms
- <u>UC-BX31-T-WM-INDIA</u>: Crestron Flex Advanced Small Room Conference System with Jabra[®] PanaCast[®] 50 Video Bar and Wall Mounted Control Interface for Microsoft Teams[®] Rooms, India
- <u>UC-BX31-Z</u>: Crestron Flex Advanced Small Room Conference System with Jabra® PanaCast® 50 Video Bar for Zoom Rooms® Software
- <u>UC-BX31-Z-INDIA</u>: Crestron Flex Advanced Small Room Conference System with Jabra[®] PanaCast[®] 50 Video Bar for Zoom Rooms[®] Software, India
- <u>UC-BX31-Z-WM</u>: Crestron Flex Advanced Small Room Conference System with Jabra® PanaCast® 50 Video Bar and Wall Mounted Control Interface for Zoom Rooms® Software
- <u>UC-BX31-Z-WM-INDIA</u>: Crestron Flex Advanced Small Room Conference System with Jabra® PanaCast® 50 Video Bar and Wall Mounted Control Interface for Zoom Rooms® Software, India
- <u>UC-C100-PRO-Z</u>: Crestron Flex Video Conference System Integrator Pro Kit for Zoom Rooms[®] Software
- UC-C100-PRO-Z-WM: Crestron Flex Video Conference System Integrator Pro Kit with a Wall-Mounted Control Interface for Zoom Rooms® Software
- <u>UC-C100-T</u>: Crestron Flex Video Conference System Integrator Kit for Microsoft Teams® Rooms
- <u>UC-C100-T-GV</u>: Crestron Flex Video Conference System Integrator Kit for Microsoft Teams[®] Rooms, Government Version
- <u>UC-C100-T-L</u>: Crestron Flex Video Conference System Integrator Kit with Lenovo® M920Q ThinkSmart™ Edition Tiny for Microsoft Teams® Rooms, Discontinued
- <u>UC-C100-T-L-WM</u>: Crestron Flex Video Conference System Integrator Kit with a Wall Mounted Control Interface and Lenovo® M920Q ThinkSmart[™] Edition Tiny for Microsoft Teams[®] Rooms, Discontinued
- <u>UC-C100-T-WM</u>: Crestron Flex Video Conference System Integrator Kit with a Wall Mounted Control Interface for Microsoft Teams® Rooms
- UC-C100-Z: Crestron Flex Video Conference System Integrator Kit for Zoom Rooms® Software
- <u>UC-C100-Z-L</u>: Crestron Flex Video Conference System Integrator Kit with Lenovo® M920Q ThinkSmart™ Edition Tiny for Zoom Rooms® Software, Discontinued
- <u>UC-C100-Z-L-WM</u>: Crestron Flex Video Conference System Integrator Kit with a Wall Mounted Control Interface and Lenovo® M920Q ThinkSmart[™] Edition Tiny for Zoom Rooms[®] Software, Discontinued
- <u>UC-C100-Z-WM</u>: Crestron Flex Video Conference System Integrator Kit with a Wall Mounted Control Interface for Zoom Rooms[®] Software

- <u>UC-CX100-PRO-Z</u>: Crestron Flex Advanced Video Conference System Integrator Pro Kit for Zoom Rooms[®] Software
- <u>UC-CX100-PRO-Z-WM</u>: Crestron Flex Advanced Video Conference System Integrator Pro Kit with a Wall-Mounted Control Interface for Zoom Rooms® Software
- <u>UC-CX100-T</u>: Crestron Flex Advanced Video Conference System Integrator Kit for Microsoft Teams[®] Rooms
- <u>UC-CX100-T-GV</u>: Crestron Flex Advanced Video Conference System Integrator Kit for Microsoft Teams[®] Rooms, Government Version
- <u>UC-CX100-T-L</u>: Crestron Flex Advanced Video Conference System Integrator Kit with Lenovo[®] M920Q ThinkSmart[™] Edition Tiny for Microsoft Teams[®] Rooms, Discontinued
- <u>UC-CX100-T-L-WM</u>: Crestron Flex Advanced Video Conference System Integrator Kit with a Wall Mounted Control Interface and Lenovo[®] M920Q ThinkSmart[™] Edition Tiny for Microsoft Teams[®] Rooms, Discontinued
- <u>UC-CX100-T-WM</u>: Crestron Flex Advanced Video Conference System Integrator Kit with a Wall Mounted Control Interface for Microsoft Teams[®] Rooms
- <u>UC-CX100-Z</u>: Crestron Flex Advanced Video Conference System Integrator Kit for Zoom Rooms[®] Software
- <u>UC-CX100-Z-L</u>: Crestron Flex Advanced Video Conference System Integrator Kit with Lenovo[®] M920Q ThinkSmart[™] Edition Tiny for Zoom Rooms[®] Software, Discontinued
- <u>UC-CX100-Z-L-WM</u>: Crestron Flex Advanced Video Conference System Integrator Kit with a Wall Mounted Control Interface and Lenovo® M920Q ThinkSmart[™] Edition Tiny for Zoom Rooms[®] Software, Discontinued
- <u>UC-CX100-Z-WM</u>: Crestron Flex Advanced Video Conference System Integrator Kit with a Wall Mounted Control Interface for Zoom Rooms[®] Software
- <u>UC-ENGINE-BRKT-T-UPGRD</u>: Crestron Flex Room Upgrade Solution with Microsoft Teams[®] Rooms
- <u>UC-ENGINE-BRKT-T-UPGRD-BRKTX</u>: Crestron Flex Standard to Advanced Room Upgrade Solution with Microsoft Teams® Rooms Software
- <u>UC-ENGINE-BRKT-Z-UPGRD</u>: Crestron Flex Room Upgrade Solution with Zoom Rooms[®] Software
- <u>UC-ENGINE-BRKT-Z-UPGRD-BRKTX</u>: Crestron Flex Standard to Advanced Room Upgrade Solution with Zoom Rooms® Software
- <u>UC-ENGINE-BRKTX-T-UPGRD</u>: Crestron Flex Advanced Room Upgrade Solution with Microsoft Teams[®] Rooms
- <u>UC-ENGINE-BRKTX-Z-UPGRD</u>: Crestron Flex Advanced Room Upgrade Solution with Zoom Rooms[®] Software
- <u>UC-M50-NC-T</u>: Crestron Flex Tabletop Medium Room Conference System for Microsoft Teams[®] Rooms
- <u>UC-M50-NC-Z</u>: Crestron Flex Tabletop Medium Room Conference System for Zoom Rooms[®] Software
- <u>UC-M50-T</u>: Crestron Flex Tabletop Medium Room Video Conference System for Microsoft Teams[®] Rooms

- <u>UC-M50-T-L</u>: Crestron Flex Tabletop Medium Room Video Conference System with Lenovo[®] M920Q ThinkSmart[™] Edition Tiny for Microsoft Teams[®] Rooms, Discontinued
- <u>UC-M50-T-UPGRD</u>: Crestron Flex Medium Room Upgrade Solution with Microsoft Teams[®] Rooms, Discontinued
- UC-M50-U: Crestron Flex Tabletop Medium Room Video Conference System
- UC-M50-UA: Crestron Flex Tabletop Medium Room Audio Conference System
- <u>UC-M50-Z</u>: Crestron Flex Tabletop Medium Room Video Conference System for Zoom Rooms[®] Software
- <u>UC-M50-Z-L</u>: Crestron Flex Tabletop Medium Room Video Conference System with Lenovo[®] M920Q ThinkSmart[™] Edition Tiny for Zoom Rooms[®] Software, Discontinued
- <u>UC-M50-Z-UPGRD</u>: Crestron Flex Medium Room Upgrade Solution with Zoom Rooms[®] Software, Discontinued
- <u>UC-M70-NC-T</u>: Crestron Flex Tabletop Large Room Conference System for Microsoft Teams[®] Rooms
- <u>UC-M70-NC-Z</u>: Crestron Flex Tabletop Large Room Conference System for Zoom Rooms[®] Software
- <u>UC-M70-T</u>: Crestron Flex Tabletop Large Room Video Conference System for Microsoft Teams[®] Rooms
- <u>UC-M70-T-L</u>: Crestron Flex Tabletop Large Room Video Conference System with Lenovo® M920Q ThinkSmart™ Edition Tiny for Microsoft Teams® Rooms, Discontinued
- UC-M70-U: Crestron Flex Tabletop Large Room Video Conference System
- UC-M70-UA: Crestron Flex Tabletop Large Room Audio Conference System
- <u>UC-M70-Z</u>: Crestron Flex Tabletop Large Room Video Conference System for Zoom Rooms[®] Software
- <u>UC-M70-Z-L</u>: Crestron Flex Tabletop Large Room Video Conference System with Lenovo® M920Q ThinkSmart™ Edition Tiny for Zoom Rooms® Software, Discontinued
- <u>UC-MM30-NC-T</u>: Crestron Flex Tabletop Small Room Conference System for Microsoft Teams[®] Rooms
- <u>UC-MM30-NC-T-I</u>: Crestron Flex Tabletop Small Room Conference System for Microsoft Teams[®] Rooms, International
- <u>UC-MM30-NC-Z</u>: Crestron Flex Tabletop Small Room Conference System for Zoom Rooms[®] Software
- <u>UC-MM30-NC-Z-I</u>: Crestron Flex Tabletop Small Room Conference System for Zoom Rooms[®] Software, International
- <u>UC-MM30-T</u>: Crestron Flex Tabletop Small Room Video Conference System for Microsoft Teams[®] Rooms
- <u>UC-MM30-T-I</u>: Crestron Flex Tabletop Small Room Video Conference System for Microsoft Teams[®] Rooms, International
- <u>UC-MM30-T-L</u>: Crestron Flex Tabletop Small Room Video Conference System with Lenovo[®] M920Q ThinkSmart[™] Edition Tiny for Microsoft Teams[®] Rooms, Discontinued

- <u>UC-MM30-T-L-I</u>: Crestron Flex Tabletop Small Room Video Conference System with Lenovo® M920Q ThinkSmart™ Edition Tiny for Microsoft Teams® Rooms, International, Discontinued
- <u>UC-MM30-TA</u>: Crestron Flex Tabletop Small Room Audio Conference System for Microsoft Teams[®] Rooms, Discontinued
- <u>UC-MM30-TA-I</u>: Crestron Flex Tabletop Small Room Audio Conference System for Microsoft Teams[®] Rooms, International, Discontinued
- <u>UC-MM30-Z</u>: Crestron Flex Tabletop Small Room Video Conference System for Zoom Rooms[®] Software
- <u>UC-MM30-Z-I</u>: Crestron Flex Tabletop Small Room Video Conference System for Zoom Rooms[®] Software, International
- <u>UC-MM30-Z-L</u>: Crestron Flex Tabletop Small Room Video Conference System with Lenovo® M920Q ThinkSmart™ Edition Tiny for Zoom Rooms® Software, Discontinued
- <u>UC-MM30-Z-L-I</u>: Crestron Flex Tabletop Small Room Video Conference System with Lenovo® M920Q ThinkSmart™ Edition Tiny for Zoom Rooms® Software, International, Discontinued
- <u>UC-MMX30-NC-T</u>: Crestron Flex Tabletop Small Room Conference System for Microsoft Teams[®] Rooms
- <u>UC-MMX30-NC-T-I</u>: Crestron Flex Tabletop Small Room Conference System for Microsoft Teams[®] Rooms, International
- <u>UC-MMX30-NC-Z</u>: Crestron Flex Tabletop Small Room Conference System for Zoom Rooms[®] Software
- <u>UC-MMX30-NC-Z-I</u>: Crestron Flex Tabletop Small Room Conference System for Zoom Rooms[®] Software, International
- <u>UC-MMX30-T</u>: Crestron Flex Advanced Tabletop Small Room Video Conference System for Microsoft Teams[®] Room
- <u>UC-MMX30-T-I</u>: Crestron Flex Advanced Tabletop Small Room Video Conference System for Microsoft Teams[®] Rooms, International
- <u>UC-MMX30-T-L</u>: Crestron Flex Advanced Tabletop Small Room Video Conference System with Lenovo® M920Q ThinkSmart™ Edition Tiny for Microsoft Teams® Rooms, Discontinued
- <u>UC-MMX30-T-L-I</u>: Crestron Flex Advanced Tabletop Small Room Video Conference System with Lenovo[®] M920Q ThinkSmart[™] Edition Tiny for Microsoft Teams[®] Rooms, International, Discontinued
- <u>UC-MMX30-Z</u>: Crestron Flex Advanced Tabletop Small Room Video Conference System for Zoom Rooms[®] Software
- <u>UC-MMX30-Z-I</u>: Crestron Flex Advanced Tabletop Small Room Video Conference System for Zoom Rooms[®] Software, International
- <u>UC-MMX30-Z-L</u>: Crestron Flex Advanced Tabletop Small Room Video Conference System with Lenovo® M920Q ThinkSmart™ Edition Tiny for Zoom Rooms® Software, Discontinued
- <u>UC-MMX30-Z-L-I</u>: Crestron Flex Advanced Tabletop Small Room Video Conference System with Lenovo[®] M920Q ThinkSmart[™] Edition Tiny for Zoom Rooms[®] Software, International, Discontinued
- <u>UC-MX50-NC-T</u>: Crestron Flex Advanced Tabletop Medium Room Conference System for Microsoft Teams[®] Rooms

- <u>UC-MX50-NC-Z</u>: Crestron Flex Advanced Tabletop Medium Room Conference System for Zoom Rooms[®] Software
- <u>UC-MX50-T</u>: Crestron Flex Advanced Tabletop Medium Room Video Conference System for Microsoft Teams[®] Rooms
- <u>UC-MX50-T-L</u>: Crestron Flex Advanced Tabletop Medium Room Video Conference System with Lenovo® M920Q ThinkSmart™ Edition Tiny for Microsoft Teams® Rooms, Discontinued
- <u>UC-MX50-T-UPGRD</u>: Crestron Flex Advanced Medium Room Upgrade Solution with Microsoft Teams[®] Rooms, Discontinued
- UC-MX50-U: Crestron Flex Advanced Tabletop Medium Room Video Conference System
- <u>UC-MX50-Z</u>: Crestron Flex Advanced Tabletop Medium Room Video Conference System for Zoom Rooms[®] Software
- <u>UC-MX50-Z-L</u>: Crestron Flex Advanced Tabletop Medium Room Video Conference System with Lenovo® M920Q ThinkSmart[™] Edition Tiny for Zoom Rooms® Software, Discontinued
- <u>UC-MX50-Z-UPGRD</u>: Crestron Flex Advanced Medium Room Upgrade Solution with Zoom Rooms[®] Software, Discontinued
- <u>UC-MX70-NC-T</u>: Crestron Flex Advanced Tabletop Large Room Conference System for Microsoft Teams[®] Rooms
- <u>UC-MX70-NC-Z</u>: Crestron Flex Advanced Tabletop Large Room Conference System for Zoom Rooms[®] Software
- <u>UC-MX70-T</u>: Crestron Flex Advanced Tabletop Large Room Video Conference System for Microsoft Teams[®] Rooms
- <u>UC-MX70-T-L</u>: Crestron Flex Advanced Tabletop Large Room Video Conference System with Lenovo® M920Q ThinkSmart[™] Edition Tiny for Microsoft Teams® Rooms, Discontinued
- UC-MX70-U: Crestron Flex Advanced Tabletop Large Room Video Conference System
- <u>UC-MX70-Z</u>: Crestron Flex Advanced Tabletop Large Room Video Conference System for Zoom Rooms[®] Software
- <u>UC-MX70-Z-L</u>: Crestron Flex Advanced Tabletop Large Room Video Conference System with Lenovo® M920Q ThinkSmart[™] Edition Tiny for Zoom Rooms® Software, Discontinued

Crestron Flex Phones

- <u>UC-P8-T</u>: Crestron Flex 8 in. Audio Desk Phone for Microsoft Teams® Software, Discontinued
- <u>UC-P8-T-I</u>: Crestron Flex 8 in. Audio Desk Phone for Microsoft Teams® Software, International, Discontinued
- <u>UC-P8-T-C</u>: Crestron Flex 8 in. Video Desk Phone for Microsoft Teams® Software, Discontinued
- <u>UC-P8-T-C-I</u>: Crestron Flex 8 in. Video Desk Phone for Microsoft Teams[®] Software, International, Discontinued
- <u>UC-P8-T-HS</u>: Crestron Flex 8 in. Audio Desk Phone with Handset for Microsoft Teams[®] Software, Discontinued
- <u>UC-P8-T-HS-I</u>: Crestron Flex 8 in. Audio Desk Phone with Handset for Microsoft Teams[®] Software, International, Discontinued
- <u>UC-P8-T-C-HS</u>: Crestron Flex 8 in. Video Desk Phone with Handset for Microsoft Teams[®] Software, Discontinued

- <u>UC-P8-T-C-HS-I</u>: Crestron Flex 8 in. Video Desk Phone with Handset for Microsoft Teams[®] Software, International, Discontinued
- <u>UC-P8-TD</u>: Crestron Flex 8 in. Display for Microsoft Teams[®] Software, Discontinued
- <u>UC-P8-TD-I</u>: Crestron Flex 8 in. Display for Microsoft Teams[®] Software, International, Discontinued
- <u>UC-P10-T</u>: Crestron Flex 10 in. Audio Desk Phone for Microsoft Teams® Software, Discontinued
- <u>UC-P10-T-I</u>: Crestron Flex 10 in. Audio Desk Phone for Microsoft Teams[®] Software, International, Discontinued
- <u>UC-P10-T-C</u>: Crestron Flex 10 in. Video Desk Phone for Microsoft Teams® Software, Discontinued
- <u>UC-P10-T-C-I</u>: Crestron Flex 10 in. Video Desk Phone for Microsoft Teams[®] Software, International, Discontinued
- <u>UC-P10-T-HS</u>: Crestron Flex 10 in. Audio Desk Phone with Handset for Microsoft Teams[®] Software, Discontinued
- <u>UC-P10-T-HS-I</u>: Crestron Flex 10 in. Audio Desk Phone with Handset for Microsoft Teams[®] Software, International, Discontinued
- <u>UC-P10-T-C-HS</u>: Crestron Flex 10 in. Video Desk Phone with Handset for Microsoft Teams[®] Software, Discontinued
- <u>UC-P10-T-C-HS-I</u>: Crestron Flex 10 in. Video Desk Phone with Handset for Microsoft Teams[®] Software, International, Discontinued
- UC-P10-TD: Crestron Flex 10 in. Display for Microsoft Teams® Software, Discontinued
- <u>UC-P10-TD-I</u>: Crestron Flex 10 in. Display for Microsoft Teams[®] Software, International, Discontinued
- <u>UC-P100-T</u>: Crestron Flex VoIP Desk Phone for Microsoft Teams® Software, Discontinued
- <u>UC-P110-T</u>: Crestron Flex VoIP Desk Phone with Tilt Screen for Microsoft Teams[®] Software, Discontinued

Crestron Flex Hubs and Pods

- UC-AUDIO-HUB-DR1: Crestron Flex Hub Wireless Transceiver, DECT Region 1
- UC-AUDIO-HUB-DR2: Crestron Flex Hub Wireless Transceiver, DECT Region 2
- UC-AUDIO-HUB-DR3: Crestron Flex Hub Wireless Transceiver, DECT Region 3
- UC-AUDIO-HUB-DR4: Crestron Flex Hub Wireless Transceiver, DECT Region 4
- UC-AUDIO-HUB-DR5: Crestron Flex Hub Wireless Transceiver, DECT Region 5
- <u>UC-AUDIO-POD-B-DR1</u>: Crestron Flex Pod Wireless Speaker and Microphone, Black, DECT Region 1
- <u>UC-AUDIO-POD-B-DR2</u>: Crestron Flex Pod Wireless Speaker and Microphone, Black, DECT Region 2
- <u>UC-AUDIO-POD-B-DR3</u>: Crestron Flex Pod Wireless Speaker and Microphone, Black, DECT Region 3
- <u>UC-AUDIO-POD-B-DR4</u>: Crestron Flex Pod Wireless Speaker and Microphone, Black, DECT Region 4

 <u>UC-AUDIO-POD-B-DR5</u>: Crestron Flex Pod Wireless Speaker and Microphone, Black, DECT Region 5

Connectivity

The following connectivity solutions are supported by the XiO Cloud® service.

USB Switchers

- USB-SW-200: 2-input USB 3.2 Data Matrix Switcher
- USB-SW-400: 4-input USB 3.2 Data Matrix Switcher

Control

The following control solutions are supported by the XiO Cloud® service.

3-Series Control Systems

- AV3: 3-Series[®] Control System, Discontinued
- CP3: 3-Series[®] Control System, Discontinued
- <u>CP3N</u>: 3-Series[®] Control System, Discontinued
- DIN-AP3: 3-Series[®] DIN Rail Control System, Discontinued
- <u>DIN-AP3MEX</u>: 3-Series[®] DIN Rail Control System with infiNET EX[®] and ER Wireless Gateway, Discontinued
- PRO3: 3-Series[®] Control System, Discontinued
- RMC3: 3-Series[®] Control System, Discontinued

4-Series Control Systems

- AV4: 4-Series[®] Control System, Discontinued
- CP4: 4-Series[®] Control System
- CP4N: 4-Series[®] Control System
- DIN-AP4: 4-Series® DIN Rail Control System
- MC4: 4-Series[®] Control System
- MC4-I: 4-Series[®] Control System, International
- PRO4: 4-Series[®] Control System, Discontinued
- <u>RMC4</u>: 4-Series[®] Control System

Crestron Virtual Control Server-Based Control Systems

- <u>VC-4-PC-3</u>: Computer with Crestron Virtual Control Server Software
- <u>VC-4-ROOM</u>: Crestron Virtual Control Server Software Single-Room License
- VC-4-SERVER-25: Rack Server with Crestron Virtual Control Software

Media Presentation Controllers

- MPC3-101-B: 3-Series® Media Presentation Controller 101, Black, Discontinued
- MPC3-102-B: 3-Series® Media Presentation Controller 102, Black
- MPC3-201-B: 3-Series® Media Presentation Controller 201, Black
- MPC3-302-B: 3-Series® Media Presentation Controller 302, Black
- MPC3-302-W: 3-Series® Media Presentation Controller 302, White

Smart Display Controllers

• HD-CTL-101: 8K Smart Display Controller with HDMI® connectivity

Lighting and Environmental

The following lighting and environmental solutions are supported by the XiO Cloud® service.

Lighting Control Systems

• ZUM-HUB4: Zūm[®] Lighting Control System, Hub4

Power

The following power solutions are supported by the XiO Cloud® service.

Power Conditioners

- <u>PC-350V-12</u>: 12-Outlet Vertical Networked Power Controller and Conditioner with Surge
 Protection and Metering
- <u>PC-350V-18</u>: 18-Outlet Vertical Networked Power Controller and Conditioner with Surge Protection and Metering

Scheduling

The following scheduling solutions are supported by the XiO Cloud® service.

Room Scheduling Touch Screens

- <u>TSS-7-B-S</u>: 7 in. Room Scheduling Screen, Black Smooth, Discontinued
- <u>TSS-7-W-S</u>: 7 in. Room Scheduling Screen, White Smooth, Discontinued
- TSS-10-B-S: 10.1 in. Room Scheduling Screen, Black Smooth, Discontinued
- TSS-10-W-S: 10.1 in. Room Scheduling Screen, White Smooth, Discontinued
- TSS-770-B-S: 7 in. Room Scheduling Screen, Black Smooth
- TSS-770-W-S: 7 in. Room Scheduling Screen, White Smooth
- TSS-1070-B-S: 10.1 in. Room Scheduling Screen, Black Smooth
- TSS-1070-W-S: 10.1 in. Room Scheduling Screen, White Smooth

Desk Scheduling Devices

- DSS-100: Desk Scheduling Status Indicator
- TSS-470E-B-T: 3.5 in. Desk Scheduling Touch Screen, Black Textured

Sensors

The following sensors are supported by the XiO Cloud[®] service.

Occupancy Sensors

• <u>CEN-ODT-C-POE</u>: Dual-Technology Occupancy Sensor, PoE, 2,000 Sq Ft

Third-Party Devices

The following third-party devices are supported by the XiO Cloud® service via the Crestron Connected® protocol or the Crestron XiO Cloud™ Third-Party Device Monitoring Gateway.

NOTE: For more information on using third-party devices to the XiO Cloud service, refer to the XiO Cloud[®] Service Third-Party Device Monitoring Configuration Guide.

Crestron Connected Devices

Supported third-party devices that use the Crestron Connected[®] communications protocol can be claimed to the XiO Cloud service directly without requiring a Crestron control processor, including the following:

- Absen[®] displays
- Acer[®] displays
- Barco[®] displays
- BenQ[®] displays
- Christie® displays
- Elo[®] Touch displays
- Epson[®] displays
- GUDE® PDUs
- InFocus[®] projectors
- Legrand[®] PDUs
- LG[®] displays
- NEC[®] displays
- Optoma[®] displays
- Phillips[®] displays
- Raritan[®] PDUs
- Samsung[®] displays
- Sharp[®] displays
- SMART Board[®] displays
- Sony[®] displays
- ViewSonic[®] displays
- Vivitek[®] projectors

For a list of third-party device models that have been certified to connect to XiO Cloud, refer to the <u>Crestron Connected Devices web app</u>.

Crestron Driver Devices

The XiO Cloud[®] service provides monitoring capabilities for supported third-party devices within a Crestron[®] system using the Crestron Drivers framework. The devices will appear in the XiO Cloud service and need only to be claimed to start monitoring.

Crestron Driver support in XiO Cloud is available for the following device types:

- A/V Receivers
- A/V Switchers
- Audio Mixers
- Blu-ray[®] Disc Players
- Cable Boxes
- Displays
- Polycom[®] Video Codec
- Projectors
- Video Servers

To view the available Crestron Drivers for these device types, visit the Crestron Driver Portal at drivers.crestron.io.

Third-Party Device Monitoring Gateway Software

<u>Crestron XiO Cloud™ Gateway Software</u> provides expanded configuration and monitoring capabilities for supported third-party devices not connected directly to a Crestron® control processor. This configuration allows for monitoring via Ping, TCP, SNMP, and the Crestron Drivers framework over Ethernet.

Touch Screens

The following touch screens are supported by the XiO Cloud® service.

Tabletop Touch Screens

- <u>TS-770-B-S</u>: 7 in. Tabletop Touch Screen, Black Smooth
- TS-770-W-S: 7 in. Tabletop Touch Screen, White Smooth
- TS-770-GV-B-S: 7 in. Tabletop Touch Screen, Government Version, Black Smooth
- TS-770-GV-W-S: 7 in. Tabletop Touch Screen, Government Version, White Smooth
- TS-1070-B-S: 10.1 in. Tabletop Touch Screen, Black Smooth
- TS-1070-W-S: 10.1 in. Tabletop Touch Screen, White Smooth
- TS-1070-GV-B-S: 10.1 in. Tabletop Touch Screen, Government Version, Black Smooth
- TS-1070-GV-W-S: 10.1 in. Tabletop Touch Screen, Government Version, White Smooth
- TS-1542-TILT-B-S: 15.6 in. HD Touch Screen, Tabletop Tilt, Black Smooth, Discontinued
- TS-1542-TILT-W-S: 15.6 in. HD Touch Screen, Tabletop Tilt, White Smooth, Discontinued
- <u>TS-1542-TILT-SSB</u>: 15.6 in. HD Touch Screen, Tabletop Tilt, Signature Series Black, Discontinued
- TS-1542-TILT-SSW: 15.6 in. HD Touch Screen, Tabletop Tilt, Signature Series White, Discontinued
- <u>TS-1542-TILT-C-B-S</u>: 15.6 in. HD Touch Screen with DM 8G+[®] Input, Tabletop Tilt, Black Smooth, Discontinued
- <u>TS-1542-TILT-C-W-S</u>: 15.6 in. HD Touch Screen with DM 8G+[®] Input, Tabletop Tilt, White Smooth, Discontinued
- <u>TS-1542-TILT-C-SSB</u>: 15.6 in. HD Touch Screen with DM 8G+[®] Input, Tabletop Tilt, Signature Series Black, Discontinued
- <u>TS-1542-TILT-C-SSW</u>: 15.6 in. HD Touch Screen with DM 8G+[®] Input, Tabletop Tilt, Signature Series White, Discontinued

Touch Screen Control Systems

- TSCW-730-B-S: 7 in. Touch Screen Control System, Black Smooth, Discontinued
- TSCW-730-W-S: 7 in. Touch Screen Control System, White Smooth, Discontinued

Wall Mount Touch Screens

- TS-1542-B-S: 15.6 in. HD Touch Screen, Wall Mount or VESA, Black Smooth, Discontinued
- TS-1542-W-S: 15.6 in. HD Touch Screen, Wall Mount or VESA, White Smooth, Discontinued
- <u>TS-1542-C-B-S</u>: 15.6 in. HD Touch Screen with DM 8G+[®] Input, Wall Mount or VESA, Black Smooth, Discontinued
- <u>TS-1542-C-W-S</u>: 15.6 in. HD Touch Screen with DM 8G+[®] Input, Wall Mount or VESA, White Smooth, Discontinued

- <u>TSW-560-B-S</u>: 5 in. Touch Screen, Black Smooth, Discontinued
- TSW-560-W-S: 5 in. Touch Screen, White Smooth, Discontinued
- <u>TSW-560-NC-B-S</u>: 5 in. Touch Screen without Camera or Microphone, Black Smooth, Discontinued
- <u>TSW-560-NC-W-S</u>: 5 in. Touch Screen without Camera or Microphone, White Smooth, Discontinued
- <u>TSW-560P-B-S</u>: 5 in. Touch Screen, Portrait, Black Smooth, Discontinued
- <u>TSW-560P-W-S</u>: 5 in. Touch Screen, Portrait, White Smooth, Discontinued
- TSW-570-B-S: 5 in. Touch Screen, Black Smooth
- TSW-570-W-S: 5 in. Touch Screen, White Smooth
- <u>TSW-570P-B-S</u>: 5 in. Touch Screen, Portrait, Black Smooth
- TSW-570P-W-S: 5 in. Touch Screen, Portrait, White Smooth
- TSW-760-B-S: 7 in. Touch Screen, Black Smooth, Discontinued
- <u>TSW-760-W-S</u>: 7 in. Touch Screen, White Smooth, Discontinued
- <u>TSW-760-NC-B-S</u>: 7 in. Touch Screen without Camera or Microphone, Black Smooth, Discontinued
- <u>TSW-760-NC-W-S</u>: 7 in. Touch Screen without Camera or Microphone, White Smooth, Discontinued
- TSW-770-B-S: 7 in. Wall Mount Touch Screen, Black Smooth
- <u>TSW-770-W-S</u>: 7 in. Wall Mount Touch Screen, White Smooth
- TSW-770-GV-B-S: 7 in. Wall Mount Touch Screen, Government Version, Black Smooth
- TSW-770-GV-W-S: 7 in. Wall Mount Touch Screen, Government Version, White Smooth
- TSW-1060-B-S: 10.1 in. Touch Screen, Black Smooth, Discontinued
- TSW-1060-W-S: 10.1 in. Touch Screen, White Smooth, Discontinued
- <u>TSW-1060-NC-B-S</u>: 10.1 in. Touch Screen without Camera or Microphone, Black Smooth, Discontinued
- <u>TSW-1060-NC-W-S</u>: 10.1 in. Touch Screen without Camera or Microphone, White Smooth, Discontinued
- TSW-1070-B-S: 10.1 in. Wall Mount Touch Screen, Black Smooth
- TSW-1070-W-S: 10.1 in. Wall Mount Touch Screen, White Smooth
- TSW-1070-GV-B-S: 10.1 in. Wall Mount Touch Screen, Government Version, Black Smooth
- TSW-1070-GV-W-S: 10.1 in. Wall Mount Touch Screen, Government Version, White Smooth

Wireless Touch Screens

• TST-1080: 10.1 in. Wireless Touch Screen

Video

The following video solutions are supported by the XiO Cloud® service.

AirMedia Wireless Presentation and Conferencing

- AM-200: AirMedia® Presentation System 200, Discontinued
- <u>AM-300</u>: AirMedia[®] Presentation System 300, Discontinued
- AM-3000-WF: AirMedia® Receiver 3000 with Wi-Fi® Network Connectivity
- AM-3000-WF-I: AirMedia® Receiver 3100 with Wi-Fi® Network Connectivity, International
- <u>AM-3100-WF</u>: AirMedia[®] Series 3 Receiver 100 with Wi-Fi[®] Connectivity
- AM-3100-WF-I: AirMedia® Series 3 Receiver 100 with Wi-Fi® Connectivity, International
- <u>AM-3200</u>: AirMedia® Series 3 Receiver 200
- <u>AM-3200-WF</u>: AirMedia[®] Series 3 Receiver 200 with Wi-Fi[®] Connectivity
- AM-3200-WF-I: AirMedia[®] Series 3 Receiver 200 with Wi-Fi[®] Connectivity, International

Digital Graphics Engines

- DGE-100: Digital Graphics Engine 100
- DGE-1000: Digital Graphics Engine 1000
- <u>DM-DGE-200-C</u>: Digital Graphics Engine 200 with 4K DM 8G+[®] Input

DigitalMedia Solutions

The following DigitalMedia[™] solutions supported by the XiO Cloud[®] service.

DigitalMedia Presentation Systems

- <u>DMPS3-4K-50</u>: 3-Series[®] 4K DigitalMedia[™] Presentation System 50, Discontinued
- <u>DMPS3-4K-100-C</u>: 3-Series[®] 4K DigitalMedia[™] Presentation System 100, Discontinued
- DMPS3-4K-150-C: 3-Series® 4K DigitalMedia™ Presentation System 150, Discontinued
- <u>DMPS3-4K-200-C</u>: 3-Series[®] 4K DigitalMedia[™] Presentation System 200, Discontinued
- DMPS3-4K-250-C: 3-Series[®] 4K DigitalMedia[™] Presentation System 250
- <u>DMPS3-4K-250-C-AIRMEDIA</u>: 3-Series® 4K DigitalMedia™ Presentation System 250 with AirMedia®, Discontinued
- <u>DMPS3-4K-300-C</u>: 3-Series[®] 4K DigitalMedia[™] Presentation System 300, Discontinued
- DMPS3-4K-350-C: 3-Series[®] 4K DigitalMedia[™] Presentation System 350
- <u>DMPS3-4K-350-C-AIRMEDIA</u>: 3-Series® 4K DigitalMedia™ Presentation System 350 with AirMedia®, Discontinued
- <u>DMPS3-200-C</u>: 3-Series[®] DigitalMedia[™] Presentation System 200, Discontinued

- <u>DMPS3-300-C</u>: 3-Series[®] DigitalMedia[™] Presentation System 300, Discontinued
- <u>DMPS3-300-C-AEC</u>: 3-Series® DigitalMedia™ Presentation System 300 with Audio Conferencing Interface, Discontinued

DigitalMedia Switchers

- <u>DM-MD8X8-CPU3</u>: 8x8 DigitalMedia™ Switcher
- <u>DM-MD8X8-CPU3-RPS</u>: 8x8 DigitalMedia™ Switcher with Redundant Power Supplies
- <u>DM-MD16X16-CPU3</u>: 16x16 DigitalMedia™ Switcher
- <u>DM-MD16X16-CPU3-RPS</u>: 16x16 DigitalMedia[™] Switcher with Redundant Power Supplies
- <u>DM-MD32X32-CPU3</u>: 32x32 DigitalMedia™ Switcher
- <u>DM-MD32X32-CPU3-RPS</u>: 32x2 DigitalMedia[™] Switcher with Redundant Power Supplies

DM NVX AV-over-IP Solutions

- DM-NVX-350: DM NVX® 4K60 4:4:4 HDR Network AV Encoder/Decoder, Discontinued
- <u>DM-NVX-350C</u>: DM NVX[®] 4K60 4:4:4 HDR Network AV Encoder/Decoder Card, Discontinued
- DM-NVX-351: DM NVX[®] 4K60 4:4:4 HDR Network AV Encoder/Decoder with Downmixing
- DM-NVX-351C: DM NVX® 4K60 4:4:4 HDR Network AV Encoder/Decoder Card with Downmixing
- <u>DM-NVX-352</u>: DM NVX[®] 4K60 4:4:4 HDR Network AV Encoder/Decoder with Dante[®] Audio, Discontinued
- <u>DM-NVX-352C</u>: DM NVX[®] 4K60 4:4:4 HDR Network AV Encoder/Decoder Card with Dante[®] Audio, Discontinued
- DM-NVX-360: DM NVX® 4K60 4:4:4 HDR Network AV Encoder/Decoder
- <u>DM-NVX-360C</u>: DM NVX[®] 4K60 4:4:4 HDR Network AV Encoder/Decoder Card
- <u>DM-NVX-363</u>: DM NVX[®] 4K60 4:4:4 HDR Network AV Encoder/Decoder with Downmixing and Dante[®] Audio
- <u>DM-NVX-363C</u>: DM NVX[®] 4K60 4:4:4 HDR Network AV Encoder/Decoder Card with Downmixing and Dante[®] Audio
- DM-NVX-384: DM NVX® 5K 4x1 AV-over-IP Switcher with HDMI® and USB-C® Connectivity
- DM-NVX-384C: DM NVX[®] 5K 4x1 AV-over-IP Switcher Card with HDMI[®] and USB-C[®] Connectivity
- DM-NVX-D10: DM NVX[®] 1080p60 4:4:4 Network AV Decoder
- DM-NVX-D20: DM NVX[®] 4K60 4:2:0 Network AV Decoder
- DM-NVX-D30: DM NVX® 4K60 4:4:4 HDR Network AV Decoder
- DM-NVX-D30C: DM NVX® 4K60 4:4:4 HDR Network AV Decoder Card
- DM-NVX-D200: DM NVX® 4K60 4:2:0 Network AV Decoder with Scaler
- DM-NVX-D80-IOAV: DM NVX® 4K60 4:4:4 HDR Network AV OPS Decoder, Discontinued
- DM-NVX-E10: DM NVX® 1080p60 4:4:4 Network AV Encoder
- DM-NVX-E20: DM NVX® 4K60 4:2:0 Network AV Encoder
- DM-NVX-E30: DM NVX[®] 4K60 4:4:4 HDR Network AV Encoder
- DM-NVX-E30C: DM NVX® 4K60 4:4:4 HDR Network AV Encoder Card

- DM-NVX-E760: DM NVX® 4K60 4:4:4 HDR Network AV Encoder with DM® Input
- DM-NVX-E760C: DM NVX® 4K60 4:4:4 HDR Network AV Encoder Card with DM® Input
- <u>DM-NVX-SW-C310</u>: DM NVX[®] 4K30 Network AV Encoder/Decoder CPU-Based Software, Single Stream

HDMI Solutions

The following HDMI[®] solutions supported by the XiO Cloud[®] service.

HDMI Extenders

- HD-RX-4K-210-C-E: DMPS Lite[™] 4K Multiformat 2x1 AV Switch and Receiver
- <u>HD-RX-4K-210-C-E-POE</u>: DMPS Lite[™] 4K Multiformat 2x1 AV Switch and Receiver with PoE+, Discontinued
- HD-RX-4K-410-C-E: DMPS Lite[™] 4K Multiformat 4x1 AV Switch and Receiver, Discontinued
- <u>HD-RX-4K-410-C-E-SW4</u>: DMPS Lite[™] 4K Multiformat 4x1 AV Switch and Receiver with 4-Port Ethernet Switch, Discontinued
- <u>HD-RX-4K-510-C-E</u>: DMPS Lite[™] 4K Multiformat 5x1 AV Switch and Receiver
- <u>HD-RX-4K-510-C-E-SW4</u>: DMPS Lite[™] 4K Multiformat 5x1 AV Switch and Receiver with 4-Port Ethernet Switch, Discontinued
- <u>HD-RXU-4KZ-202</u>: DM Lite[®] 4K60 4:4:4 Receiver and 2x2 Auto-Switcher for HDMI[®] and USB 2.0 Signal Extension over CATx Cable
- <u>HD-TXU-4KZ-211</u>: DM Lite[®] 4K60 4:4:4 Transmitter and 2x1 Auto-Switcher for HDMI[®], USB-C[®] DisplayPort[™], and USB 2.0 Signal Extension over CATx Cable
- <u>HD-TXU-4KZ-211-CHGR</u>: DM Lite[®] 4K60 4:4:4 Transmitter and 2x1 Auto-Switcher for HDMI[®], USB-C[®] DisplayPort[™], and USB 2.0 Signal Extension over CATx Cable with Device Charging

HDMI Switchers

- HD-MD2X1-8K: 2x1 8K AV Switcher and Smart Display Controller
- HD-MD4X1-4KZ-E: 4x1 4K60 4:4:4 HDR AV Switcher
- <u>HD-MD4X2-4KZ-E</u>: 4x2 4K60 4:4:4 HDR AV Switcher
- HD-MD4X4-4KZ-E: 4x2 4K60 4:4:4 HDR AV Switcher
- HD-MD8X4-4KZ-E: 8x4 4K60 4:4:4 HDR AV Switcher
- HD-MD8X8-4KZ-E: 8x8 4K60 4:4:4 HDR AV Switcher
- HD-PS401: 4x1 4K60 4:4:4 HDR Presentation System
- HD-PS402: 4x2 4K60 4:4:4 HDR Presentation System
- HD-PS621: 8x1 4K60 4:4:4 HDR Presentation System
- HD-PS622: 8x2 4K60 4:4:4 HDR Presentation System

Smart Display Controllers

• HD-CTL-101: 8K Smart Display Controller with HDMI® connectivity

Appendix A: Configure ServiceNow for XiO Cloud Alerts

As of XiO Cloud version 1.23, XiO Cloud alerts can be integrated with ServiceNow® software instances. Once alerts have been configured for your XiO Cloud account (as described in Alerts on page 127), the ServiceNow administrator for your system must make configuration changes to allow XiO Cloud to communicate with your ServiceNow instance. The administrator must implement two new inbound actions and modify the scripts/incident form in accordance with your system and requirements. These configuration tasks are described in the following sections.

Client Prerequisites

Ensure the following client-side prerequisites have been met prior to configuring your ServiceNow instance for XiO Cloud alerts:

- A working ServiceNow instance that is permitted to receive emails
- A ServiceNow system administrator that has been granted the **Admin** role
- ServiceNow has been enabled in the XiO Cloud account settings.
- Basic knowledge of ServiceNow incident form development
- Basic knowledge of ServiceNow scripting and JavaScript® coding


Turn on ServiceNow Within XiO Cloud

Users with Global Administrator permissions can turn on a connection to a ServiceNow instance directly from the XiO Cloud portal.

To turn on ServiceNow within XiO Cloud from the portal:

- 1. Select the gear icon \bigotimes on the left side of the screen.
- 2. Select Account Setting.

SETTINGS Menu

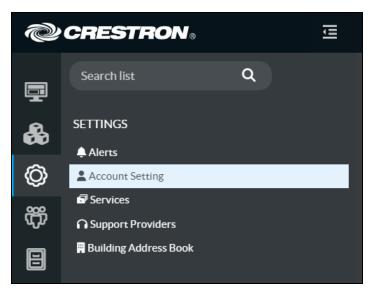

3. Within the **Profile** tab on the right side of the screen, expand the **ServiceNow** accordion, then turn on the **Enable ServiceNow** toggle.

Profile Tab - ServiceNow Accordion

Profile			
▶ Details		C Revert	Save Changes
▼ ServiceNow			Save Changes
Enable ServiceNow			
Email Address	dev@servicenowdevelopers.com		

- 4. Enter the email address for the ServiceNow instance in the **Email Address** text field.
- 5. Tap **Save Changes** on the top right of the accordion.

Create XiO Incident Script

To allow XiO Cloud to create an alert email within your system, you must implement the **Create XiO Incident** inbound action within your ServiceNow instance. This rule takes emails received from XiO Cloud and converts them into incidents within your system automatically, allowing specified data points to map to fields within your instance. Selecting the inbound action rule shows the details associated with it, including the condition that triggers the inbound action and the script that maps it to your incident table.

i	Create XiO Incident	true	email.read	(function runAction(/*GlideRecord*/ cur	Incident [incident]
---	---------------------	------	------------	--	---------------------

When to Run Tab

Select the **When to Run** tab to view and configure conditions that will trigger the **Create XiO Incident** inbound action to run. Sending an email to the ServiceNow instance with a subject that contains "Crestron-XIO: NEW Incident" triggers the inbound action to run.

NOTE: Do not change the subject condition, as it may cause your system to incorrectly triage your XiO Cloud incidents and, therefore, to not trigger the rule.

onditions	Add Filter Condition	Add "OR" Clause						
	Subject	•	contains	~	Crestron-XIO: NEW Incider	AND	OR	×
Condition								

Actions Tab

Select the **Actions** tab to view and configure action scripts for the **Create XiO Incident** inbound action. The provided script parses through the email and correctly allocates data to certain fields based on the content of the XiO Cloud alert.

Each section of the script is described below.

```
//Parse Table Content to Description
var parseBody = email.body_text.split(',').join('\n');
current.description = parseBody;
```

The code under the "Parse Table Content to Description" comment is used to parse the information within the comma-delimited email sent from XiO Cloud and adds it to the description field of the created incident.

```
//Populate Email content to Fields
current.short_description = email.subject;
current.caller_id = gs.getUserID();
current.contact_type = "Email";
current.comments = "recieved from: " + email.origemail + "\n\n" + email.body_text;
current.category = "xio";
current.subcategory = "Email";
current.cmbd_ci.setDisplayValue('XiO');
```

The code under the "Populate Email content to Fields" section shows the logic used to populate other key fields on the incident form, including **Caller ID**, **Contact Type**, **Comments**, **Category**, **Subcategory**, and **Configuration Item**.

NOTES:

- You must add the **Category**, **Subcategory**, and **Configuration Item** values to your system if they do not already exist. Custom categories, subcategories, or configuration items can also be used. In this case, the code must be modified to match the values that will be used in the current system. Additional information on how to add these values is provided in the ServiceNow documentation.
- The Caller ID field will populate as "Guest" unless you create an account associated with the XiO Cloud email. For more information, refer to the <u>ServiceNow documentation</u>.

```
//Parse Correlation ID from Email
var rsubject = email.subject;
var keyword = "CorrelationID#";
var key = rsubject.indexOf(keyword); //Assuming this text would never change
gs.log(key, 'Did it work');
if (key > 0) {
    var number = rsubject.substring(47);
    gs.log(number, "TEST"); //Try Logging number
    current.correlation_id = number;
    gs.log(number, "TEST AGAIN");
    current.insert();
}
```

The code under the "Parse Correlation ID from Email" section shows the logic used to populate incidents with the **Correlation ID** needed to link the XiO Cloud alert emails with your ServiceNow instance. This field must be added to your Incident form through the Form Designer tool if has not been already added.

NOTE: Modifying the provided logic is not recommended, as the code will likely break and will prevent the field from being populated.

Additional information on how to add certain fields to your incident form, such as Correlation ID, is provided in the <u>ServiceNow documentation</u>.

```
//Logic to Define Priority
if (email.body_text.toLowerCase().indexOf("critical") >= 0) {
    current.impact = 1;
    current.urgency = 1;
}
if (email.body_text.toLowerCase().indexOf("warning") >= 0) {
    current.impact = 2;
    current.urgency = 2;
}
```

The code under the "Logic to Define Priority" section is showing the logic that will populate the **Impact** and **Urgency** fields on the incident form, which will result in populating the **Priority** field based on the impact/urgency matrix that your incident is configured with.

Currently, there are only two variables within the script that will modify the **Priority** field:

- If an XiO Cloud alert email is of type "Critical" or of type "Warning", the priorities will be set to 1 or 3, respectively.
- If an XiO Cloud alert email is of a type other than "Warning" or "Critical", the default priority of 5 is assigned.

If you would like to modify this logic to better adhere to your instance processes, change the values of current.impact or current.urgency in accordance with the matrix below to get the desired priority for incoming incidents.

Impact/Urgency	1 – Critical	2 – High	3 – Medium	4 – Low
1 – Extensive	Priority 1	Priority 2	Priority 2	Priority 3
2 – Significant	Priority 2	Priority 2	Priority 3	Priority 4
3 – Moderate	Priority 2	Priority 3	Priority 4	Priority 4
4 – Minor	Priority 3	Priority 4	Priority 4	Priority 4

Close Incident XiO Script

After the XiO Cloud alert is resolved, the system will send a follow-up email to your ServiceNow instance. After this email is sent, the **Close Incident XiO** script will trigger and close the associated incident automatically. The primary function of the script is to locate the correct incident that the XiO Cloud email is referencing, and it does so by searching the system for the corresponding correlation ID that links the ServiceNow Incident to the XiO Cloud email.



When to Run Tab

Select the **When to Run** tab to view and configure conditions that will trigger the **Close Incident XiO** inbound action to run. Sending any email to the ServiceNow instance with a subject that contains "Closed incident with CorrelationID#" triggers the inbound action to run.

NOTE: Do not change the subject condition, as it may cause your system to incorrectly triage your XiO Cloud incidents and therefore not trigger the rule.

Actions Tab

Select the **Actions** tab to view and configure action scripts for the **Close Incident XiO** inbound action. The provided script parses through an XiO Cloud alert email and associates its correlation ID (located in the email subject) with the correlated incident and its matching ID.

Each section of the script is described on the following page.

```
//Logic to parse Correlation ID
var rsubject = email.subject;
var keyword = "CorrelationID#";
var key = rsubject.indexOf(keyword); //Assuming this text would never change
if (key > 0) {
    var myID = rsubject.substring(50);
    gs.log(myID);
}
```

The first snippet of code under the "Logic to parse Correlation ID" section is used to parse the correlation ID from the email subject and save it as a variable called "Keyword". An *If* statement is then run to check if the Keyword "Correlation ID#" exists. If this keyword exists, the index of the keyword is parsed from the email subject and saved as the variable "MyID." A log function, gs.log(myID), is also provided.

```
var myTask = new GlideRecord('incident');
myTask.addQuery("correlation_id", myID.toString());
myTask.query();
if (myTask.next()) {
    myTask.incident_state = IncidentState.CLOSED;
    gs.log('Task Completed');
    myTask.update();
} else {
    // No match found so Log an error
    gs.info('No Match found');
}
```

The second snippet of code under the "Logic to parse Correlation ID" section takes the saved Correlation ID (MyID) and uses it in a new GlideRecord to find any existing incidents with a matching Correlation ID. Once it is queried using MyTask.query(); the system searches your instance for any incidents that have a Correlation ID matching the variable saved from the **Close Incident XiO** email. Once a match is found, the system will set the Incident State to Closed. If no updated occurs, it will log "No Match found" in your system logs.

NOTE: Do not modify the close incident script, as any modifications to it may jeopardize the functionality of this script.

Close ServiceNow Incidents in XiO Cloud

When a ServiceNow incident is closed, the corresponding alert is not automatically resolved in XiO Cloud. In order for a closed incident to resolve the corresponding alert in XiO Cloud, a secure connection must be established between ServiceNow and XiO Cloud via REST API calls to the following endpoint:

https://api.crestron.io/api/v2/servicenowcallback/ServicenowCallBack


The REST API call is configured in ServiceNow as described in the following sections.

Add a Subscription Key to ServiceNow

A subscription key must be added to your ServiceNow instance to establish a connection between ServiceNow and XiO Cloud.

To add the required subscription key:

- 1. Log in to your ServiceNow instance.
- 2. Select **My Profile** from the right-hand navigation menu.

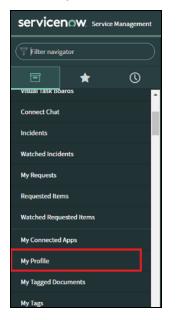

3. Using the hamburger menu in the top-left corner, navigate to Configure > Form Layout.

< ≡	User Save	r [Self Service view]		1	Update Set Password
	Insert Insert and Stay Configure > Export > View >	e System Form Design Form Layout Related Lists	Email Date format Time zone	admin@example.com System (yyyy-MM-dd) System (America/Los_Angeles) V	
	Create Favorite Copy URL Copy sys_id Show XML	All Table Security Rules nistrator Business Rules	XIOServiceNowSubscriptionKey	1de48c9f7ece43b683f5074fc0d788b3	
XiOSu Update Related L <u>View linked</u>	accounts	Client Scripts UI Policies Data Policies UI Actions Notifications Dictionary			~

The **Configuring User form** page is displayed.

Configuring User form					Cancel Save
Available		5	Selected		
Active Avatar Building [+] Calendar integration City Class Company [+] Cost center [+] Country code Created Created by Default perspective [+ Department [+] Domain [+] Domain Path Employee number Enable Multifactor Aut		> <	First name Last name Business phone Mobile phone Title -split- Email Notification Date format Time zone XIOServiceNowSubscr	riptionKey	
		Cancel	Save		
Form view and se	ction	(Create new field		
View name	Self Service 🗸		Name	XIOServiceNowSubscriptionKey	
Section	User XiOSubscriptionkey New	▲▲	Type Field length	String ~ Medium (100) ~)
			Add		

- 4. Enter the following information into the **Create new field** section.
 - Name: Enter "XIOServiceNowSubscriptionKey" into the text field.
 - Type: Select String from the drop-down menu.
 - Field Length: Select Medium (100) from the drop-down menu.
- 5. Select Add. The XiOServiceNowSubscriptionKey field is added to the Available fields list.
- 6. Select XiOServiceNowSubscriptionKey in the Available fields list, and then select the right arrow
 (>) button to move it into the Selected fields list.
- 7. Select **Save**. The **XiOServiceNowSubscriptionKey** field is now shown in the **User** profile page, and the subscription key is populated automatically as long as ServiceNow is turned on in the XiO Cloud tenant.

NOTE: If ServiceNow is already turned on in the XiO Cloud tenant and the subscription key is not populating after completing the steps above, turn off the **Enable ServiceNow** toggle in XiO Cloud and then turn it back on. For more information, refer to Turn on ServiceNow Within XiO Cloud on page 202.

System Administrator [Self	f Service view]		1	Update Set Password
First name	System	Email	admin@example.com	
Last name	Administrator	Date format	System (yyyy-MM-dd)	
Business phone		Time zone	System (America/Los_Angeles)	
Mobile phone		XIOServiceNowSubscriptionKey	1de48c9f7ece43b683f5074fc0d788b3	
Title	System Administrator	♀		

Inbound Actions Setup

An new inbound action must be created and configured that includes a script for updating the XiO Cloud subscription key within the ServiceNow user profile page.

To create and configure the required inbound action:

1. Select **Inbound Actions** from the **System Policy** section of the right-hand navigation menu to display all inbound actions for the ServiceNow instance.

servicena	W. Service	Management								System Administrat	∝- ੨ ⊡ 💬 १
Tinbound action		⊗		nbound E	mail Actions New Search	Name 🔻 Şearc	h				1 to 19 of 19 🕨 🕨
ī	*	0		Y A	II.						
		Ŭ	<u>تې</u>	Q	■ Name ▲	■ Active	Event name	≡ Script	≡ Target table	≡ Updated	\equiv Execution Order
system Policy		_			Search	Search	Search	Search	Search	Search	Search
Email Inbound Actions				i	Appsec Domain Monitoring	true	email.read	(function runAction(/*GlideRecord*/ cur	Domain Monitoring [appsec_domain_result_set]	2020-08-26 15:00:14	10
				(j)	Close Incident XIO	true	email.read	(function runAction(/*GlideRecord*/ curr	incident [incident]	2022-08-16 08:06:56	1
				(j)	Create Incident	false	email.read	// Note: current.opened_by is already se	Incident [Incident]	2022-08-16 07:07:03	1
				(j)	Create Incident (Forwarded)	true	email.read	// Note: current.opened_by is already se	Incident [Incident]	2021-07-15 02:55:06	1
				(i)	Create Live Feed Like Reply	true	email.read	var lfUtil = new LlveFeedUtil(); var re	Message Liked by [live_message_like]	2014-11-21 00:36:00	1
				(j)	Create Live Feed Reply	true	email.read	var lfUtil = new LiveFeedUtil(); var rep	Live Feed Message [live_message]	2014-11-21 00:38:59	1
				(i)	Create XIO Incident	true	email.read	(function runAction(/*GlideRecord*/	Incident (incident)	2022-08-16 08:06:10	

2. Select **New** from the top of the inbound actions list. A page for configuring a new inbound action is displayed.

< Inbound Email Actions UpdateXIOSubscriptionKey			@ <u>‡</u> ••	• Update Delete
Inbound email actions specify how ServiceN the inbound action are met, the script is run.	iow creates or updates task records in a table when the instance receives an ema . <u>More Info</u>	il. The inbound email action looks for a wate	rmark in the email to associate it with a specific ta	sk. If the conditions specified in
Name	UpdateXIOSubscriptionKey	Application	Global	
Target table	User [sys_user]	Active	\checkmark	
Action type	Record Action 🗸	Stop processing		
When to run Actions Description				
Only emails of the selected Type will trigger	r this inbound action.	Only emails from senders with the Requi	red roles will trigger this inbound action.	
Туре	New	Required roles	/	
Order determines when to run relative to ot	ther inbound actions. The inbound action with the lowest order runs first.	Only emails from this sender will trigger	this inbound action.	
Execution Order	100	From	Q	
All of the following conditions must be true	e, to trigger this inbound action.			
Conditions	Add Filter Condition Add "OR" Clause			
	Subject V contains VIO	SubscriptionKey# AND OR	×	
Condition				
Update Delete				

- 3. Configure the following information for the inbound action:
 - Name: Enter "UpdateXiOSubscriptionKey" into the text field.
 - Target table: Select User [sys_user] from the drop-down menu.
 - Action type: Select Record Action from the drop-down menu.

- 4. Select the **When to run** tab (if is not already selected).
- 5. Create the following new condition: Subject / contains / XIO SubscriptionKey# / AND / OR.
- 6. Select the **Actions** tab.
- 7. Enter the script located within the Processing Script on page 215 topic into the **Script** text box.

Inbound Email Actions UpdateXIOSubscriptionKey			Ø 👬 👓	Update Delete
Inbound email actions specify how Servic the inbound action are met, the script is n		n the Instance receives an email. The Inbound email action looks for a wat	ermark in the email to associate it with a specific task	k. If the conditions specified in
Name	UpdateXIOSubscriptionKey	Application	Global	0
Target table	User [sys_user]	Active	\checkmark	
Action type	Record Action 🗸	Stop processing		
When to run Actions Description				
Fleld actions Script	/*EmailClassifier*/ classifier) 2 3 //Logic to parse Correlation 4 var rsubject = email.subject; 5 var keyword = "SubscriptionKey#"	<pre>Note of the second second</pre>	/*ScopedEmailLogger*/ logger,	

8. Select **Submit** to save the new inbound action. The **UpdateXiOSubscriptionKey** inbound action is added to the ServiceNow instance.

REST Message Setup

A REST message must be created and configured that invokes the XiO Cloud service when a user changes an incident status to **Closed** from the ServiceNow portal.

To create and configure the required REST message:

1. Select **Outbound** > **REST Message** from the **System Web Services** section of the right-hand navigation menu to display all REST messages for the ServiceNow instance.

Rest message	\otimes		REST Mess	sages New Search Name	▼ Search		44 4	1 to 9 of 9 🕨 🕨
e ★	()	<u></u>	Al	u				
System Web Services		¢ې	Q	■ Name	Description	≡ Endpoint	Application	■ Accessible from
•				Search	Search	Search	Search	Search
▼ Outbound REST Message			(j)	Crestron-XIO-CallBack-PreProd	Update manual Closed Insident Status In	https://pre-api.crestron.io/api/v2/servi	Global	This application scope only
neor measure			i	Crestron-XIO-HE1	Crestron-XIO updates to XIO incidents	https://he1-api.crestron.io/api/v2/servi	Global	This application scope only
			i	Crestron-XIO-Hqe	Crestron-XIO updates to XIO incidents	https://hqe-use-thirdpartyticketingsvc-a	Global	This application scope only
			(j	Crestron-XIO-IE1	Crestron-XIO updates to XIO incidents	https://ie1-api.crestron.io/api/v2/servi	Global	This application scope only
			í	Crestron-XIO-Ne1	Crestron-XIO updates to XIO incidents	https://ne1-api.crestron.io/api/v2/servi	Global	This application scope only
			í	Crestron-XIO-Prod	Crestron-XIO updates to XIO incidents	https://api.crestron.io/api/v2/serviceno	Global	This application scope only

2. Select **New** from the top of the REST messages list. A page for configuring a new REST message is displayed.

< REST Message New record				/ t	ooo Submit
★ Name	Crestron-XIO-Prod	Application	Global	0	
		Accessible from	This application scope only		
Description	Crestron-XIO updates to XIO incidents - Prod en	vironment			
★ Endpoint	https://api.crestron.io/api/v2/servicenowcallba	ick/ServicenowCallBack]	
Authentication HTTP Request					
REST Messages support the following • Basic authentication • Mutual (two-way authenticat • OAuth 2.0 Authentication configured on the RES <u>More info</u>	on)	Methods. Authentication configured on child HTTP Methods will	l override the parent configuration.		
Authentication type	No authentication	Use mutual authentication			
Submit					

- 3. Create the new REST message by entering the following information in the provided fields exactly as shown:
 - Name: Crestron-XIO-Prod
 - Description: Crestron-XIO updates to XIO incidents prod environment
 - Endpoint: https://api.crestron.io/api/v2/servicenowcallback/ServicenowCallBack
- 4. Select **Submit** to save the new REST message. The **Crestron-XIO-Prod** REST message is added to the ServiceNow instance.
- 5. Reopen the **Crestron-XIO-Prod** REST message.

Authentication HTTP Request		
REST Messages support the following Authen • Basic authentication • Mutual (two-way authentication) • OAuth 2.0		
Authentication configured on the REST Messa More info	ge will automatically apply to child HTTP M	ethods. Authentication configured on child HTTP Methods will override the parent configuration.
Authentication type No a	uthentication 🗸	Use mutual authentication
Update Delete		
HTTP Methods New Search for	r text 🔻 Search	✓ < 1 to 1 of 1 ▶ ▶▶ E
REST Message = Crestron-XIO-HE1		
 Q	GET	
Actions on selected rows		1 to 1 of 1 >>>

6. Under the **HTTP Methods** section, select the **Default Get** method. A page for editing the REST message method is displayed.

K HTTP Method Update Incident				l	≥ ‡ ∞	Update	Delete	^ ↓
REST Message * Name * HTTP method	Crestron-XIO-Prod Update Incident PUT ~	0	Application	Global		(
Endpoint Authentication HTTP Request	https://api.crestron.io/api/v2/servicenowe	callback/ServicenowCallBack						
Basic authenticationMutual (two-way authenticaOAuth 2.0	rt the following Authentication types: tion) TTP Method will override the parent REST Me	ssage configuration. If not specif	ed on the HTTP Method, then the p	arent REST Message cor	nfiguration will	be applied.		
Authentication type	No authentication		Use mutual authentication					
Update Delete								

- 7. Enter the following information for the HTTP method in the provided fields:
 - **Name**: Update Incident
 - HTTP Method: PUT
 - Endpoint: https://api.crestron.io/api/v2/servicenowcallback/ServicenowCallBack
 - Authentication type: No authentication
- 8. Select the HTTP Request tab.

K HTTP Method Update Incident					Ø	t	Update	Delete	\uparrow
REST Message	Crestron-XIO-Prod	(i)	Application	Global			0		
★ Name	Update Incident								
★ HTTP method	PUT ~								
Endpoint	https://api.crestron.io/api/v2/servicenow	callback/ServicenowCallBack							
Authentication HTTP Request									
Use MID Server	Q								
HTTP Headers					44	•	1 to 1 of 1		
ديً Mame ▲			≡ Value						
× (i) <u>Content-Type</u>			application/json						
+ Insert a new row									

- 9. Add the following new HTTP header:
 - **Name**: Content-Type
 - Value: application/json

10. Select **Update** to save the REST message.

Business Rule Setup

A business rule must be created and configured that includes a script for calling the REST message when an incident status is changed to **Closed** within the **Incident Table** in ServiceNow.

1. Select **Business Rules** from the **System Definition** section of the right-hand navigation menu to display all system definition business rules for the ServiceNow instance.

		Business R	New Search Name	▼ Search			≪ ≪ 1 t	● 100 of 4,026 ► ►►
	نې نې		I ■ Name ▲		≡ Table	■ Application	≡ Order	■ Updated
Activity Subscriptions	*22	Q	Search	Search	Search	Search	Search	Search
▼ Administration		(i)	Display: Fulfiller UI and Queues	true	Chat Setup [sys_cs_live_agent_setup]	Global	10	0 2020-03-23 00:00:32
Business Rules		(i)	<u>GTD Tour Name and Page Name</u> Validation	true	Guided Tour [sys_embedded_tour_guide]	Global	10	0 2020-07-27 22:40:07
Business Rules		(i)	80-20 split for the usage field	true	ML Labeled Data [ml_labeled_data]	Global	10	0 2021-10-13 09:48:24
System Definition		i	Able to disable parameterized testing	true	Test [sys_atf_test]	Global	10	0 2018-06-29 10:33:57
Business Rules		i	Abort CMDB Policy Type deletion	true	CMDB Policy Type [cmdb_policy_type]	Global	10	0 2021-10-28 18:24:30
System Diagnostics		i	Abort action if no license type	true	Software Model [cmdb_software_product_model]	Global	10	0 2012-04-03 19:35:58
▼ Session Debug Debug Business Rule		í	Abort Activation/Deactivation of topics	true	Topic [topic]	Global	10	0 2020-05-26 16:58:14
- Debug Business Rule (Details)		(j)	Abort adding more than one taxonomy	true	Portal Taxonomy [m2m_sp_portal_taxonomy]	Global	10	0 2021-03-29 01:40:35

2. Select **New** from the top of the business rules list. A page for configuring a new business rule is displayed.

K Business Rule Update XIO Prod upon Incident	Closure					⁄⁄ √	ŧ	000	Update	Delete	^
A business rule is a server-side script that ru	ins when a record is displayed, inserted, deleted, or v	when a table is queried.	Use business rules to automatically o	change value	s in form fields when the s	pecified cor	nditions	are met.	More Info		
Name	Update XIO Prod upon Incident Closure		Ap	oplication	Global				Ó		
Table	Incident [incident]			Active	\checkmark						
			,	Advanced	\checkmark						
When to run Actions Advanced											
Courte when the burley of a bould	run on Insert or Update. Use Filter Conditions to spec	-16									
Specify whether the business rule should i	run on insert or update. Use Filter Conditions to spec	city under which condition	ons the business rule should run.								
When	after 🗸			Insert							
Order	100			Update	\checkmark						
				Delete							
				Query							
Filter Conditions	Add Filter Condition Add "OR" Clause										
	State 🔻 cha	anges to 🗸 🗸	Closed	•	AND OR X						
Role conditions											
Role Conditions	V										
Update Delete											

- 3. Enter the following information for the business rule in the provided fields:
 - Name: Update XIO Prod upon Incident Closure
 - Table: Incident [Incident]
 - Application: Global
 - Active: Fill the check box
 - Advanced: Fill the check box
- 4. Populate the business rule data by selecting the **Advanced** tab and then adding the XML script located within the Business Rule Script on page 216 topic.
- 5. Select **Submit** to save the new business rule.

Test the Connection

To test that the incident closing behavior works as expected, create a new incident in ServiceNow, and then toggle the state from **New** to a different state and then back to **New**. A request for a new correlation ID will be generated. Then, update the incident with the new correlation ID and mark the incident as **Closed**. The incident should also be closed in XiO Cloud following this test.

Processing Script

The following script is used when configuring an inbound action to update the XiO Cloud subscription key within the ServiceNow user profile page. Refer to Inbound Actions Setup on page 210 for more information.

```
(function runAction(/*GlideRecord*/ current, /*GlideRecord*/ event, /*EmailWrapper*/ email,
/*ScopedEmailLogger*/ logger, /*EmailClassifier*/ classifier) {
    //Logic to parse Correlation ID
var rsubject = email.subject;
var keyword = "SubscriptionKey#";
var key = rsubject.indexOf(keyword); //Assuming this text would never change
if (key > 0) {
var myID = rsubject.substring(21);
    gs.log(myID);
}
    var myTask = new GlideRecord('sys user');
    var value ="admin";
myTask.addQuery("user_name", value);
myTask.query();
if (myTask.next()) {
    //myTask.u_xiosubscriptionkey = myID;
    myTask.u_xioservicenowsubscriptionkey = myID;
    gs.log('Task Completed');
    myTask.update();
} else {
// No match found so log an error
    gs.info('No Match found');
}
})(current, event, email, logger, classifier);
```

Business Rule Script

The following script is used when creating a new business rule to set the incident closing behavior. Refer to Business Rule Setup on page 214 for more information.

```
(function executeRule(current, previous /*null when async*/) {
    var myTask = new GlideRecord('sys_user');
    var value ="admin";
myTask.addQuery("user_name", value);
myTask.query();
if (myTask.next()) {
    var XiOSubscriptionKey = myTask.getValue('u_xioservicenowsubscriptionkey');
    gs.log('Task Completed');
} else {
// No match found so log an error
    gs.info('No Match found');
}
    try {
        if (XiOSubscriptionKey) {
            var incObj = {
                sys id: current.getUniqueValue(),
                state: current.getDisplayValue('state'),
                short_description: current.getValue('short_description'),
                number: current.getDisplayValue('number'),
                assignment_group: current.getDisplayValue('assignment_group'),
                assigned_to: current.getDisplayValue('assigned_to'),
                correlation_id: current.getValue('correlation_id'),
                XiO_subscription_key: XiOSubscriptionKey,
            };
            try {
                var xioRequest = new sn_ws.RESTMessageV2('Crestron-XIO-Prod', 'Update Incident');
//Specific name of the Rest Endpoint
                xioRequest.setRequestBody(JSON.stringify(incObj));
                xioRequest.setRequestHeader("XiO-subscription-key",XiOSubscriptionKey);
                var response = xioRequest.execute();
                var responseBody = response.getBody();
                var httpStatus = response.getStatusCode();
                gs.addInfoMessage(responseBody); //Remove upon conclusion of testing
            } catch (ex) {
                var message = ex.message;
                gs.error("Unexpected error encountered during XIO Update Incident. " + message);
            }
        }
    } catch (e) {
        gs.error("Unexpected error encountered during XIO Token Request. " + e.message);
    }
})(current, previous);
```

Additional Resources

The following resources are provided to assist users with implementing this functionality.

- ServiceNow Paris Platform Documentation
- ServiceNow Development Documentation
- ServiceNow Inbound Action Documentation
- ServiceNow Community Form
- JavaScript Documentation

Appendix B: User Access Matrix

The following table shows the tasks that can be performed for different user access levels.

Task	Global Admin	Standard User	Standard User (Admin)	Standard User (Tech)	Standard User (Viewer)	Standard User (Hidden)
View devices in device tree	~	Use groups	~	~	~	×
View Status tab	~	Use groups	~	~	~	×
View Settings tab	~	Use groups	~	~	~	×
View Licenses tab	~	Use groups	~	~	~	×
View Activity Log tab	~	Use groups	~	~	~	×
View Dashboard tab	~	Use groups	~	~	~	×
View Scheduled Actions tab	~	Use groups	~	~	~	×
View File Management tab	~	Use groups	✓	~	✓	×
View Remote Control tab	~	Use groups	~	~	×	×
Change device or group settings	~	Use groups	~	~	×	×
Add or remove licenses on devices	~	Use groups	✓	~	×	×
Create scheduled actions	~	Use groups	~	~	×	×
Control devices remotely	~	Use groups	~	~	×	×
Load a file to a device slot	~	Use groups	~	~	×	×
Start/stop or register/unregister a device program	~	Use groups	~	~	×	×
Update firmware	~	Use groups	~	~	×	×
Reboot devices	~	Use groups	~	~	×	×
Clear alerts	~	Use groups	~	~	×	×

Task	Global Admin	Standard User	Standard User (Admin)	Standard User (Tech)	Standard User (Viewer)	Standard User (Hidden)
Add devices to a group	~	Use groups	~	~	×	×
Rename a group	~	Use groups	~	~	×	×
Delete a group	~	Use groups	~	~	×	×
Add or modify program and project files	~	Use groups	~	~	×	×
Change user access to a group	~	×	N/A	N/A	N/A	N/A
Add subgroups	~	Use groups	~	×	×	×
Add top-level groups	~	×	N/A	N/A	N/A	N/A
Claim devices	~	×	N/A	N/A	N/A	N/A
Download inventory	~	×	N/A	N/A	N/A	N/A
Add alerts	~	×	N/A	N/A	N/A	N/A
Enable remote control functionality	~	×	N/A	N/A	N/A	N/A
Invite new users	~	×	N/A	N/A	N/A	N/A
Delete users	~	×	N/A	N/A	N/A	N/A
Change user roles	~	×	N/A	N/A	N/A	N/A
Change user profile information	✔ (any user)	✔ (for self)	N/A	N/A	N/A	N/A
Change alerts received by a user	✔ (any user)	✔ (for self)	N/A	N/A	N/A	N/A
View cloud activity logs	~	Use groups	~	~	~	×
Request device logs	~	Use groups	✓	~	×	×
View downloaded device logs	~	Use groups	~	~	~	×
Modify alerts	~	×	N/A	N/A	N/A	N/A
Modify account settings	~	×	N/A	N/A	N/A	N/A
Modify services (room licensing)	~	×	N/A	N/A	N/A	N/A
Modify support providers	~	×	N/A	N/A	N/A	N/A

Task	Global Admin	Standard User	Standard User (Admin)	Standard User (Tech)	Standard User (Viewer)	Standard User (Hidden)
Manage files	~	X (read only)	N/A	N/A	N/A	N/A
Manage EDIDs	~	X (read only)	N/A	N/A	N/A	N/A
Manage images	~	X (read only)	N/A	N/A	N/A	N/A
Add users	~	×	N/A	N/A	N/A	N/A
Delete users	~	×	N/A	N/A	N/A	N/A
Reset user account password	✔ (any user)	✔ (for self)	N/A	N/A	N/A	N/A
Power on/off (displays)	~	Use groups	~	~	~	×
Power on/off (PDUs)	~	Use groups	~	~	~	×
Source routing	~	Use groups	~	~	~	×

Appendix C: XiO Cloud Program Connector Sources

The following **Current Source** icons and descriptions can be displayed via the **Room Control** card when using the XiO Cloud Program Connector functionality. For more information, refer to XiO Cloud Program Connector on page 57.

Source Type	Source Descriptions	lcon
AirMedia® streaming presentation system	AirMedia AirMedia [1–9] AirMedia Conferencing AirMedia Conferencing [1–9] AirMedia Presenting AIrMedia Presenting [1–9]	[4
Apple TV® streaming service	Apple TV Apple TV [1–9]	útv 5
Blu-ray Disc™ player	Blu-ray Player Blu-ray Player [1–9]	
Camera	Camera Camera [1–9] Front Camera Back Camera Side Camera	٥
Cable Box	Cable Box Cable Box [1–9]	-
Document Camera	Document Camera Document Camera [1–9] Front Document Camera Back Document Camera Side Document Camera	
HDMI® output	HDMI HDMI [1–9] Front HDMI Back HDMI Side HDMI	D
Laptop	Laptop Laptop [1–9] Front Laptop Back Laptop Side Laptop	

Source Type	Source Descriptions	lcon
Media Player	Media Player	
	Media Player [1–9]	
Microsoft Teams® video conferencing	Microsoft Teams	Ţij
PC	PC	
	PC [1–9]	
	Front PC	
	Back PC	
	Side PC	
Roku® streaming service	Roku	Roku
	Roku [1–9]	
Streaming Player	Streaming Player	((0))
	Streaming Player [1–9]	
TV Set Top Box	TV Set Top Box	
	TV Set Top Box [1–9]	•••
Uncontrolled Audio Source	Uncontrolled Audio Source	<i>.</i>
	Uncontrolled Audio Source [1–9]	()
Uncontrolled Video Source	Uncontrolled Video Source	
	Uncontrolled Video Source [1–9]	
Unified Communications	Unified Communications	
USB output	USB	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~
	USB [1–9]	●
	Front USB	-
	Back USB	
	Side USB	
Video Conferencing	Video Conferencing	
Wireless Presenting	Wireless Presenting	
	Wireless Presenting [1–9]	$\widehat{}$
Zoom Rooms [®] conferencing control	Zoom Rooms	○○

Crestron Electronics, Inc. 15 Volvo Drive, Rockleigh, NJ 07647 Tel: 888.CRESTRON Fax: 201.767.7656 www.crestron.com