# Crestron TMK-1000L & WMKT-1000L Trim Ring Mount Kits

**Installation Guide** 





This document was prepared and written by the Technical Documentation department at:



Crestron Electronics, Inc. 15 Volvo Drive Rockleigh, NJ 07647 1-888-CRESTRON

# **Contents**

Trim Ring Mount Kits: TMK-1000L & WMKT-1000L	1
Description	
Setup	
Supplied Hardware	
Installation	
Resources	
Industry Compliance	10
Reference Documents	10
Further Inquiries	10
Future Updates	
Return and Warranty Policies	
Merchandise Returns / Repair Service	
*	1

# Trim Ring Mount Kits: TMK-1000L & WMKT-1000L

# **Description**

Trim Ring Mount Kits are the preferred method of mounting the Crestron<sup>®</sup> APAD LCD controller when a finished appearance within a neatly trimmed cutout is required. This application is perfect for wallpapering.

**NOTE:** If mounting into a material other than drywall (for example, wood lectern, concrete, or rock) use the cutout template, available in the post-construction kit WMKT-1000L. For concrete and rock mounting material, allow for proper ventilation before mounting the controller.

There are two Trim Ring Mount Kits. The TMK-1000L is a pre-construction accessory. Pre-construction refers to framed walls prior to hanging drywall. This accessory must be used with either the Pre-Construction Mount Kit (PMK-1000L) or Back Box (BB-1000L).

The WMKT-1000L is a post-construction kit. Post-construction refers to framed walls with drywall hung. This accessory is designed with a mounting plate so that it can be placed anywhere on a wall without the support of a stud. The mounting plate is also ideal for installing the controller in a lectern.

**NOTE:** If necessary, consult the latest revision of the APAD Installation and Operations Guide (Doc. 6455) for a complete list of mounting options. The document is available from the Crestron website (<a href="http://www.crestron.com/manuals">http://www.crestron.com/manuals</a>).

# Setup

## **Supplied Hardware**

The TMK-1000L consists of a metal trim ring that attaches to the BB-1000L or PMK-1000L. The WMKT-1000L consists of the trim ring found in the TMK-1000L as well as a mounting plate.


The mounting plate provides the necessary support for post-construction applications. Two overlay cutout templates (2005028) are supplied. One is in the shape of the required opening; the other is similar to a frame, with the inner area of the frame the shape of the required opening. (Refer to the illustrations on pages 3 and 4.) Use the template that is most convenient.

Supplied Hardware for the TMK-1000L and WMKT-1000L

DESCRIPTION	PART NUMBER	QUANTITY
Metal, Plate, Trim Ring	2004809	1
Metal, Plate, Mounting (WMKT-1000L only)	2004807	1
Screw, #04-40 x 2", Pan, Phil (WMKT-1000L only)	2018793	4
Overlay, Template, Wall Cutout (WMKT-1000L Only)	2005028	1

The dimensions of the TMK-1000L/WMKT-1000L are shown below and on the next page.

#### Dimensional Drawing - Trim Ring

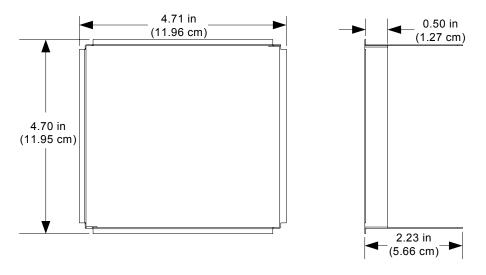


00


# Dimensional Drawing – Mounting Plate 5.91 in (15.00 cm) 0.06 in (0.16 cm)

5.77 in (14.66 cm)

Drywall Cutout Template and Dimensions (supplied with WMKT-1000L only), 1 of 2

00

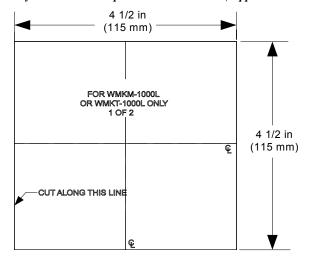

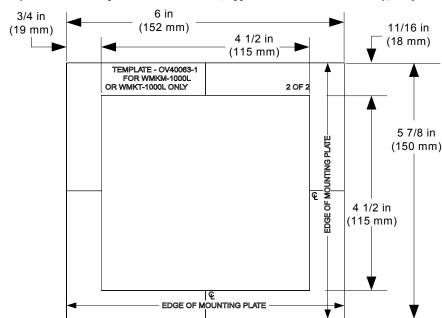

#### Drywall Cutout Template and Dimensions (supplied with WMKT-1000L only), 2 of 2

#### Installation

This section provides an installation procedure for each Trim Ring Mount Kit. The "TMK-1000L Procedure" starts below and the "WMKT-1000L Procedure" starts on page 6. Be sure to review each procedure before starting.

#### TMK-1000L Procedure

This section provides the necessary steps for the assembly of the TMK-1000L with either the BB-1000L or PMK-1000L. It is assumed that the BB-1000L or PMK-1000L has been secured to the stud according to the instructions in the latest revisions of their Installation Guides (Doc. 6060 and Doc. 6061 respectively). It is also assumed that drywall is in place and a rectangular cutout for the controller is made in the drywall.


Complete the steps in the order provided. The only tool required and not supplied is a level.

CAUTION: Allow an air gap of at least 12 inches (30.48 cm) in the wall cavity above and below the controller for heat dissipation.

**NOTE:** When installing into the PMK-1000L, verify that the 18 AWG bus wire securing the cables for the controller remains attached.


- 1. Verify that the rectangular cutout in the drywall is as level as possible.
- 2. Insert the symmetrical trim ring into the opening, as shown in the illustration on the following page.

#### Insert Trim Ring into Opening

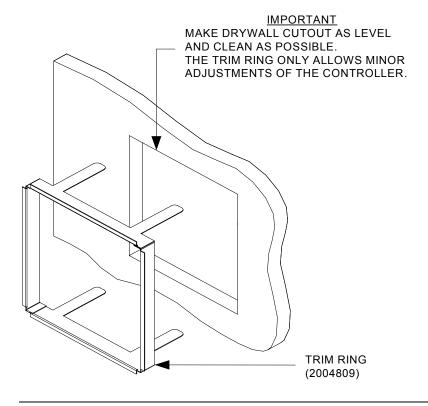

**NOTE:** The required PMK-1000L or BB-1000L is not shown.

- 3. When the trim ring is in position, bend the top two flanges of the ring upward and the bottom two flanges downward.
  - If mounting into the PMK-1000L, bend the flanges approximately 90 degrees.
  - If mounting into the BB-1000L, bend the flanges back as far as they can go
- 4. Run the necessary cables for the controller and secure them behind the drywall.
- 5. The controller can be installed using the four tapped holes in the PMK-1000L or BB-1000L. Refer to the latest revision of the APAD Installation and Operations Guide (Doc. 6455) for details. Refer also to the comprehensive illustration on the following page.

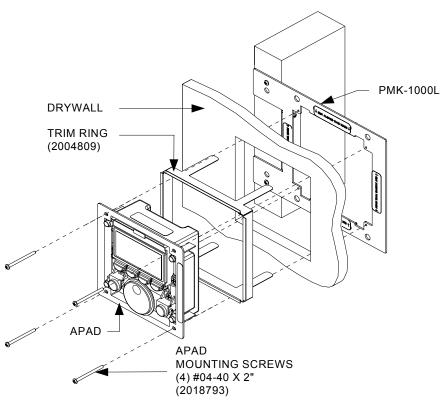

#### Controller Mounting Using TMK-1000L - Exploded View

#### WMKT-1000L Procedure

This section provides the necessary steps for the assembly and installation of the WMKT-1000L into a wall. Review the procedure and complete the steps in the order provided. The only tools or materials required and not supplied are a drywall saw or equivalent and a level.


CAUTION: Allow an air gap of at least 12 inches (30.48 cm) in the wall cavity above and below the controller for heat dissipation.

- 1. Locate an area on the wall that is free of miscellaneous wiring and studs.
- 2. Make a small hole near the middle of the designated site; verify that the location is suitable.

**NOTE:** Make the cutout as level and smooth as possible. The mounting plate allows for only minor leveling adjustments. If a larger cutout is made accidentally, consider purchasing the Crestron Mud Mount Kit, MMK-1000L. Together with the mounting plate supplied with the WMKT-1000L, it provide a cost-effective means of correction. Essentially, the combination of these two kits makes up the Crestron Mud Mount Kit for the wall, WMKM-1000L. Simply follow the "WMKM-1000L Procedure" in the latest revision of the Mud Mount Kits Installation Guide (Doc. 6062).

- 3. Use the drywall saw or equivalent to produce a level, rectangular cutout in the drywall as shown on page 3 or 4.
- 4. Insert the trim ring into the opening, as shown in the illustration on the following page.


#### Insert Trim Ring into Opening

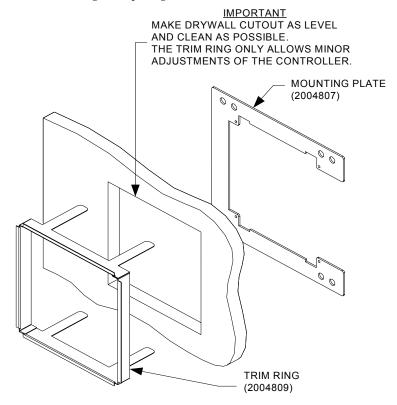

- 5. Carefully pass the mounting plate through the opening and hold it against the interior surface of the drywall.
- 6. When the mounting plate is in position, bend the top two flanges of the trim ring upward (approximately 90 degrees) and the bottom two flanges downward (approximately 90 degrees). Refer to the illustration on the following page.


**NOTE:** The mounting plate will have a slight play; this is normal. It allows for minor adjustments to the controller during installation.



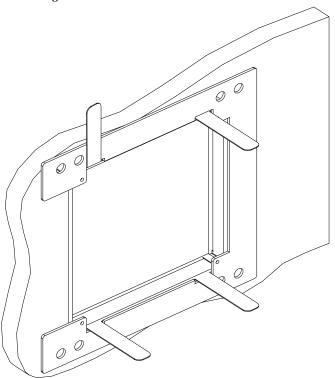

- 7. Run the necessary cables for the controller and secure them behind the drywall.
- 8. The controller can be installed using the four tapped holes in the mounting plate. Refer to the latest revision of the APAD Installation and Operations Guide (Doc. 6455) for details. Refer also to the comprehensive illustration on the following page.

#### Controller Mounting Using WMKT-1000L - Exploded View

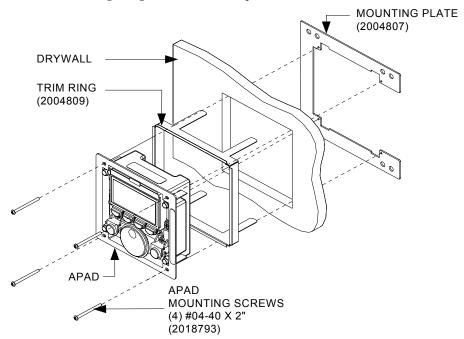

## Resources

#### **Industry Compliance**

As of the date of manufacture, the TMK-1000L and WMKT-1000L have been tested and found to comply with specifications for CE marking.



#### **Reference Documents**

The latest version of all documents mentioned within the guide can be obtained from the Crestron website (<a href="www.crestron.com/manuals">www.crestron.com/manuals</a>). This link will provide a list of product manuals arranged in alphabetical order by model number.

List of Related Reference Documents

-
DOCUMENT TITLE
APAD Wall Mount LCD Controller
BB-1000L Back Box
MMK-1000L and WMKM-1000L Mud Mount Kits
PMK-1000L Pre-Construction Mounting Kit

#### **Further Inquiries**

If you cannot locate specific information or have questions after reviewing this guide, please take advantage of Crestron's award winning customer service team by calling the Crestron corporate headquarters at 1-888-CRESTRON [1-888-273-7876]. For assistance in your local time zone, refer to the Crestron website (www.crestron.com/offices) for a listing of Crestron worldwide offices.

You can also log onto the online help section of the Crestron website (<a href="www.crestron.com/onlinehelp">www.crestron.com/onlinehelp</a>) to ask questions about Crestron products. First-time users will need to establish a user account to fully benefit from all available features.

## **Future Updates**

As Crestron adds improvements to the TMK-1000L and WMKT-1000L, additional information may be made available as manual updates. These updates are solely electronic and serve as intermediary supplements prior to the release of a complete technical documentation revision.

Check the Crestron website periodically for manual update availability and its relevance. Updates are identified as an "Addendum" in the Download column.

# **Return and Warranty Policies**

#### Merchandise Returns / Repair Service

- No merchandise may be returned for credit, exchange or service without prior authorization
  from CRESTRON. To obtain warranty service for CRESTRON products, contact an
  authorized CRESTRON dealer. Only authorized CRESTRON dealers may contact the factory
  and request an RMA (Return Merchandise Authorization) number. Enclose a note specifying
  the nature of the problem, name and phone number of contact person, RMA number and
  return address.
- 2. Products may be returned for credit, exchange or service with a CRESTRON Return Merchandise Authorization (RMA) number. Authorized returns must be shipped freight prepaid to CRESTRON, 6 Volvo Drive, Rockleigh, N.J. or its authorized subsidiaries, with RMA number clearly marked on the outside of all cartons. Shipments arriving freight collect or without an RMA number shall be subject to refusal. CRESTRON reserves the right in its sole and absolute discretion to charge a 15% restocking fee plus shipping costs on any products returned with an RMA.
- 3. Return freight charges following repair of items under warranty shall be paid by CRESTRON, shipping by standard ground carrier. In the event repairs are found to be non-warranty, return freight costs shall be paid by the purchaser.

#### **CRESTRON Limited Warranty**

CRESTRON ELECTRONICS, Inc. warrants its products to be free from manufacturing defects in materials and workmanship under normal use for a period of three (3) years from the date of purchase from CRESTRON, with the following exceptions: disk drives and any other moving or rotating mechanical parts, pan/tilt heads and power supplies are covered for a period of one (1) year; touchscreen display and overlay components are covered for 90 days; batteries and incandescent lamps are not covered.

This warranty extends to products purchased directly from CRESTRON or an authorized CRESTRON dealer. Purchasers should inquire of the dealer regarding the nature and extent of the dealer's warranty, if any.

CRESTRON shall not be liable to honor the terms of this warranty if the product has been used in any application other than that for which it was intended or if it has been subjected to misuse, accidental damage, modification or improper installation procedures. Furthermore, this warranty does not cover any product that has had the serial number altered, defaced or removed.

This warranty shall be the sole and exclusive remedy to the original purchaser. In no event shall CRESTRON be liable for incidental or consequential damages of any kind (property or economic damages inclusive) arising from the sale or use of this equipment. CRESTRON is not liable for any claim made by a third party or made by the purchaser for a third party.

CRESTRON shall, at its option, repair or replace any product found defective, without charge for parts or labor. Repaired or replaced equipment and parts supplied under this warranty shall be covered only by the unexpired portion of the warranty.

Except as expressly set forth in this warranty, CRESTRON makes no other warranties, expressed or implied, nor authorizes any other party to offer any warranty, including any implied warranties of merchantability or fitness for a particular purpose. Any implied warranties that may be imposed by law are limited to the terms of this limited warranty. This warranty statement supersedes all previous warranties.

#### **Trademark Information**

All brand names, product names and trademarks are the sole property of their respective owners. Windows is a registered trademark of Microsoft Corporation. Windows95/98/Me/XP/Vista and WindowsNT/2000 are trademarks of Microsoft Corporation.

